



# 2003-2008 Toyota Corolla Headlight Bulb Replacement

Learn how to replace the headlight bulb in a 2008 Toyota Corolla.

Written By: Frederick Henderson



## INTRODUCTION

Are your headlights giving you trouble and need to replace them? This guide will show you how to easily replace those malfunctioning lights.



### PARTS:



- 9006 Halogen Headlight Bulb 2 Pack (1)

## Step 1 — Headlight Bulb



- Locate the handle to open the hood. It will be on the driver side of the car to the left.
- Pull up on the handle and the hood should pop open a small amount.

## Step 2

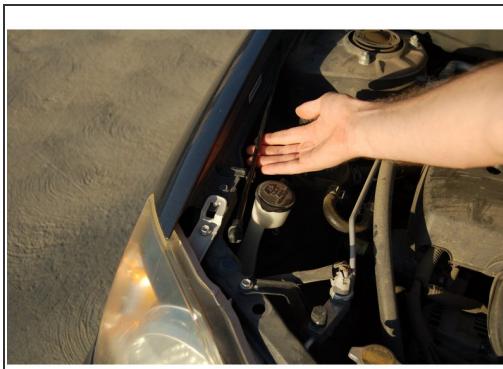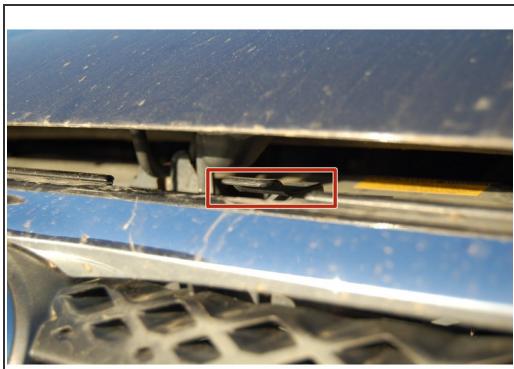


- Reach under the hood in the front where there is a small notch and pull the latch up. This will allow the hood to open all the way.
- Locate the prop and insert it into the hole in the hood.

## Step 3



- Locate the bulb. It will be in the front and to the side. Start with the side opposite from the battery.



## Step 4

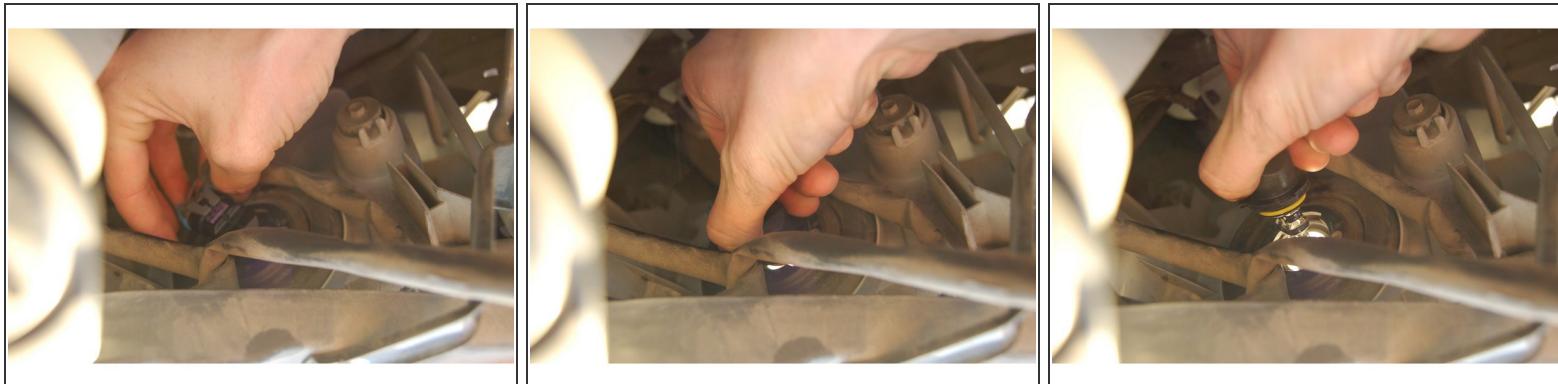

- Twist assembly 45 degrees counter clockwise and pull straight out.



**⚠** Be careful not to touch the glass on the new bulb. The oils from your hand could cause premature bulb failure.

## Step 5

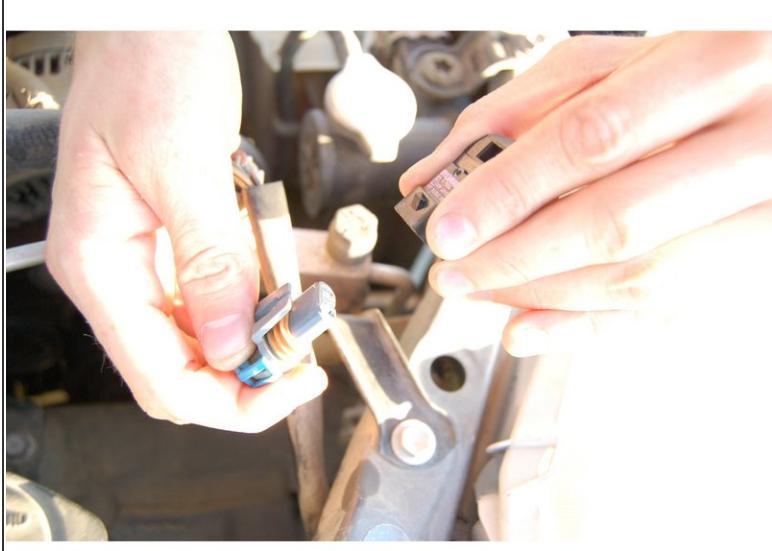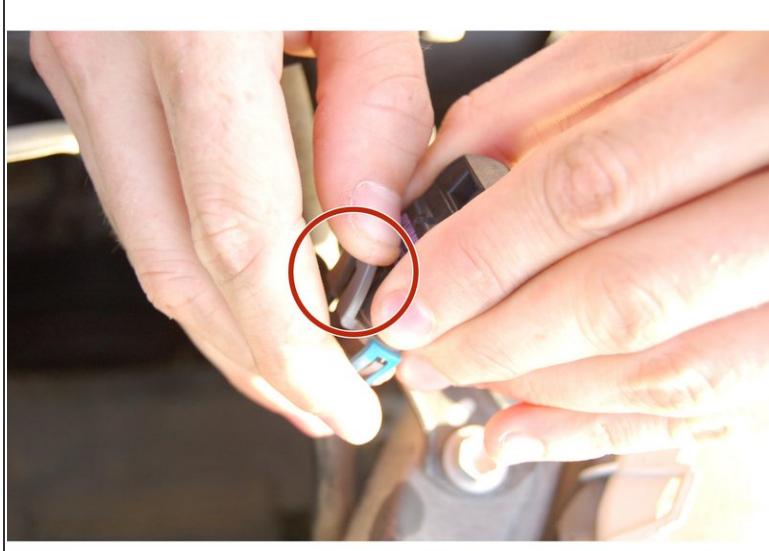

- Lift up on the latch and pull. The bulb will come free from the wires.

## Step 6

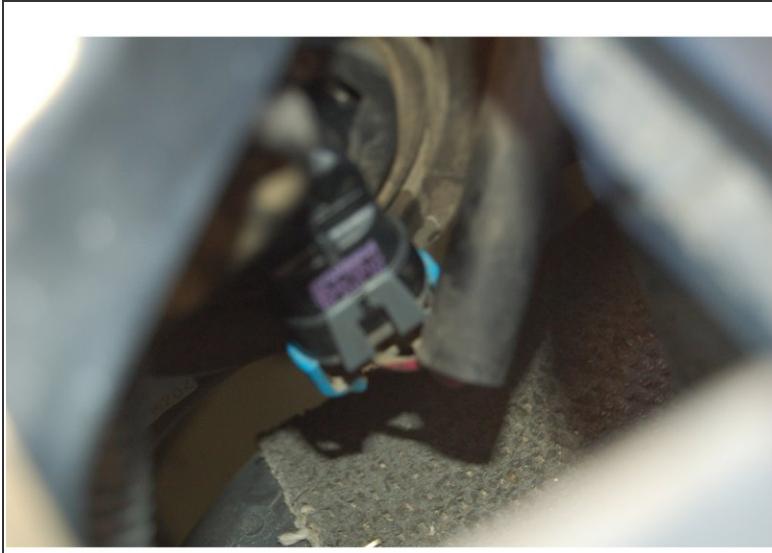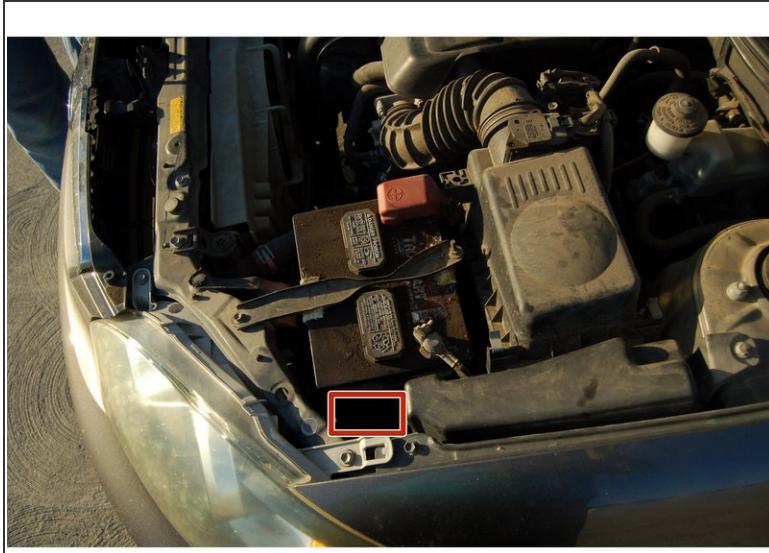

- Locate the other bulb, and repeat steps 3-5 to remove it.

To reassemble your device, follow these instructions in reverse order.