




# 2004-2008 Mazda RX-8 Fuse Replacement

We will be replacing the fuse, which is important for your car's electric functionality.

Written By: Michael Wolfe

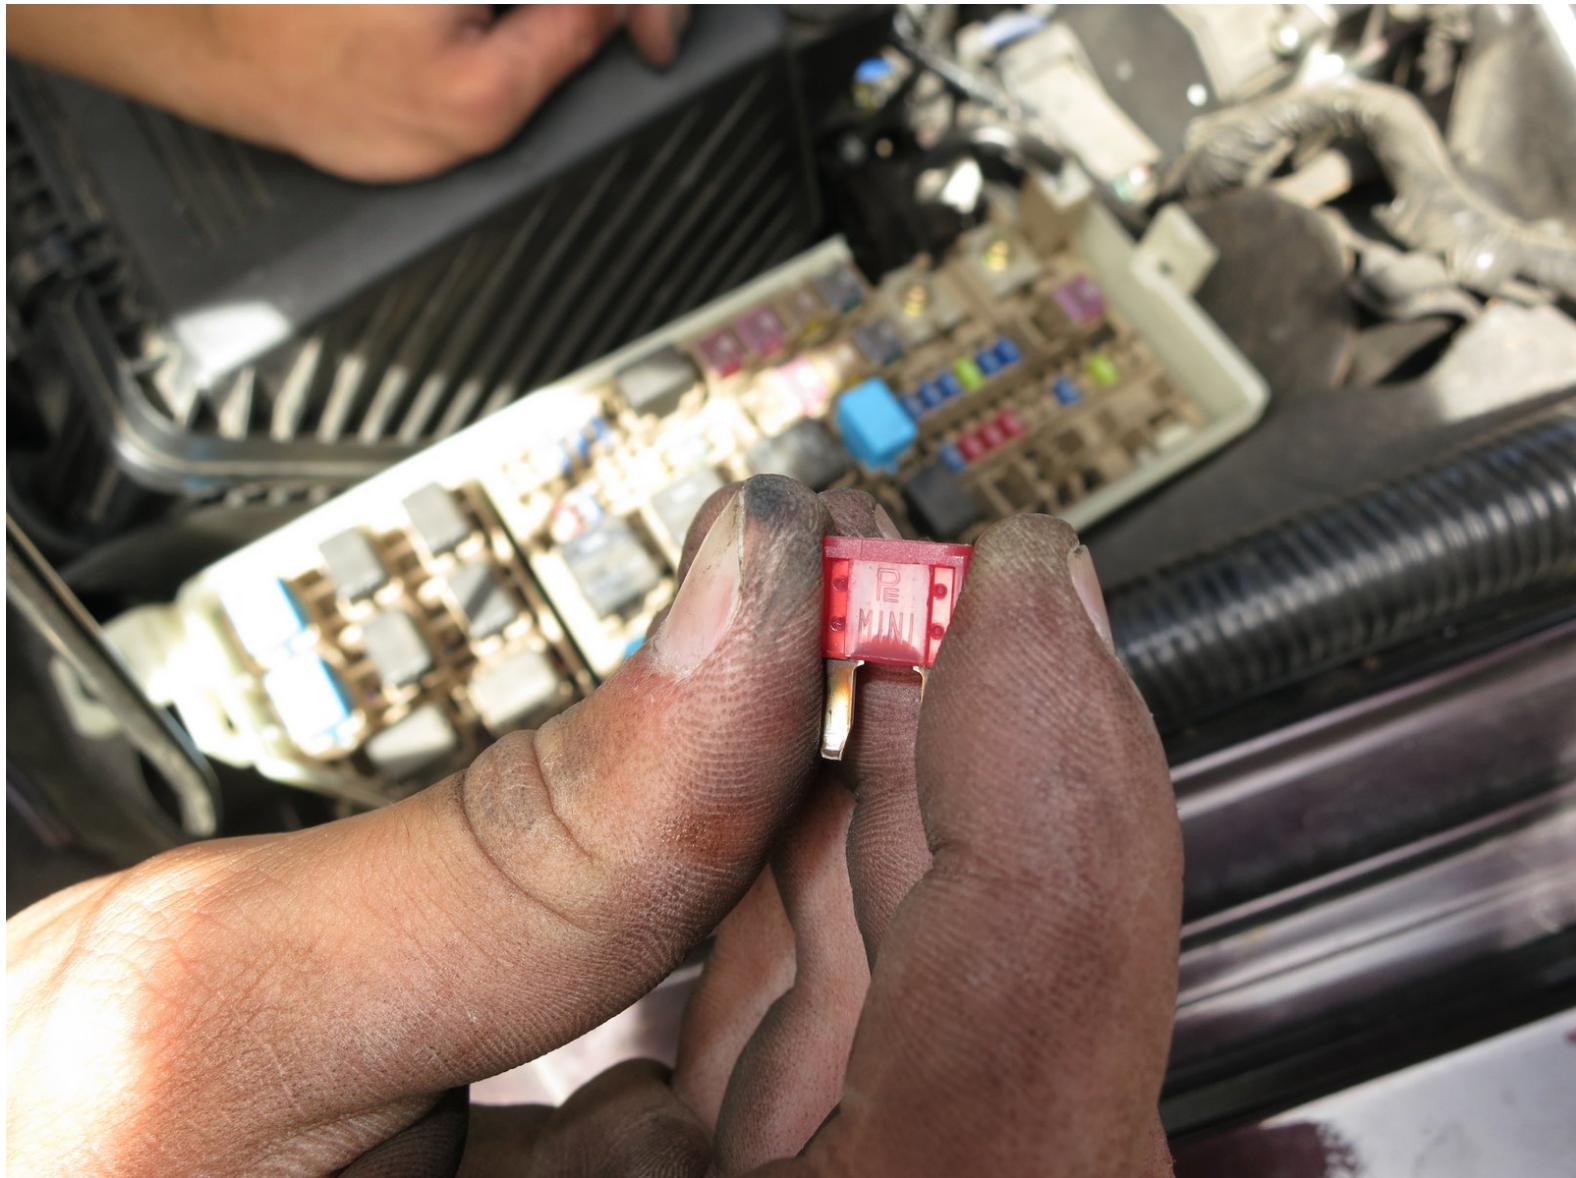

 **TOOLS:**

- [Fuse Box Tool \(1\)](#)

 **PARTS:**



- [fuse \(1\)](#)

## Step 1 — Fuse




- Locate the fuse box holder near the driver's side headlight.
- Remove the cover by lifting the black tabs on the sides.

## Step 2

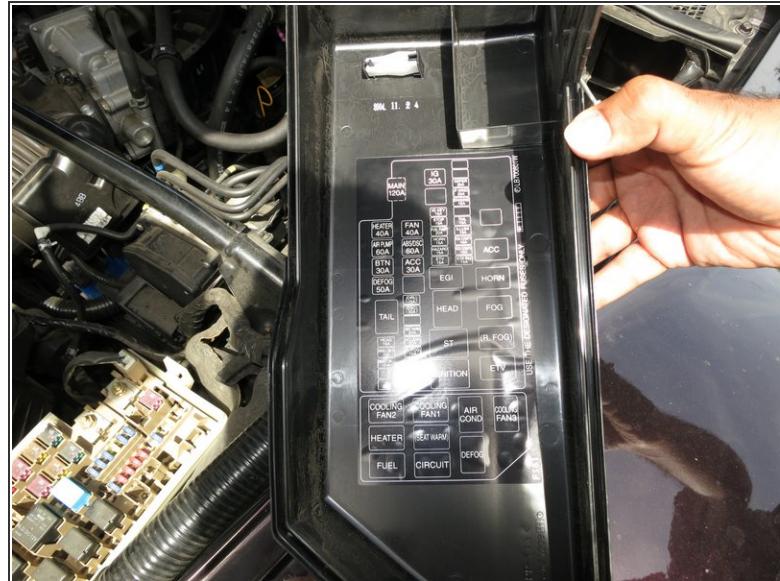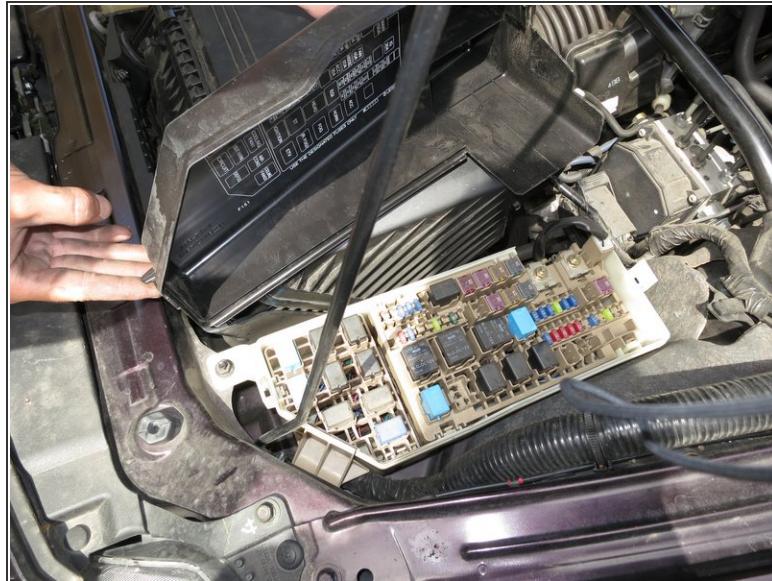


- Remove the cover.
- There will be a fuse map on the underside of the cover.

## Step 3

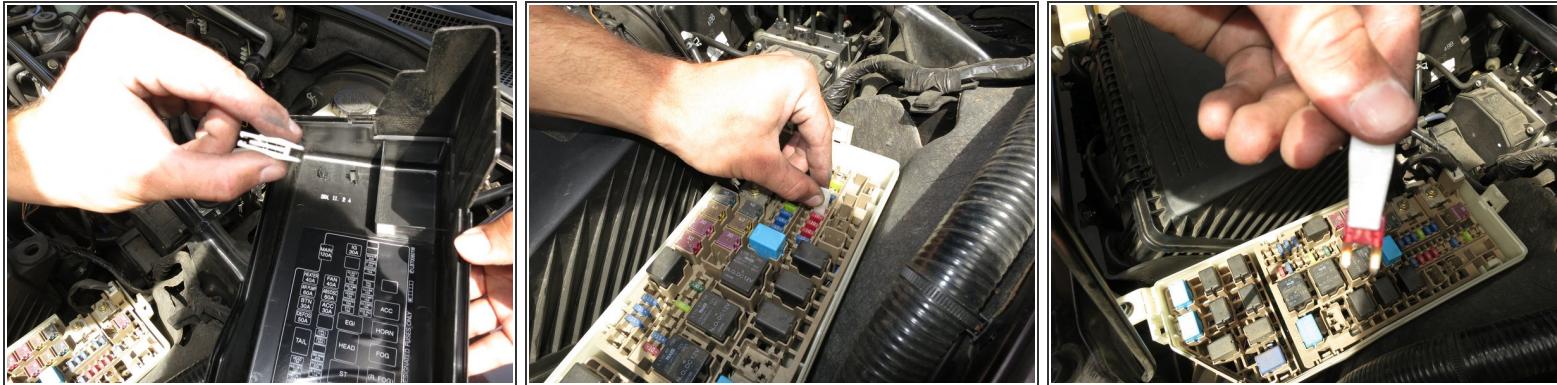

- Use the tool that is inside the fuse box to remove the necessary fuse.
- Use the fuse guide on the inside of the fuse cover, along with the nature of the electrical problem to help quickly find the faulty fuse

## Step 4

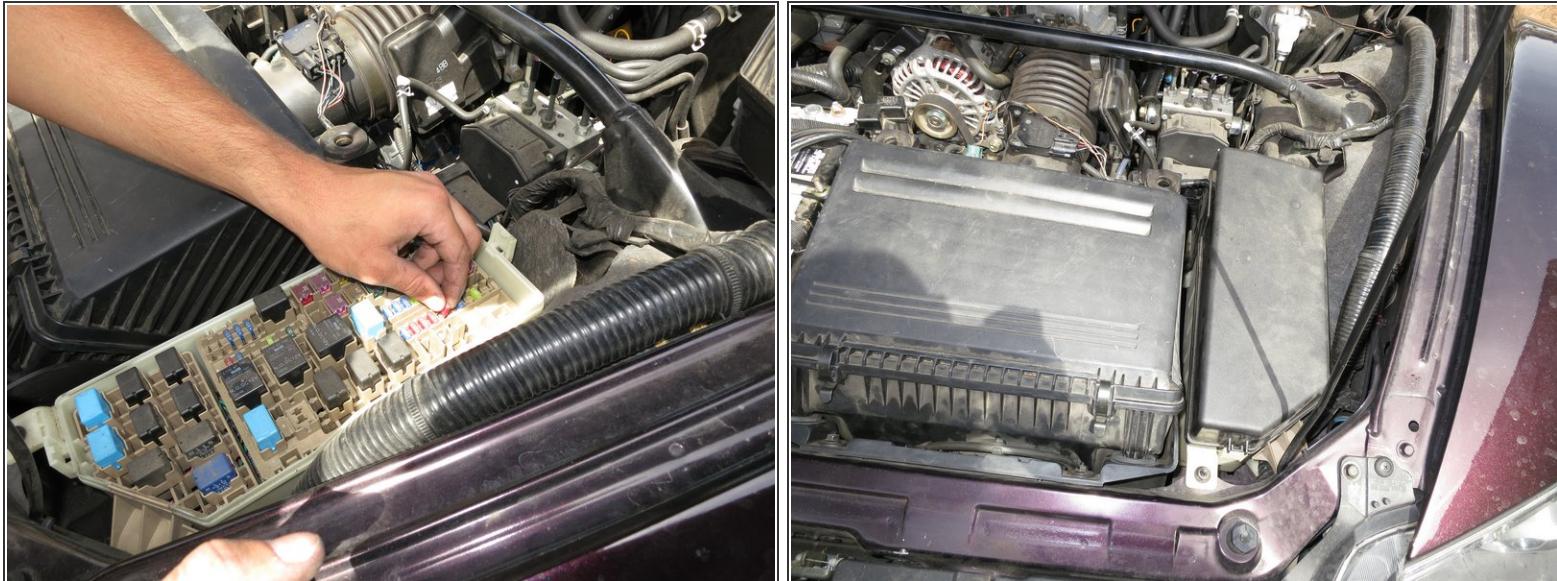

- Replace the bad fuse with a new one.
- Put the fuse box cover back on and secure the tabs on the side.