



2005-2012 Acura RL Oil and Oil Filter Replacement

A video tutorial on how to change the engine oil and filter on your 2005-2012 Acura RL.

Written By: eCuration



INTRODUCTION

The engine oil and oil filter should be replaced every 5,000 miles.

Follow this video tutorial by YouTuber [ez](#) to complete the replacement yourself.

TOOLS:

- Hydraulic Floor Jack (1)
- Jack Stand (1)
- Oil Drain Pan (1)
- Long Neck Funnel (1)
- Oil Filter Wrench (1)
- Paper Towels (1)

PARTS:

- 5W-20 Motor Oil (5)
- Oil Filter Acura RL 2005-2012 (1)

To reassemble your device, follow these instructions in reverse order.