




2005-2012 Acura RL Rear Differential Fluid Replacement

A video tutorial on how to change the rear differential assembly fluid for a 2nd generation Acura RL sedan (2005-2012).

Written By: eCuration

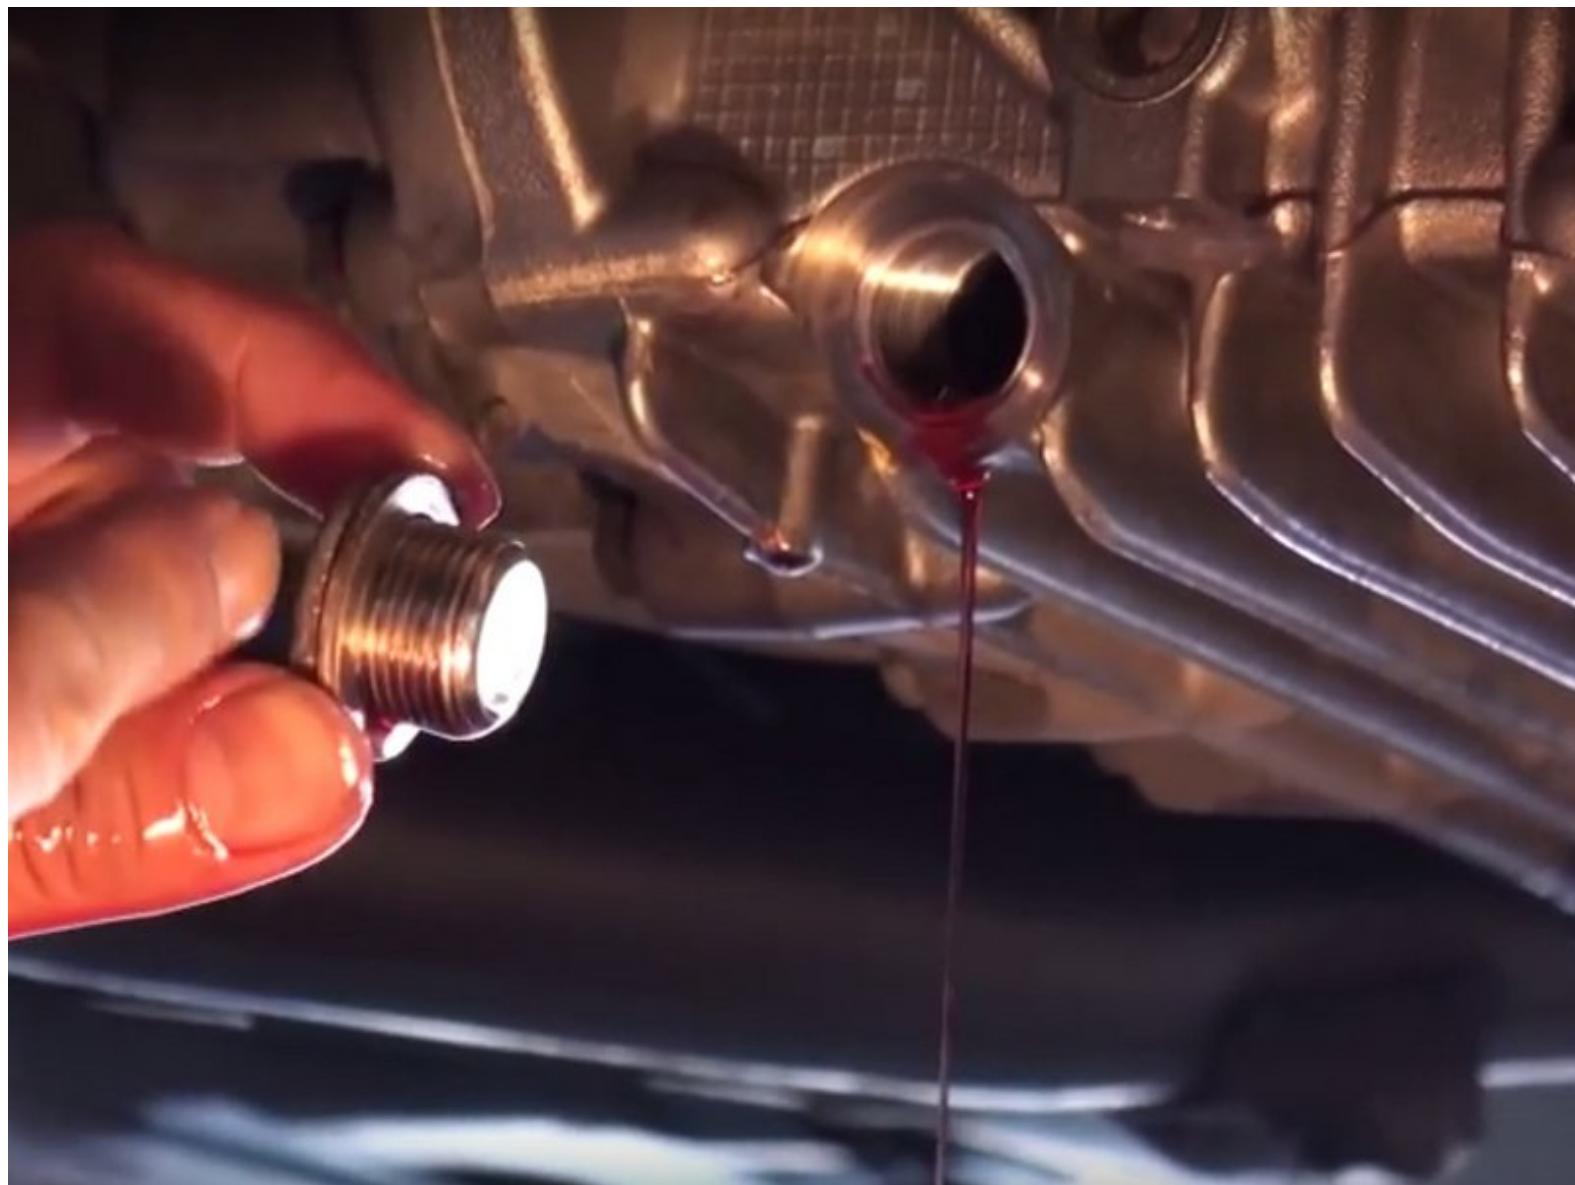

This document was generated on 2019-10-11 08:55:09 AM (MST).

INTRODUCTION

Procedure on how to replace the rear differential assembly fluid for a 2nd generation Acura RL sedan (2005-2012).

It is EXTREMELY important to use the newly designed Acura DPSF fluid and no other substitute otherwise unpredictable damage can occur from using the wrong fluid type.

TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Oil Drain Pan](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [Long Neck Funnel](#) (1)
- [Fluid Hand Pump](#) (1)
- [Paper Towels](#) (1)

PARTS:

- [Acura All-Wheel Drive Fluid \(DPSF\)](#) (4 Quart)

To reassemble your device, follow these instructions in reverse order.