




2006-2011 Honda Civic Engine Air Filter Replacement

A video tutorial on how to change the old worn out engine air filter on a 2006-2011 Honda Civic.

Written By: eCuration

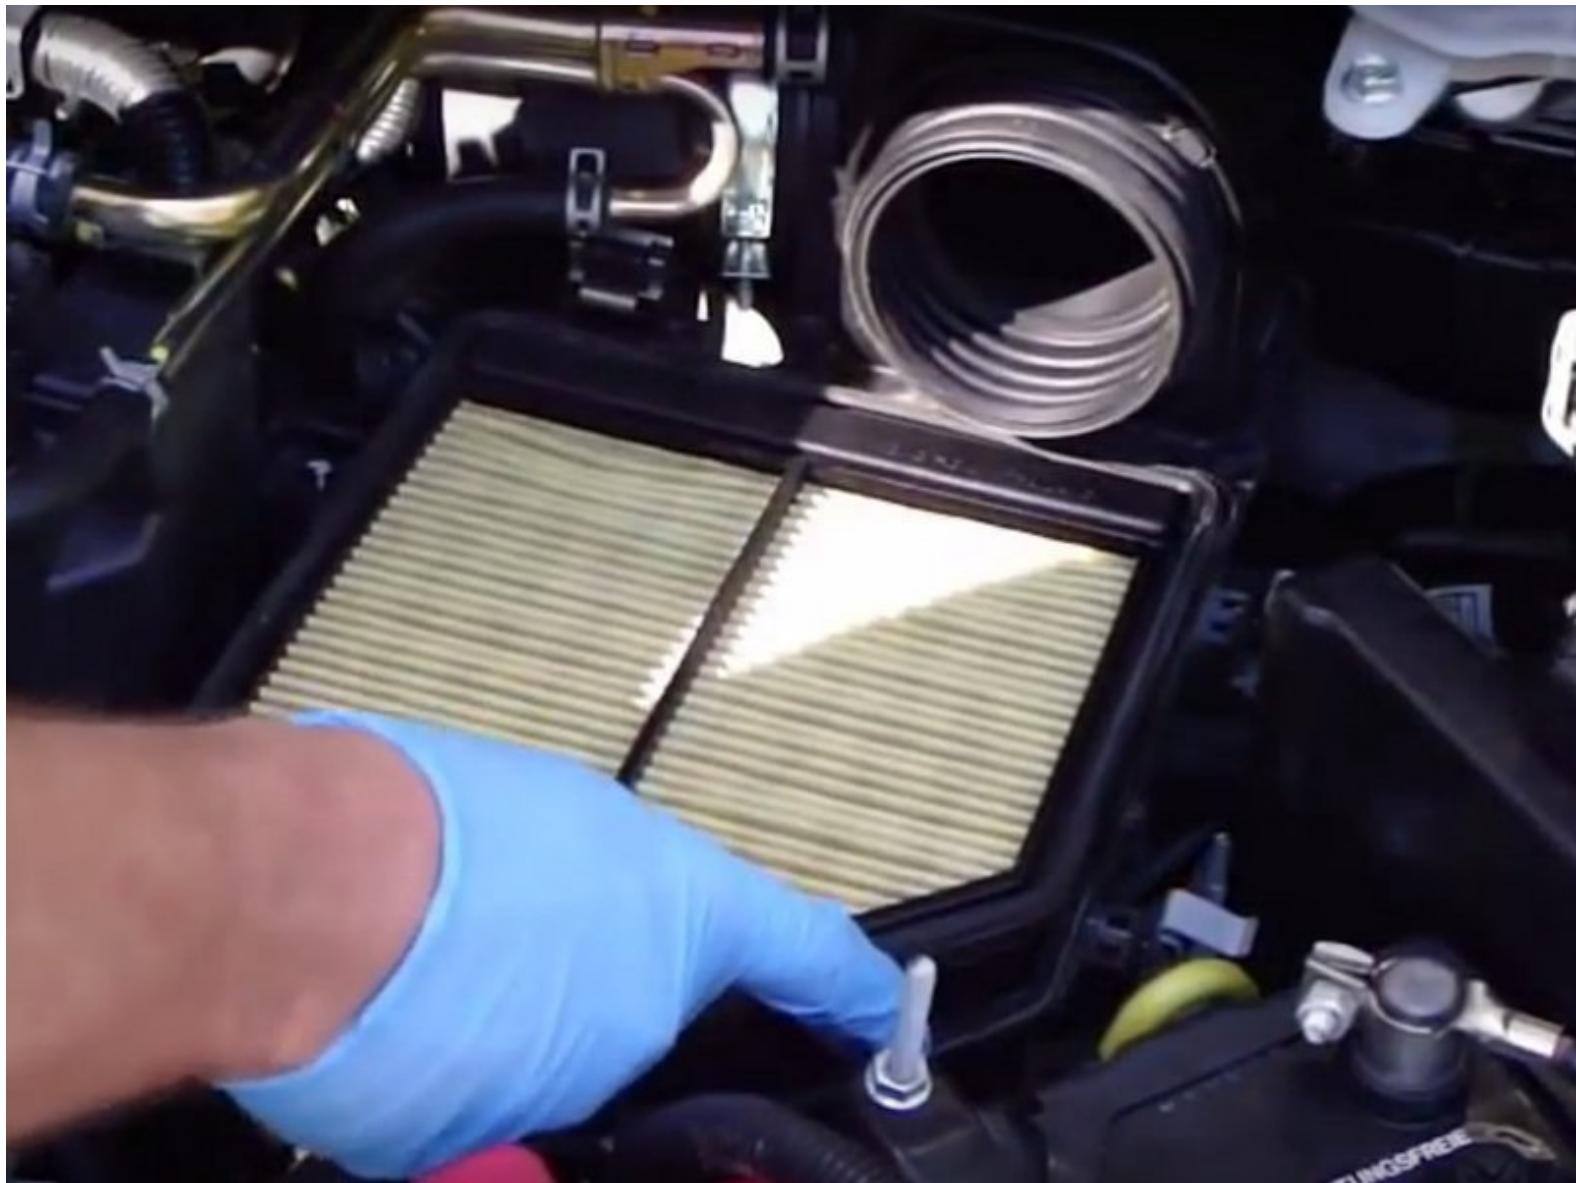

INTRODUCTION

A car air filter cleans the air entering the engine. Signs of a dirty air filter include a misfiring engine, unusual noises, and reduced fuel economy.

Follow this video guide and replace the filter every year or 25,0000 miles on your Honda Civic.



PARTS:

- [Engine Air Filter \(1\)](#)

To reassemble your device, follow these instructions in reverse order.