



2006-208 Toyota RAV4 Engine Air Filter Replacement

A video tutorial on how to change the engine air filter on a 2006-2008 Toyota RAV4.

Written By: eCuration



INTRODUCTION

If you are experiencing a loss of power, engine misfiring, and or engine sputtering, then it may be time to replace the engine air filter.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.

TOOLS:

- Pair of Hands (1)

PARTS:

- Engine Air Filter (1)

To reassemble your device, follow these instructions in reverse order.