



# 2007-2012 Jeep Wrangler Headlight Replacement

Learn how to replace the headlights on a Jeep Wrangler

Written By: Marco Santini



## INTRODUCTION

Did your headlight on your jeep recently stop working? Use this guide to replace the headlight and get driving once again.

### TOOLS:

- [Star Bit Screwdriver \(1\)](#)
- [Flathead Screwdriver \(1\)](#)

### PARTS:

- [Jeep Wrangler Replacement Headlight \(2\)](#)

## Step 1 — Headlight





- Locate the two gray latches on either side of the hood near the headlights.
- Pull the latches away from the hood to release the latches.

## Step 2



- Reach under the hood and push the lever left to right. You should now be able to lift the hood.
- Prop open the hood by inserting the support rod into the designated hole on the underside of the hood.


## Step 3

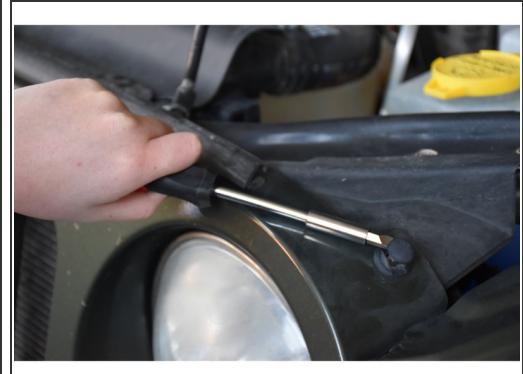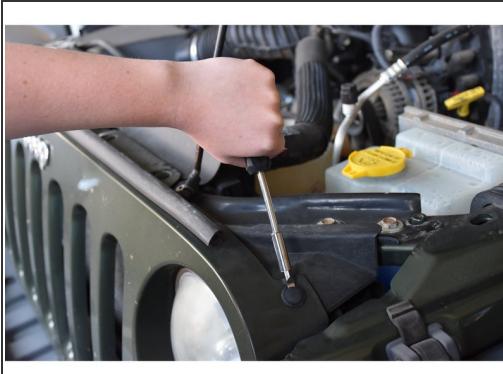

- Locate all six push on fasteners on the top of the grill.
- Use a flathead screwdriver to pry up the fasteners, and make sure you put the screws somewhere safe.

*(i)* If the fasteners will not come up, use two flathead screwdrivers on either side of the fastener to remove.


## Step 4

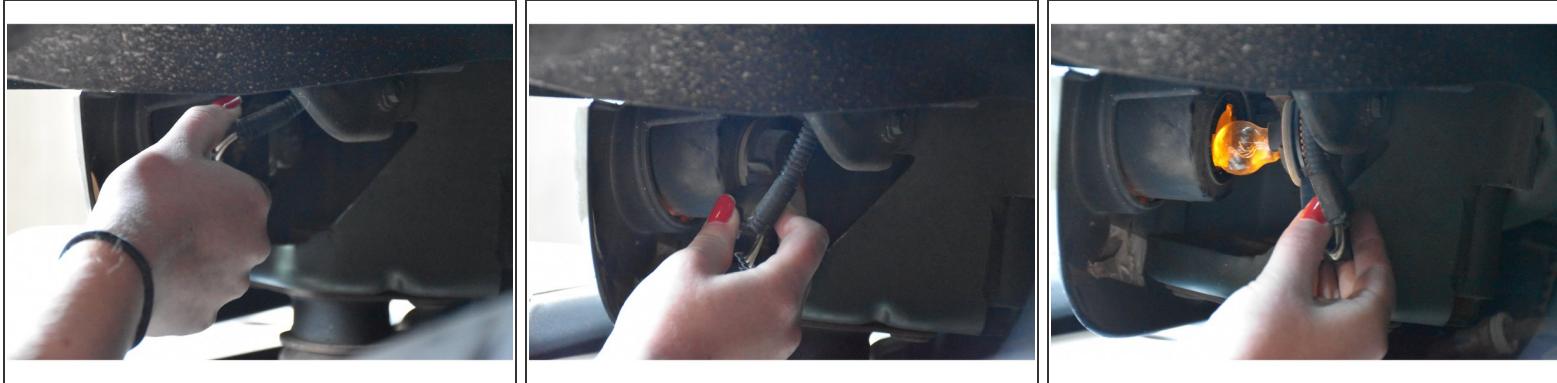

- Locate right and left blinker lights under the fenders.
- Twist blinker light toward the ground, and make sure you pull the bulb out carefully.


 Make sure you are handling bulb carefully.

## Step 5

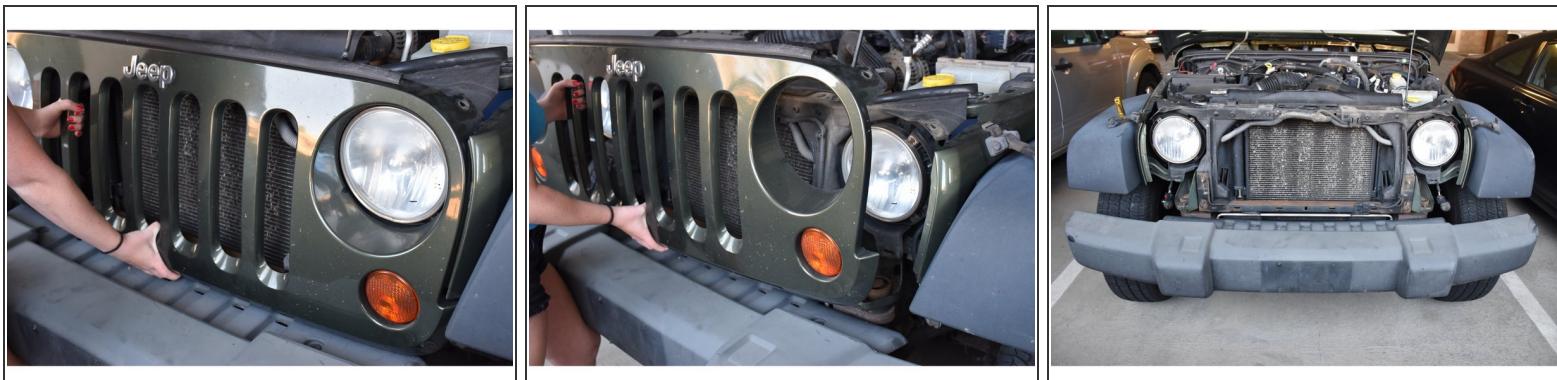


- Make sure all fasteners are removed from top of the grill, and the top of the grill is loose.
- Firmly pull the bottom of the grill until the grill disconnects from the jeep.

## Step 6

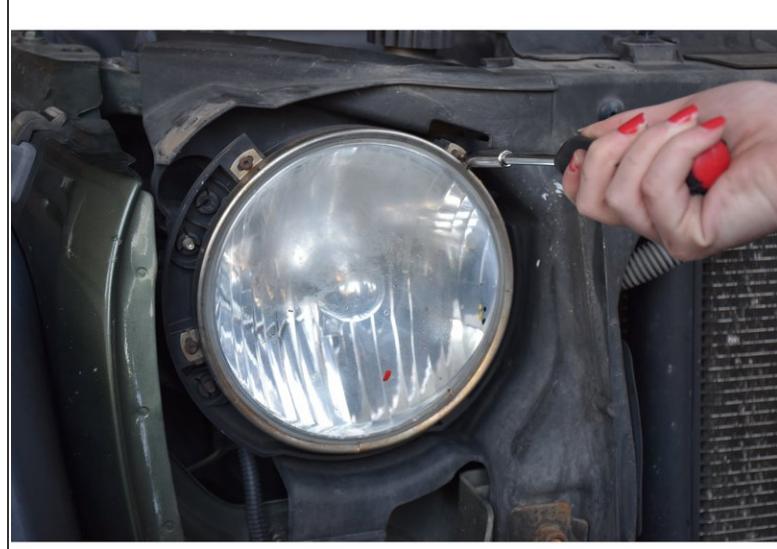


- Locate the 4 screws holding the headlight in place.
- Use a star bit screwdriver to unscrew the .164-18 x .625 mm star bit screws around the headlight, and make sure you place screws somewhere safe.
- *(i)* Hold the headlight when unscrewing last screw to prevent the headlight from falling.

## Step 7

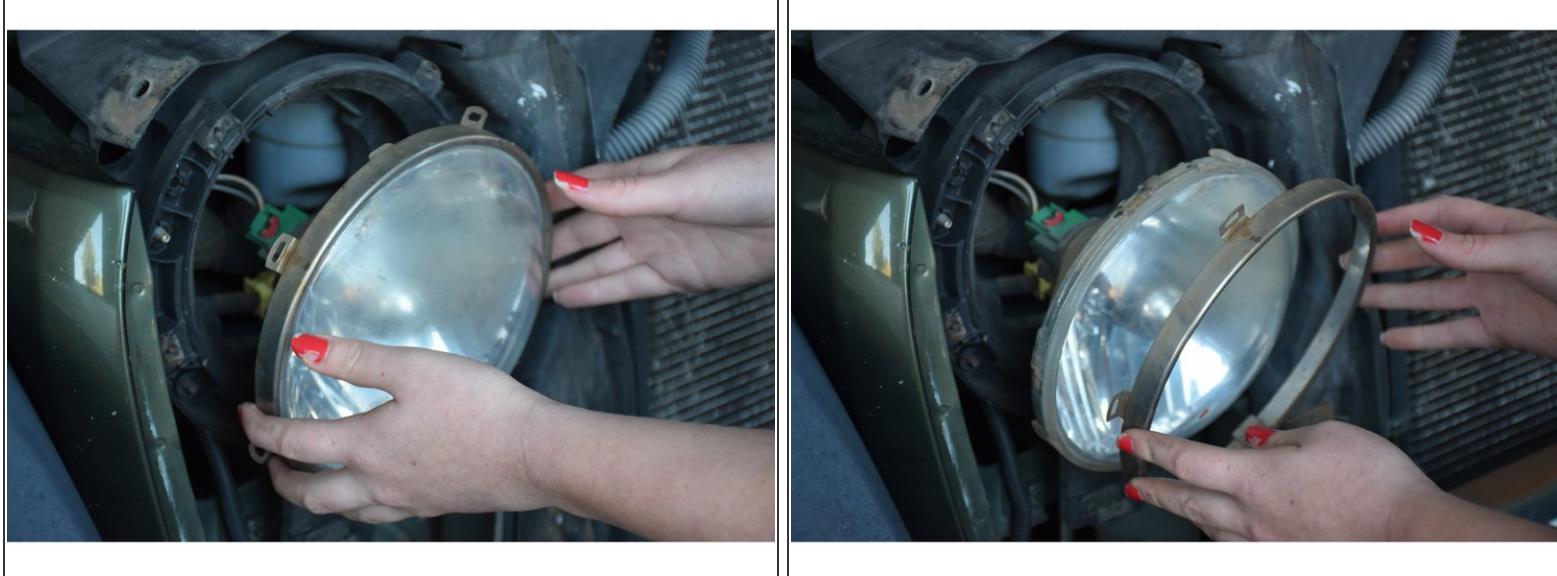

- Use your hands to carefully remove silver ring from the headlight.

## Step 8

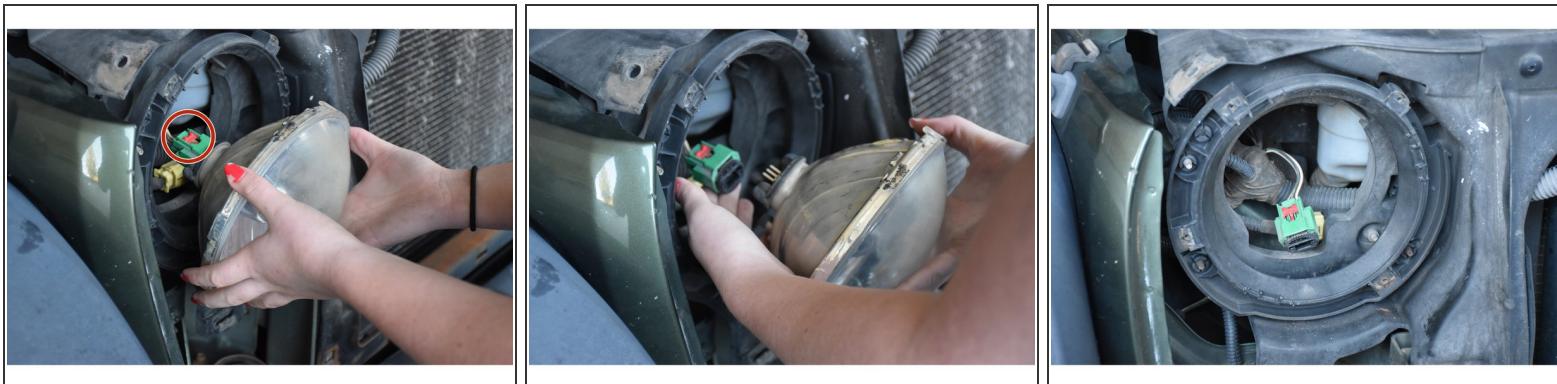

- Locate red tab on the headlight plug connector, and push it away from the headlight.
- Firmly pull the connector away from headlight to remove.

To reassemble your device, follow these instructions in reverse order.