



2009-2015 Toyota Prius Oil and Oil Filter Replacement

A video tutorial on how to change the oil and oil filter on a 2009-2015 Toyota Prius.

Written By: eCuration



INTRODUCTION

The engine oil and oil filter should be replaced every 5,000 miles.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the change yourself.

TOOLS:

- Hydraulic Floor Jack (1)
- Jack Stands (1)
- Wheel Chocks (1)
- 3/8" Drive Ratchet (1)
- 14 mm socket (1)
- Oil Filter Wrench (1)
- Oil Drain Pan (1)
- Paper Towels (1)
- Torque Wrench (1)

PARTS:

- Oil Filter (1)
- 0W-20 Motor Oil (1)
- Oil Drain Plug and Gasket (1)

To reassemble your device, follow these instructions in reverse order.