



# 2011-2013 Scion tC Car Battery Replacement

A replacement guide to help change the car battery of the 2011-2013 Scion tC.

Written By: Travis Michael




 **TOOLS:**

- 3/8" Drive Ratchet (1)
- 10mm Socket (1)
- 10mm Wrench (1)

 **PARTS:**


- 12V Car Battery (1)

## Step 1 — Car Battery

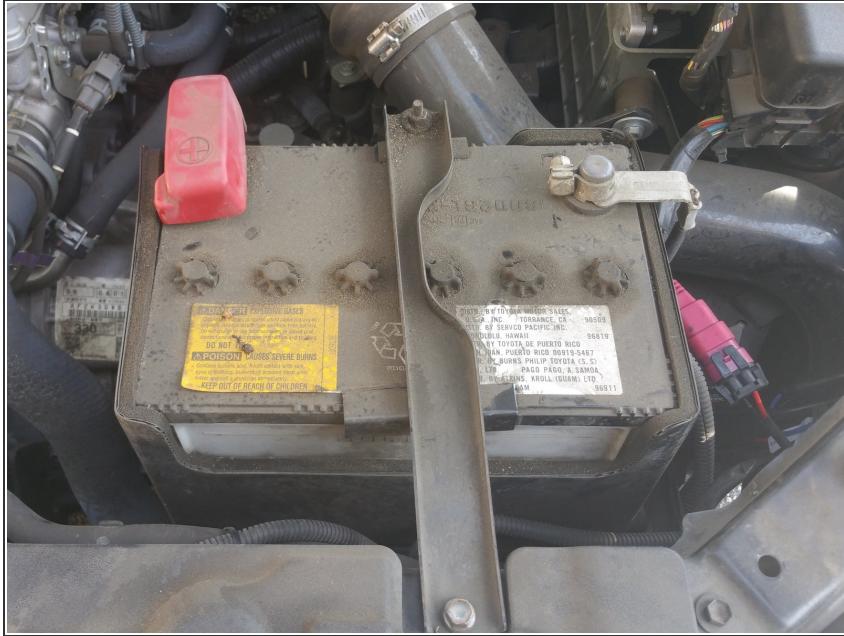

- Begin by opening the hood of the car and locating the battery on the front of the driver side in the engine compartment

## Step 2

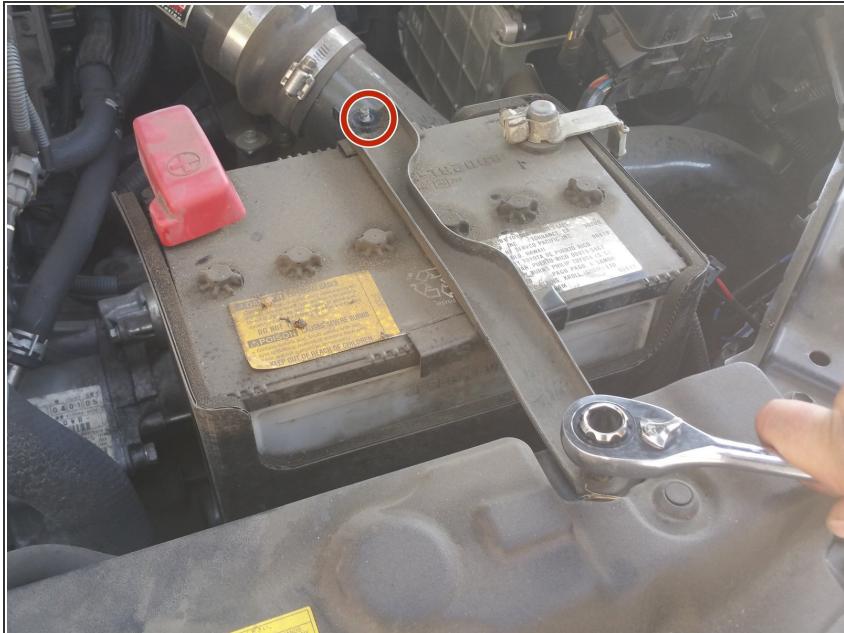

- Using a socket wrench, loosen the 2 (5/16 inch) nuts on the top of the battery support bracket
- Remove the bracket by lifting up

## Step 3





- After removing the bracket, locate the supporting rod behind the battery
- The rod is hooked on a hole in the metal behind the battery. Unhook the rod and remove it

## Step 4



- Start with the negative terminal of the battery
- Loosen the nut on the negative terminal with a 10mm socket wrench
- Remove the wire by slightly twisting and pulling up

## Step 5

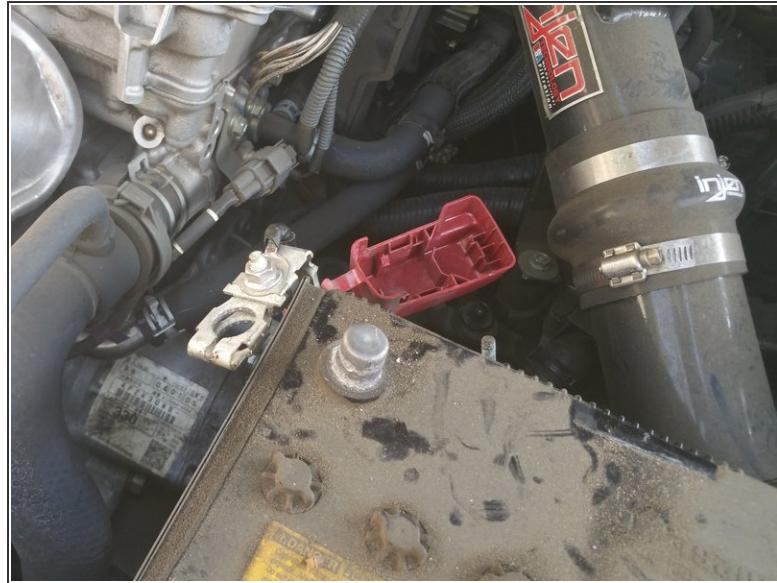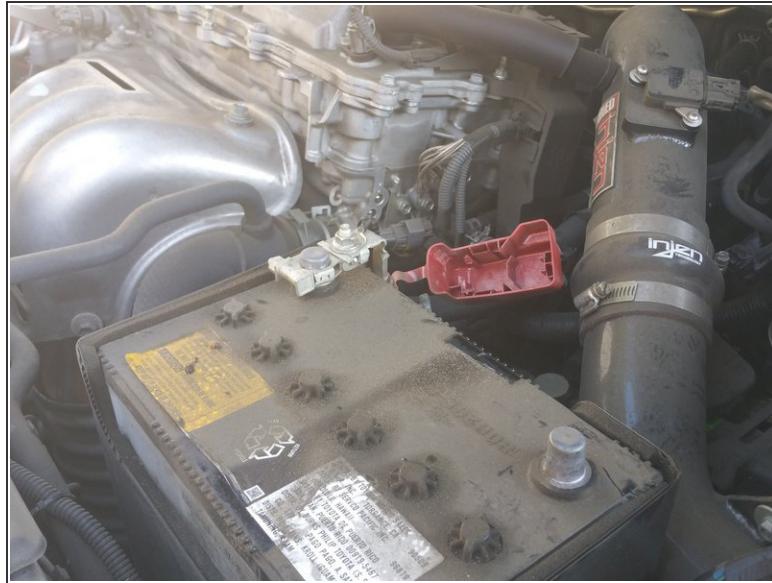

- Remove the cap from the positive terminal of the battery
- Using a 10mm socket wrench, loosen the nut on the positive terminal
- Remove the wire from the positive terminal by slightly twisting and pulling up
- Remove the battery by lifting it out of the engine compartment

To reassemble your device, follow these instructions in reverse order.