



2012 Ford Fusion Brake Light Replacement

Replace your brake light when it is not illuminating when pressing on the brake.

Written By: Christian



INTRODUCTION

Make sure that the car has been off for 15 minutes because the brake light bulb may be hot.



TOOLS:

- [Flathead Screwdriver](#) (1)
 - [Door Panel Removal Tool](#) (1)
-

Step 1 — Brake Light



- Locate the button that opens the trunk

Step 2



- Locate plastic fasteners and remove with door panel remove tool/flathead by prying them off

Step 3




- Pull tab and remove trunk cover

Step 4



- On the inside of the trunk remove the side panel to locate the brake light bulb

Step 5

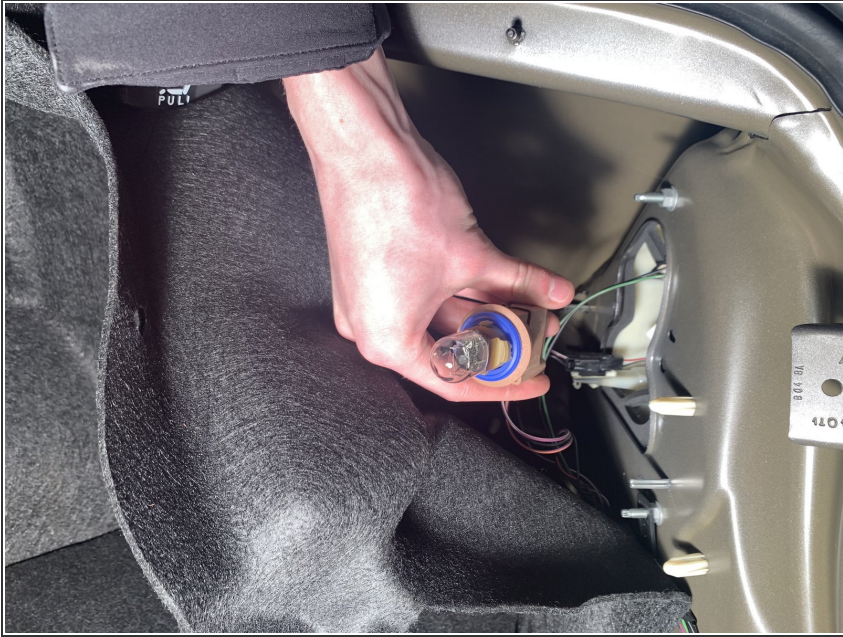

- Pull the Brown housing that holds the brake light

Step 6



- Remove brake light from housing by pulling it out gently and replace with new bulb

To reassemble your taillight bulb, follow these instructions in reverse order.