



ACER Aspire E1-572-6870 Battery Replacement

Use this guide to replace an old or malfunctioning battery in your ACER Aspire E1-572-6870 laptop.

Written By: Cody Lim



This document was generated on 2019-09-18 01:26:31 AM (MST).

INTRODUCTION

Use this guide to learn how to take out or replace your battery.

Step 1 — Battery



⚠ Working on your device while it is turned on may result in electric shock. Make sure to shut down and unplug your device before you begin.

- Flip your laptop over so the back panel is facing upwards and locate the lock switch below the battery.

Step 2



- Slide the lock switch to the right using your finger or another object.
- At the same time, grasp the battery with your other hand and begin to slide it upwards.

Step 3



- Continue to hold the switch to the right and pull the battery out until it is completely removed.

 To reinsert or replace the battery, simply line up the tabs on the battery with the laptop and slide it straight back in. There is no need to move the lock switch.

To reassemble your device, follow these instructions in reverse order.