


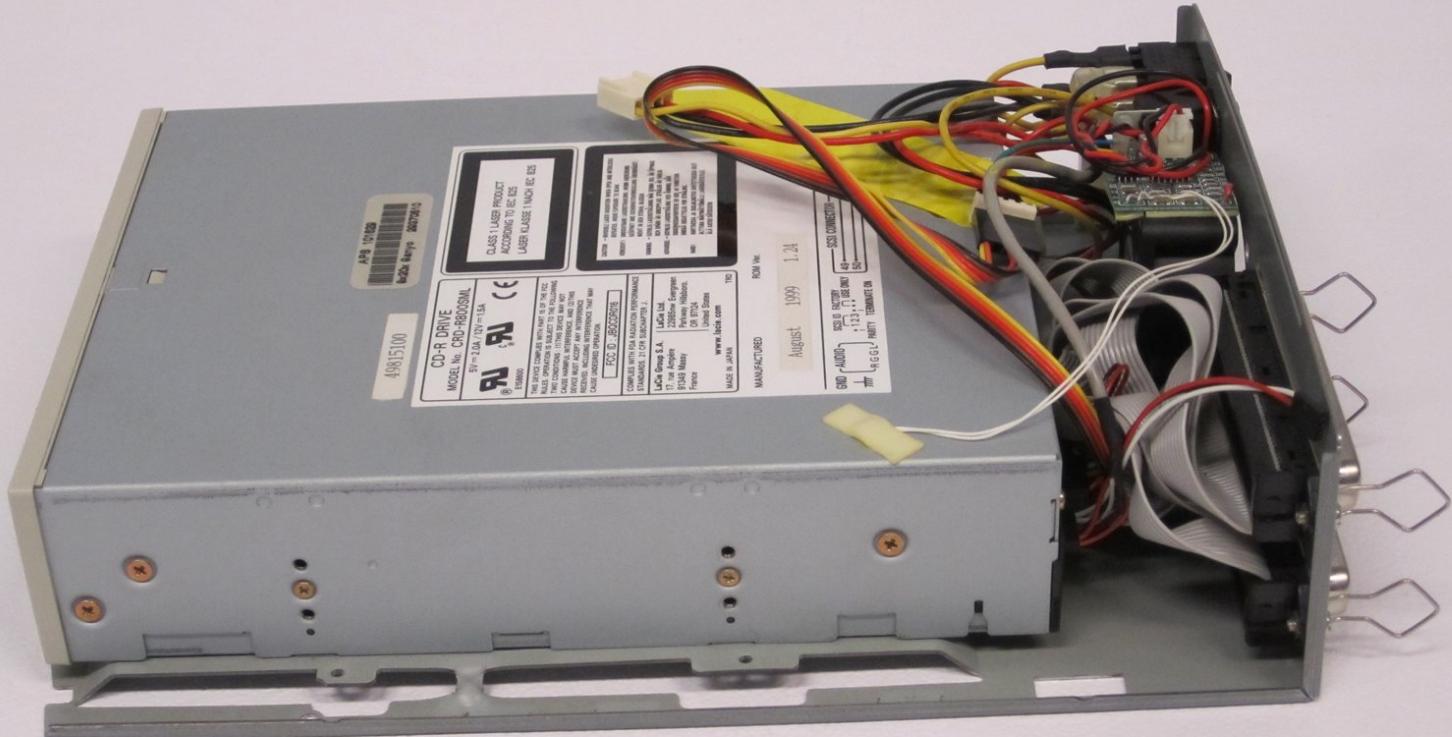

APS Tech 101629 External Casing Replacement

This guide will give instructions on removing the external case of the APS 101629 CD-Drive so that the internal components can be accessed.

Written By: Patrick Meyer



This document was generated on 2019-09-22 08:31:14 AM (MST).


INTRODUCTION

This is one of the easier disassembly guides for this device. The case is easily removed, but will void any still existing warranty on the device. Removing the case is necessary to get at any internal component.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — External Casing

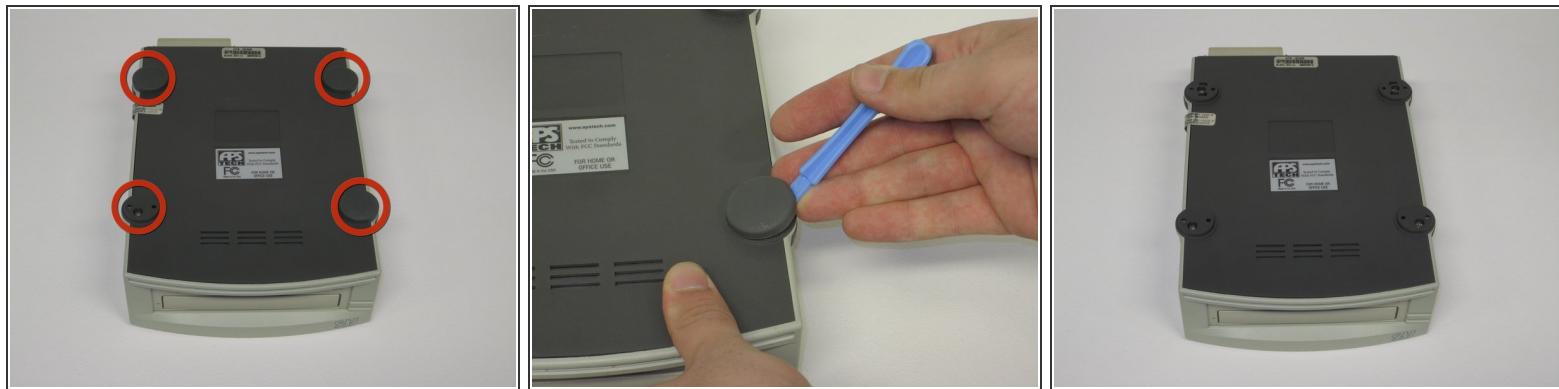

- Pry 4 plastic feet off the bottom of the enclosure using the iPod opening tool.

Step 2




- Unscrew the four screws previously covered by the feet.

Step 3



- Flip the device right side up, then gently slide the casing upwards and off the hard drive.

Step 4

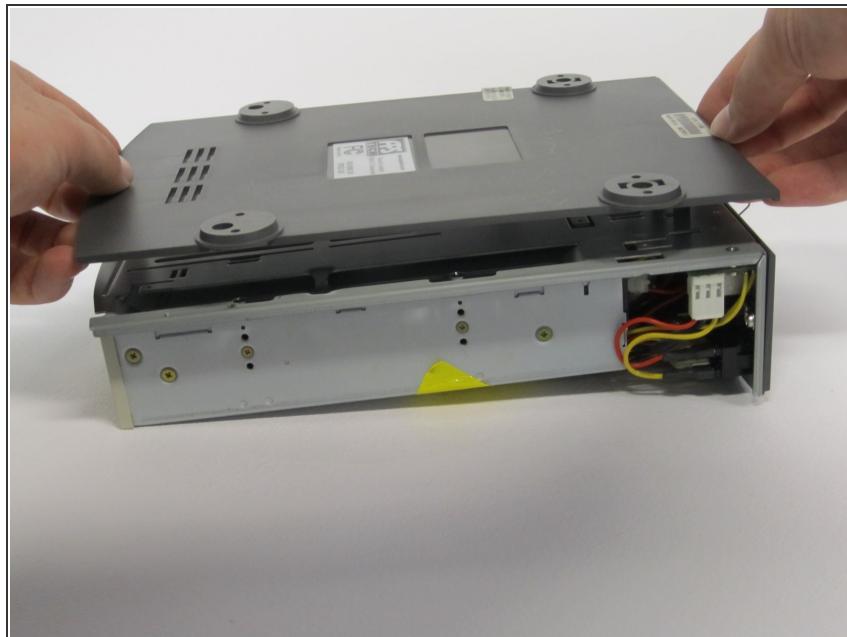

- Flip device upside down again.
- Gently pry the bottom gray casing away from the device.

Step 5



- Rotate so back of device is facing you, then gently pry the back casing away.
- When back casing is removed, the fan will become loose.

To reassemble your device, follow these instructions in reverse order.