




# ASUS Chromebook C100PA-RBRKT07 Audio Ports Replacement

How to replace your broken Asus Chromebook Flip C100PA-RBRKT07 audio ports.

Written By: Tomas Martinez

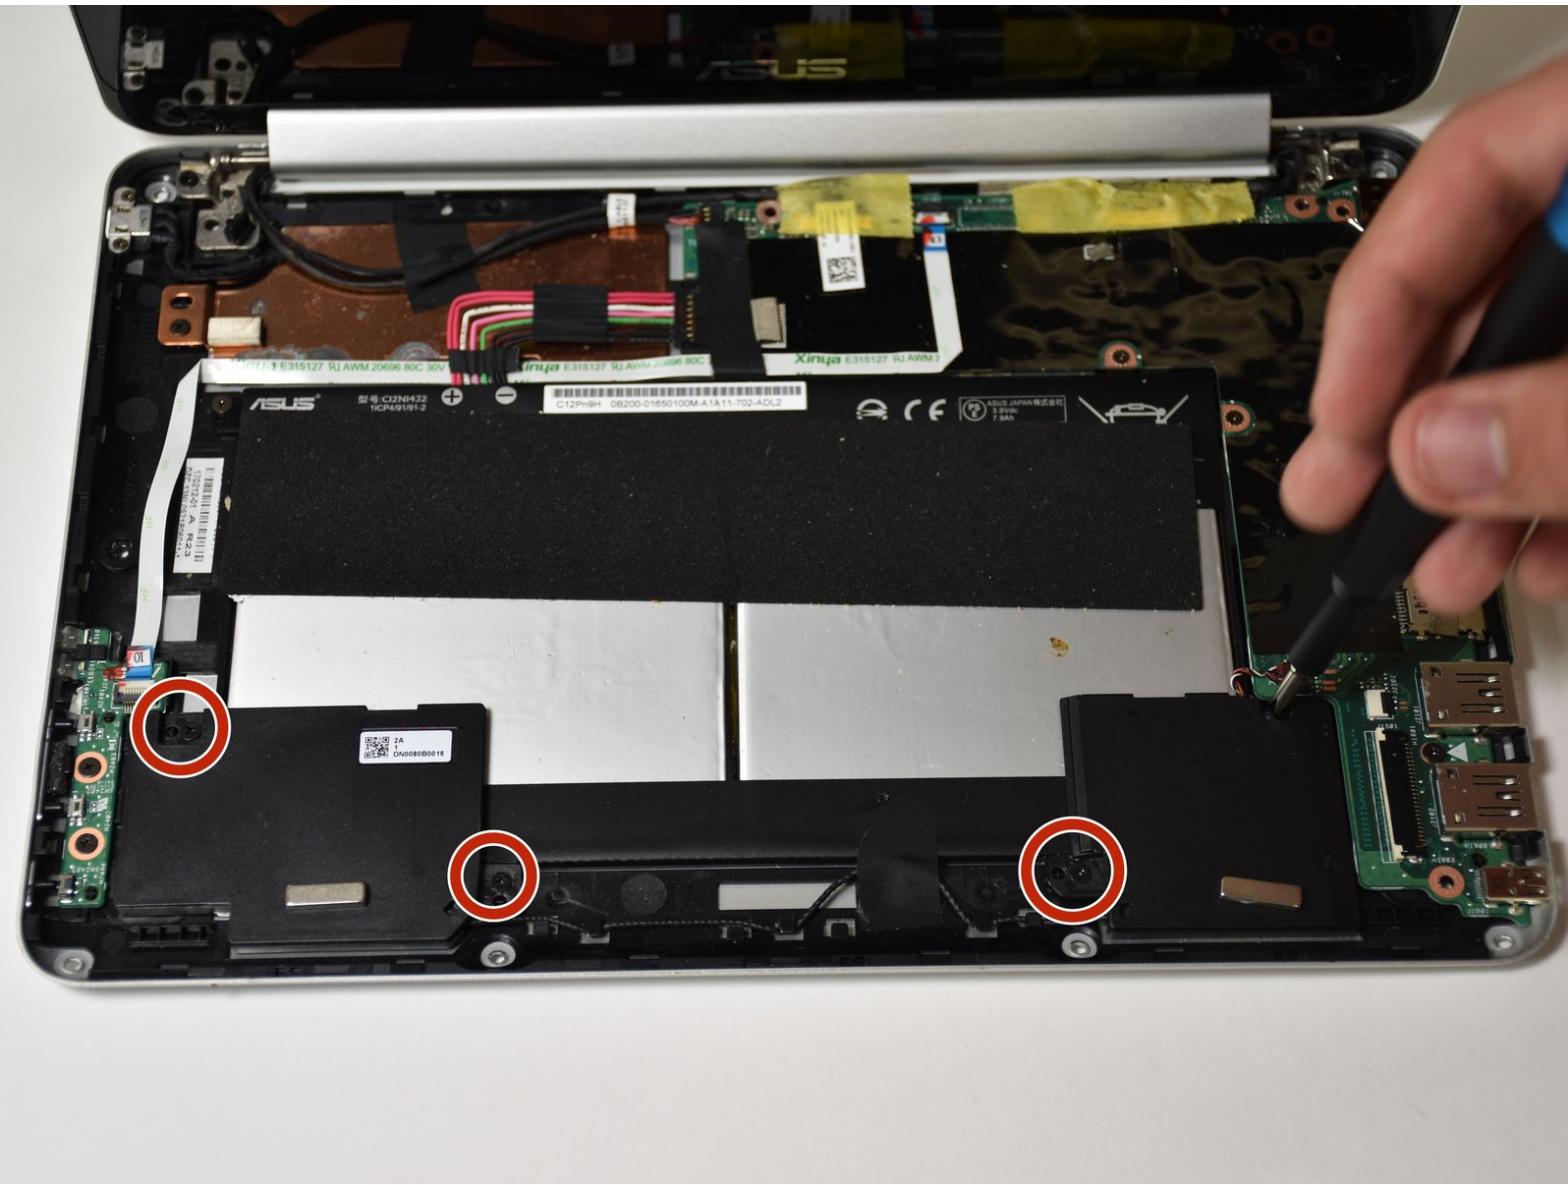

## INTRODUCTION

Details to remove the battery of ASUS Chromebook Flip C100PA-RBRKT07

### TOOLS:

- Tweezers (1)
- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [JIS #1](#) (1)

## Step 1 — Lower Case



- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

## Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

## Step 3



- Use the T5 screwdriver to remove the six 3.1 mm screws under the pads.

*(i)* There might be a layer of tape that covers the screws. Remove the tape first with a pair of tweezers.

## Step 4




- Use the iFixit opening tool to remove the back of the laptop.

## Step 5





- Use the blunt nose tweezers to separate the keyboard from the internal components.

## Step 6 — Audio Ports

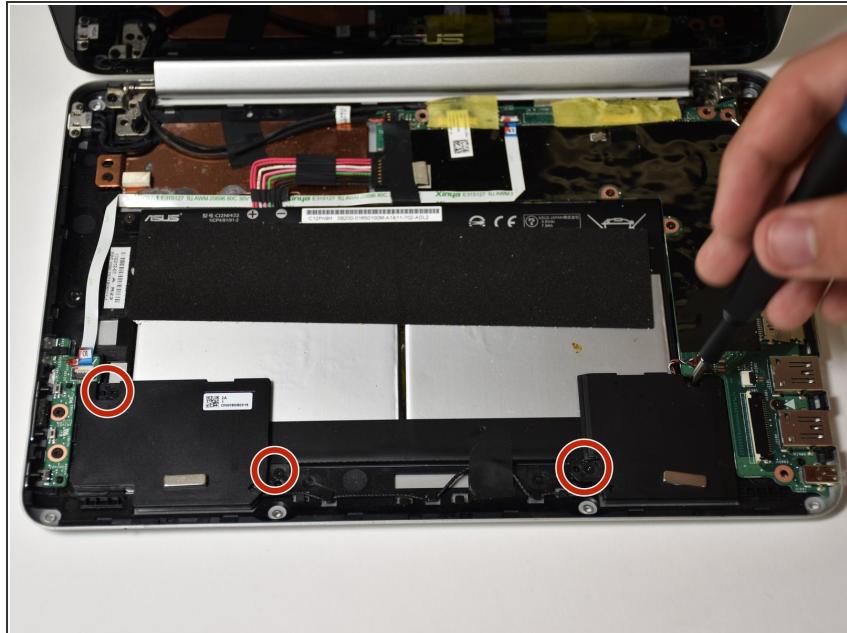

- Remove the four 3mm J1 screws attached to the audio cards.

## Step 7

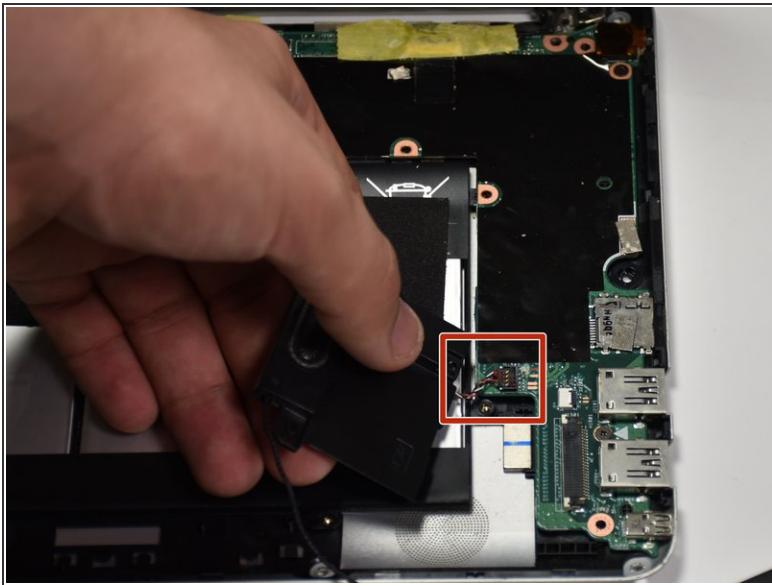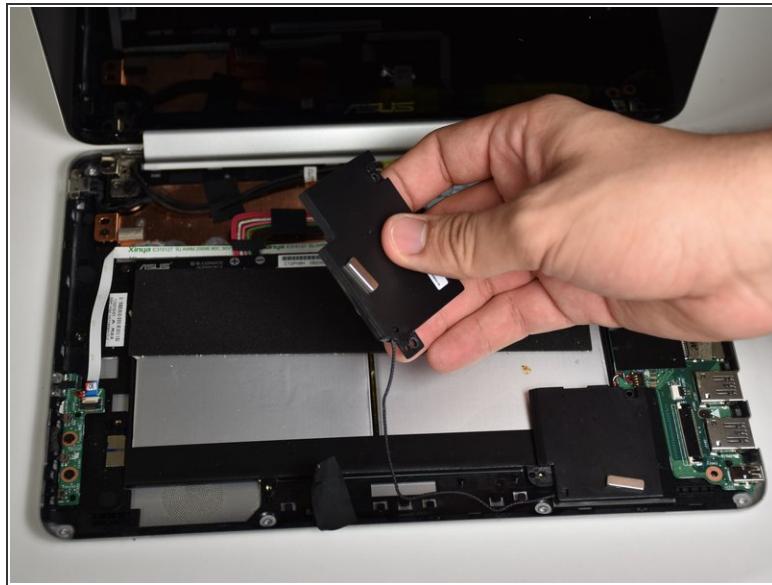

- Lift and remove the audio cards.
- Separate the wires from the motherboard.

To reassemble your device, follow these instructions in reverse order.