



ASUS Chromebook C100PA-RBRKT07 Battery Replacement

How to replace the battery for the ASUS Chromebook C100PA-RBRKT07.

Written By: Tiffany Foo



INTRODUCTION

Details to remove the battery of ASUS Chromebook Flip C100PA-RBRKT07


TOOLS:

- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)
- ESD Safe Tweezers Blunt Nose (1)
- JIS #1 (1)
- JIS #00 Screwdriver (1)

PARTS:

- ASUS Chromebook C100P Battery (1)

Step 1 — Battery

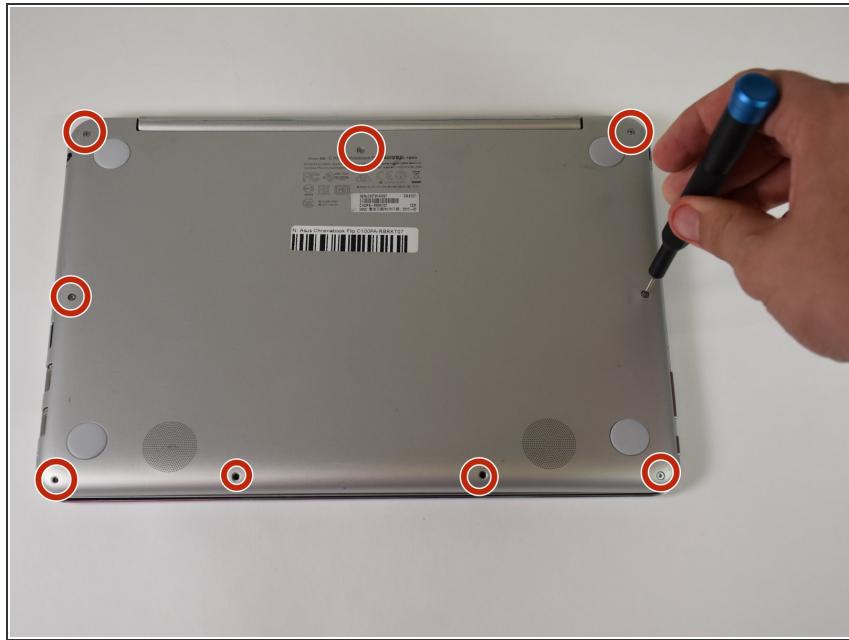

- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

Step 3



- Use the T5 screwdriver to remove the 6 3.1 mm screws under the pads.
- *(i)* There might be a layer of tape that covers the screws. Remove the tape first with a pair of tweezers.

Step 4




- Use the iFixit opening tool to pry the backing of the device off.

Step 5




- Use the tweezers to separate the cables from the motherboard.
- *(i)* You need to reach inside and peel some tape to disconnect the wire.

Step 6

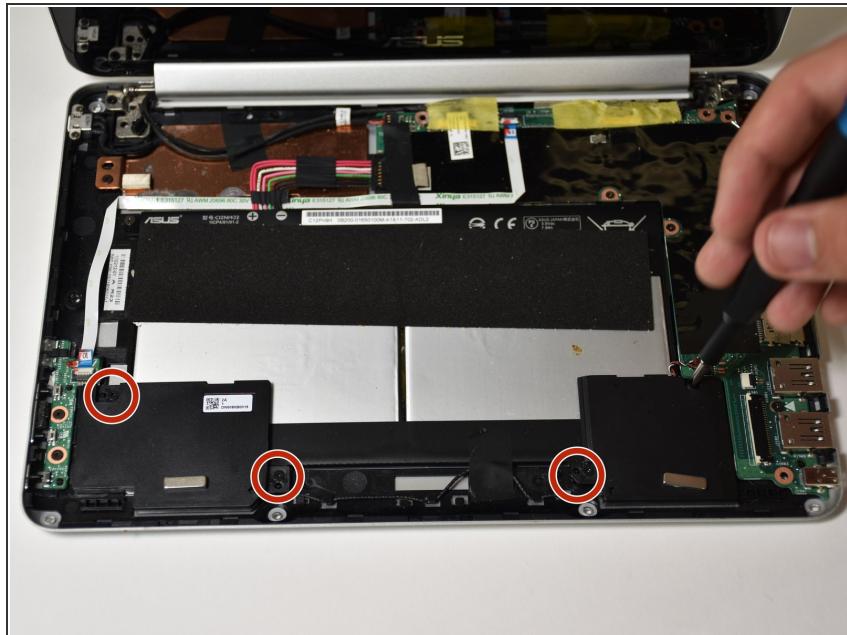


- Use the JIS1 screwdriver to remove the four 2.1 mm screws around the audio cards.

Step 7

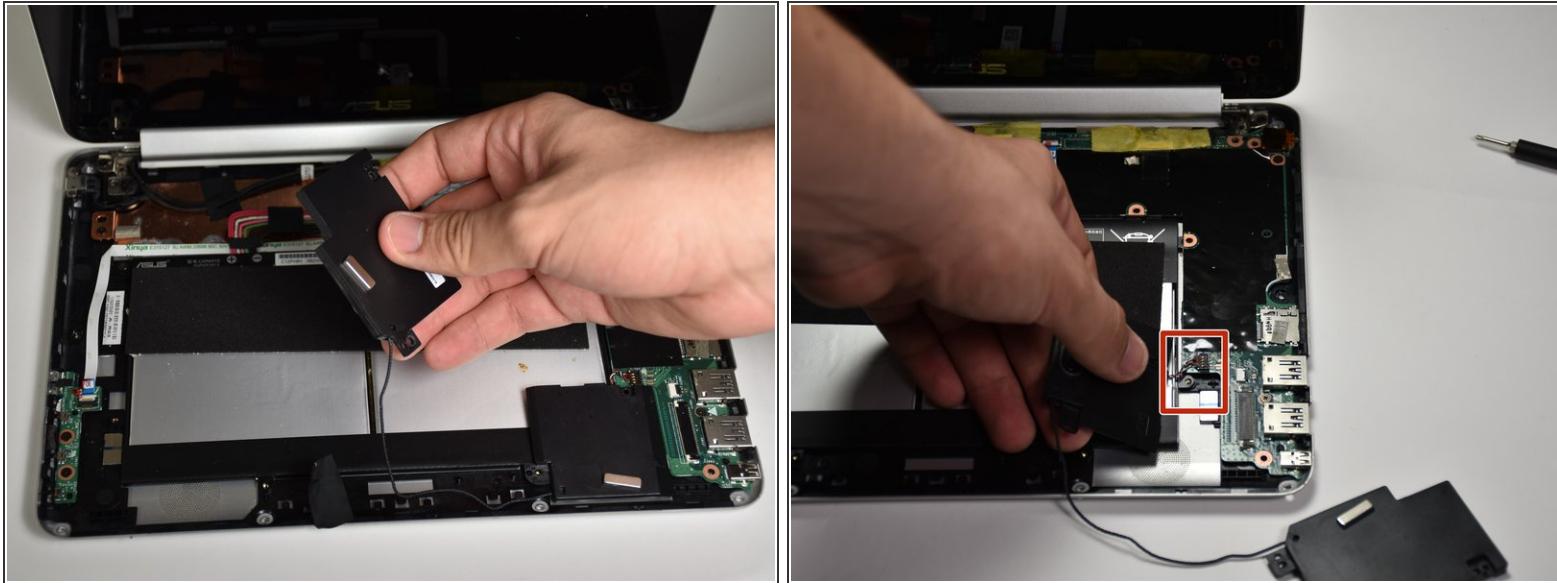


- Gently disconnect the audio cards, exposing the battery.

Step 8

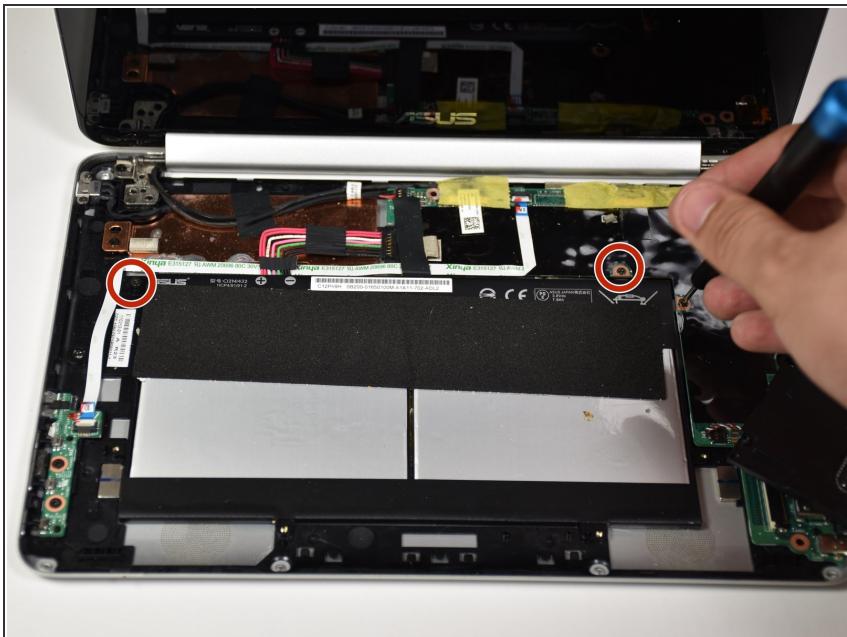

- Use the J00 screwdriver to remove the three 1.7 mm battery screws.

Step 9

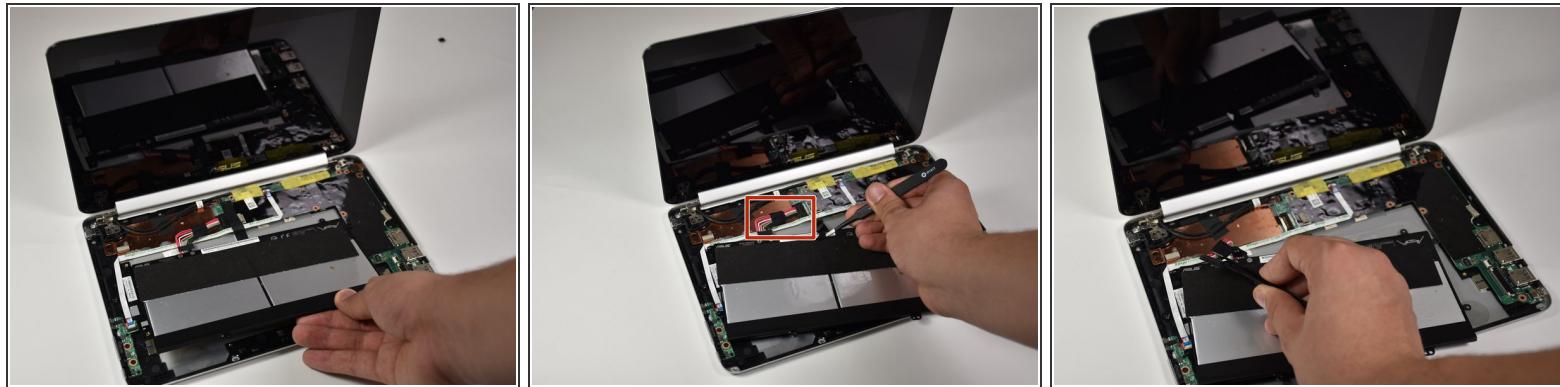

- Grip the battery and remove it from the device.
- Remove the battery cable out of the motherboard by lifting the battery cables.

To reassemble your device, follow these instructions in reverse order.