



ASUS Chromebook C100PA-RBRKT07

Keyboard Replacement

How to replace the keyboard for the ASUS Chromebook C100PA-RBRKT07.

Written By: Anthony Gomez



INTRODUCTION

Details to remove the keyboard of ASUS Chromebook Flip C100PA-RBRKT07

TOOLS:

- Tweezers (1)
- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)
- ESD Safe Tweezers Blunt Nose (1)

PARTS:

- ASUS Chromebook C100P Upper Case (1)

Step 1 — Lower Case



- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

Step 3



- Use the T5 screwdriver to remove the six 3.1 mm screws under the pads.

(i) There might be a layer of tape that covers the screws. Remove the tape first with a pair of tweezers.

Step 4



- Use the iFixit opening tool to remove the back of the laptop.

Step 5



- Use the blunt nose tweezers to separate the keyboard from the internal components.

Step 6 — Keyboard



- Remove the keyboard from the laptop.

(i) The Trackpad is attached to the keyboard assembly. The Trackpad replacement guide can be found on the ASUS Chromebook CPPA-RBRKT07 homepage.

To reassemble your device, follow these instructions in reverse order.