



# ASUS Chromebook C100PA-RBRKT07 Lower Case Replacement

How to replace the lower case for the ASUS Chromebook C100PA-RBRKT07.

Written By: Tiffany Foo



## INTRODUCTION

Details to remove the lower case of ASUS Chromebook Flip C100PA-RBRKT07

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [ASUS Chromebook C100P Lower Case](#) (1)

## Step 1 — Lower Case



- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

## Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

## Step 3



- Use the T5 screwdriver to remove the six 3.1 mm screws under the pads.


*(i)* There might be a layer of tape that covers the screws. Remove the tape first with a pair of tweezers.

## Step 4



- Use the iFixit opening tool to remove the back of the laptop.

## Step 5

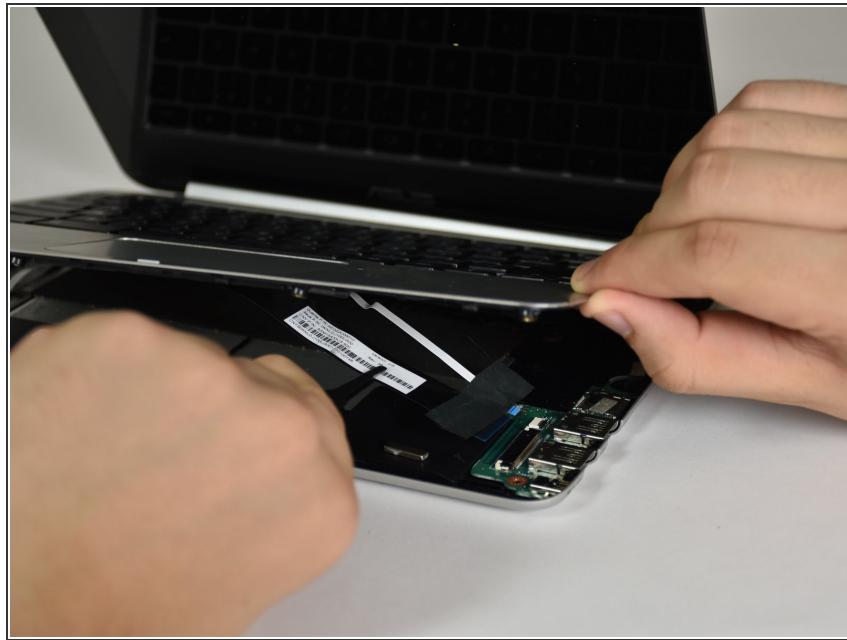

- Use the blunt nose tweezers to separate the keyboard from the internal components.

To reassemble your device, follow these instructions in reverse order.