




ASUS Chromebook C100PA-RBRKT07

Trackpad Replacement

How to replace the trackpad for the ASUS Chromebook C100PA-RBRKT07.

Written By: Lauren Schirle

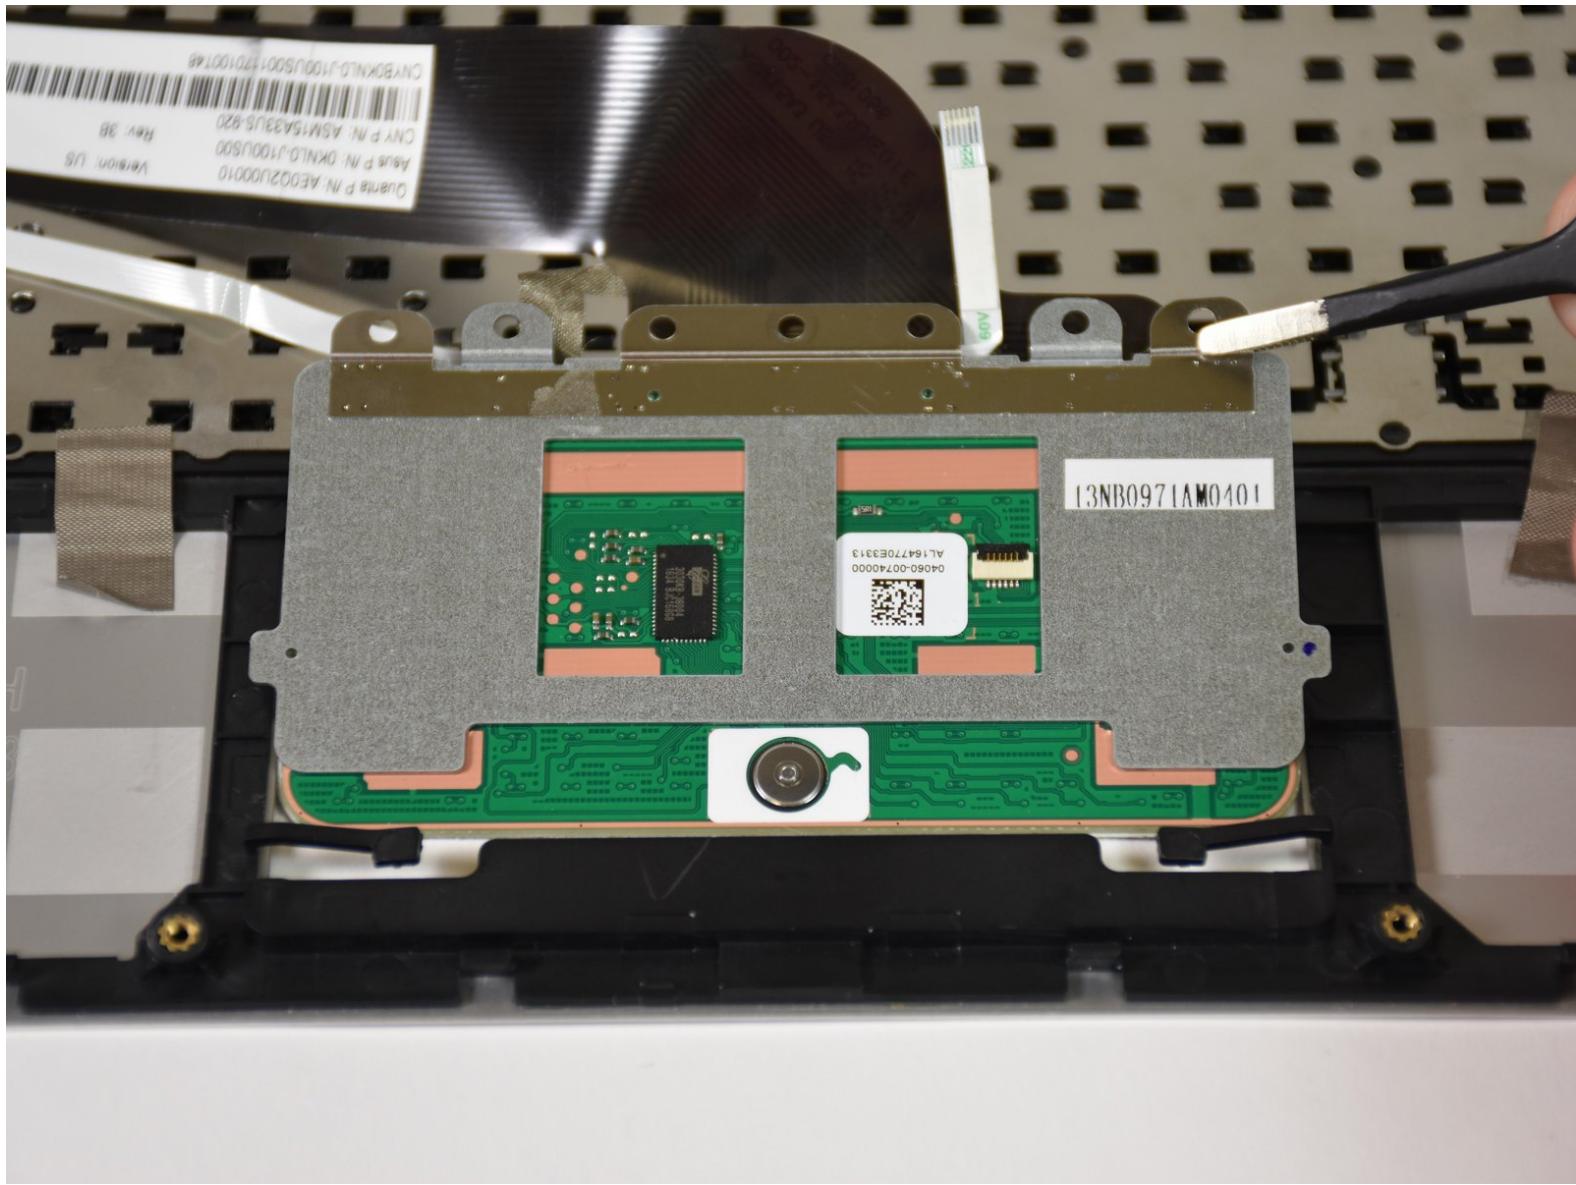

INTRODUCTION

Details to remove the trackpad of ASUS Chromebook Flip C100PA-RBRKT07

TOOLS:

- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)
- JIS #00 Screwdriver (1)
- Tweezers (1)

PARTS:

- ASUS Chromebook C100P Trackpad (1)

Step 1 — Lower Case



- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

Step 3



- Use the T5 screwdriver to remove the six 3.1 mm screws under the pads.

(i) There might be a layer of tape that covers the screws. Remove the tape first with a pair of tweezers.

Step 4



- Use the iFixit opening tool to remove the back of the laptop.

Step 5





- Use the blunt nose tweezers to separate the keyboard from the internal components.

Step 6 — Trackpad




- Grip the keyboard and carefully pull it off the device.

Step 7

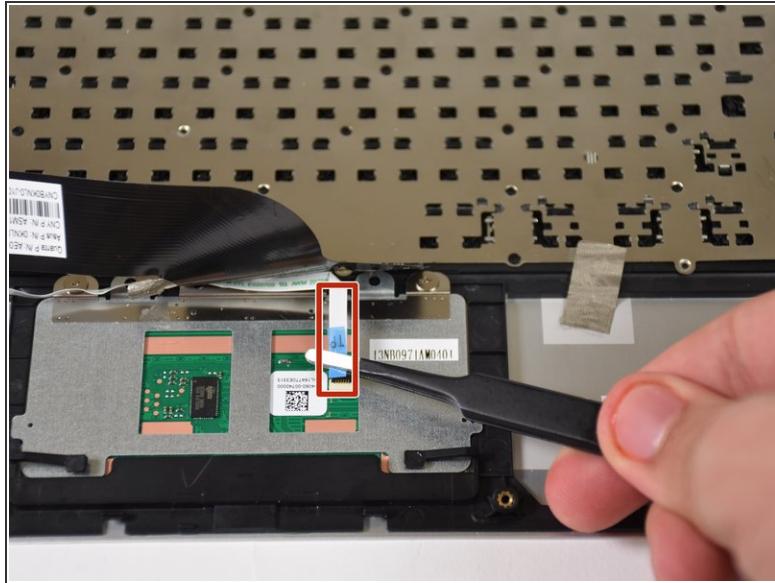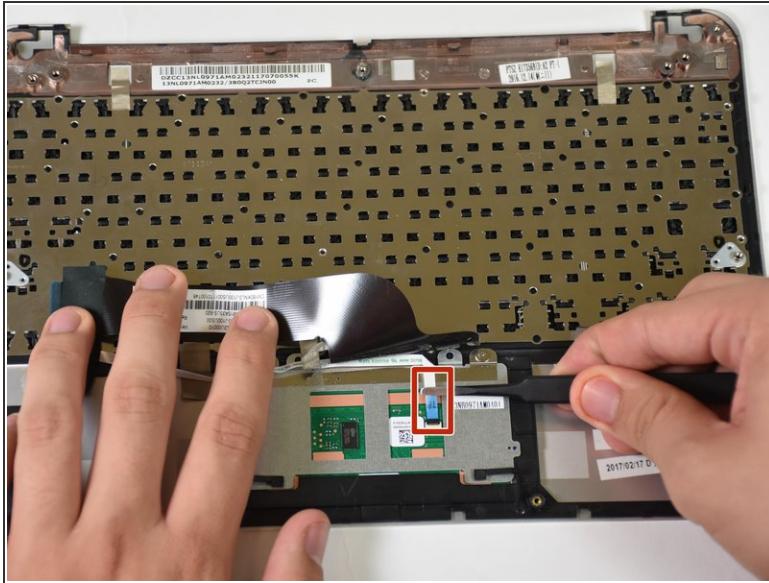


- On the back of the keyboard assembly, use the tweezers to pull the white cable from the track pad.

Step 8

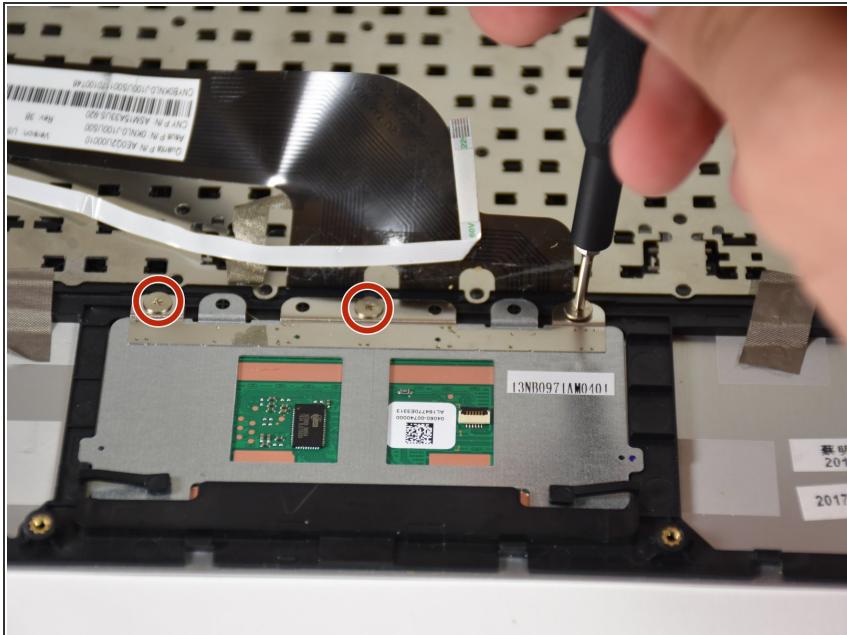

- Remove the three 1 mm screws from the track pad using the JIS 00 screwdriver.

Step 9

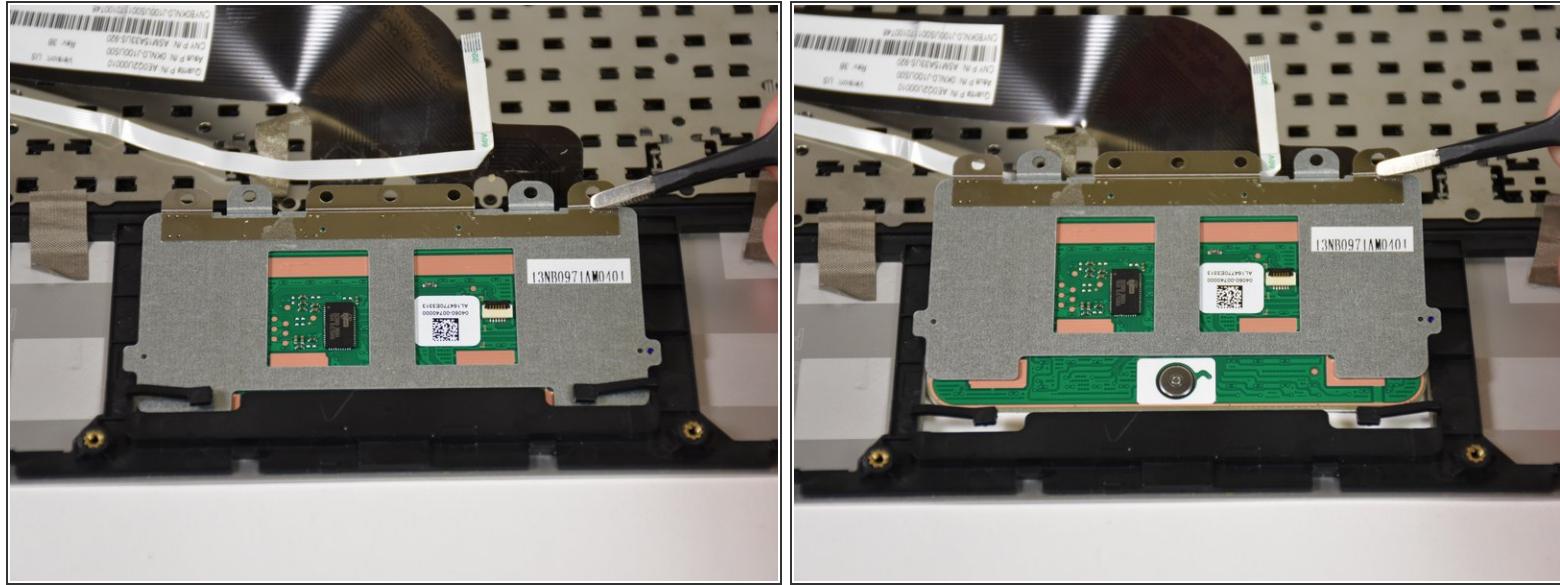

- Grip the track pad with the tweezers and slide it up and out of the keyboard assembly.

To reassemble your device, follow these instructions in reverse order.