




ASUS Chromebook C100PA-RBRKT07 Volume Control Replacement

How to replace the volume control for the ASUS Chromebook Flip C100PA-RBRKT07.

Written By: Lauren Schirle

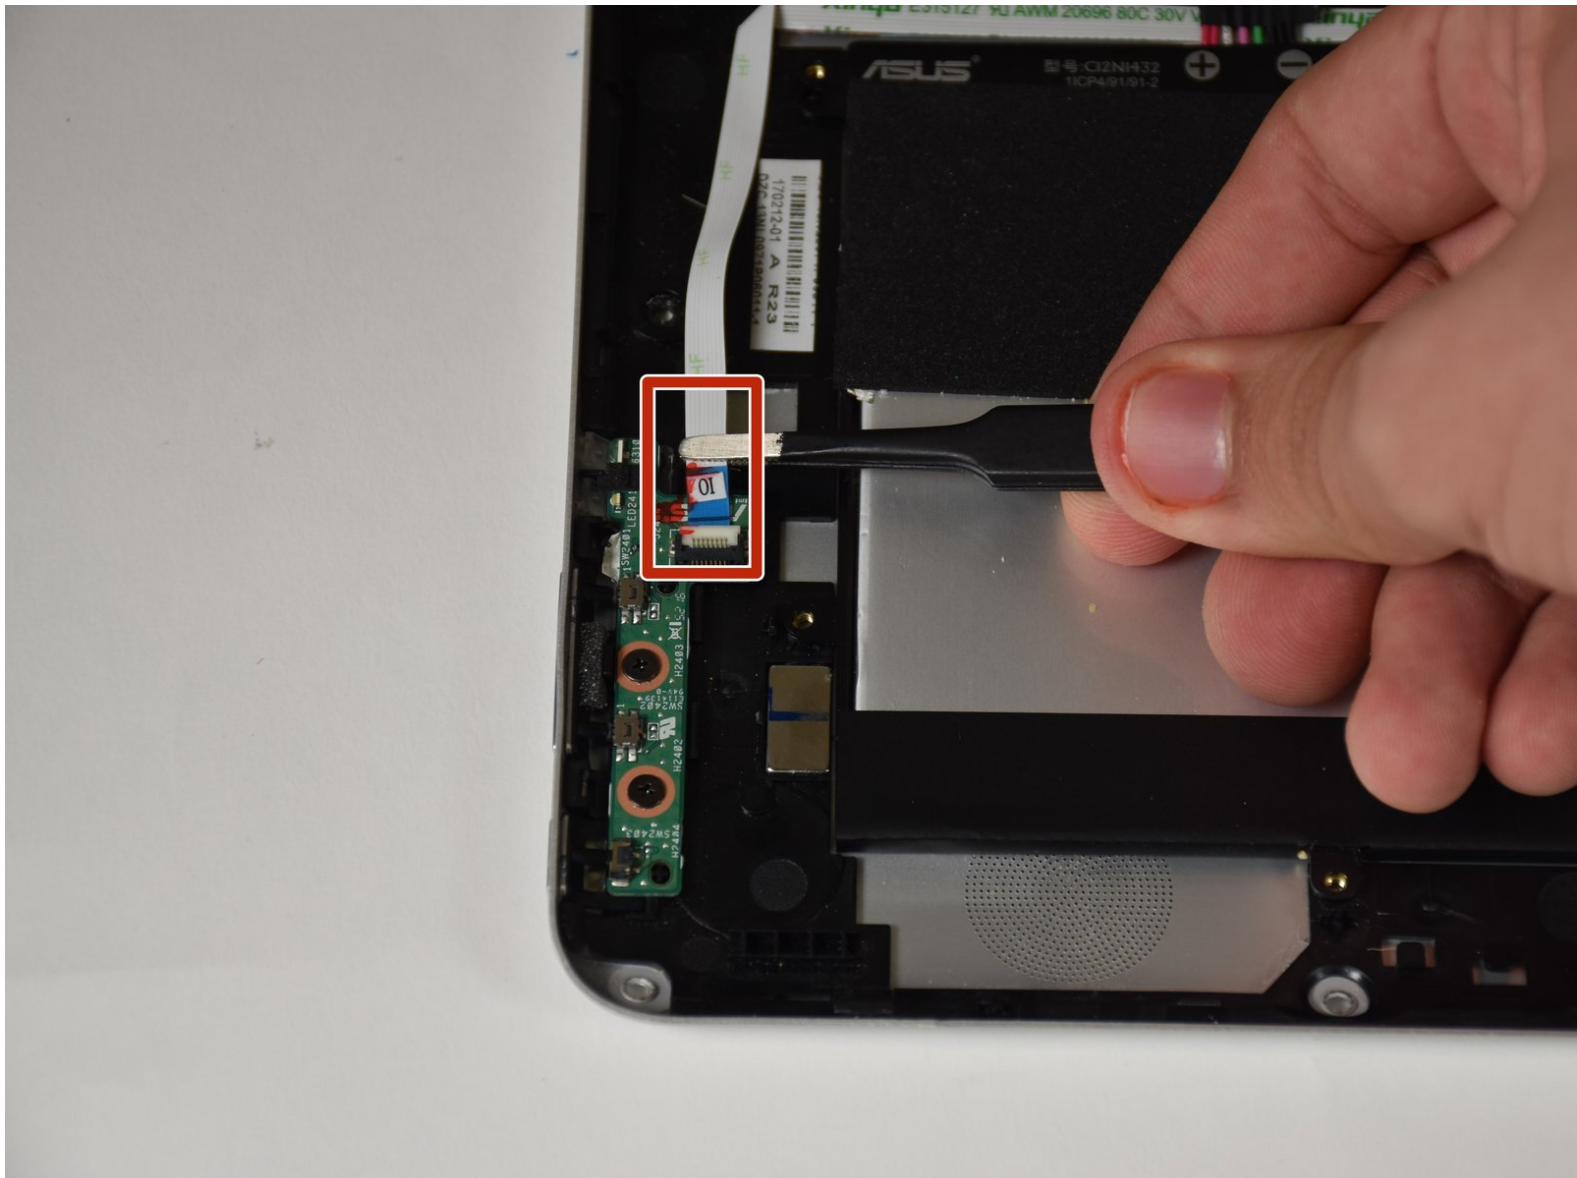

INTRODUCTION

Details to remove the volume control of ASUS Chromebook Flip C100PA-RBRKT07



TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)
- [JIS #00 Screwdriver](#) (1)



PARTS:

- [ASUS Chromebook C100P Power Volume Button Board](#) (1)

Step 1 — Lower Case



- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

Step 3




- Use the T5 screwdriver to remove the six 3.1 mm screws under the pads.
- ⓘ There might be a layer of tape that covers the screws. Remove the tape first with a pair of tweezers.

Step 4




- Use the iFixit opening tool to remove the back of the laptop.

Step 5

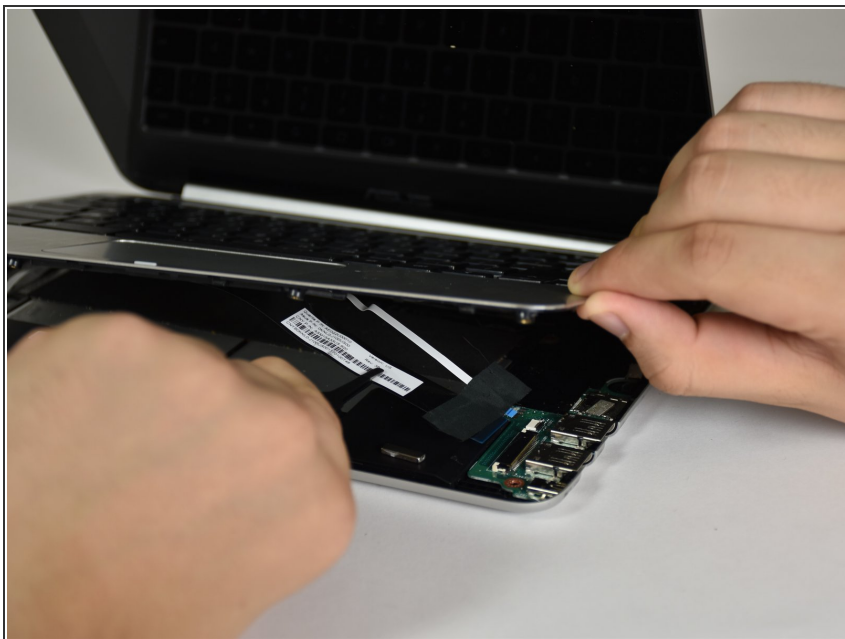


- Use the blunt nose tweezers to separate the keyboard from the internal components.

Step 6 — Volume Control

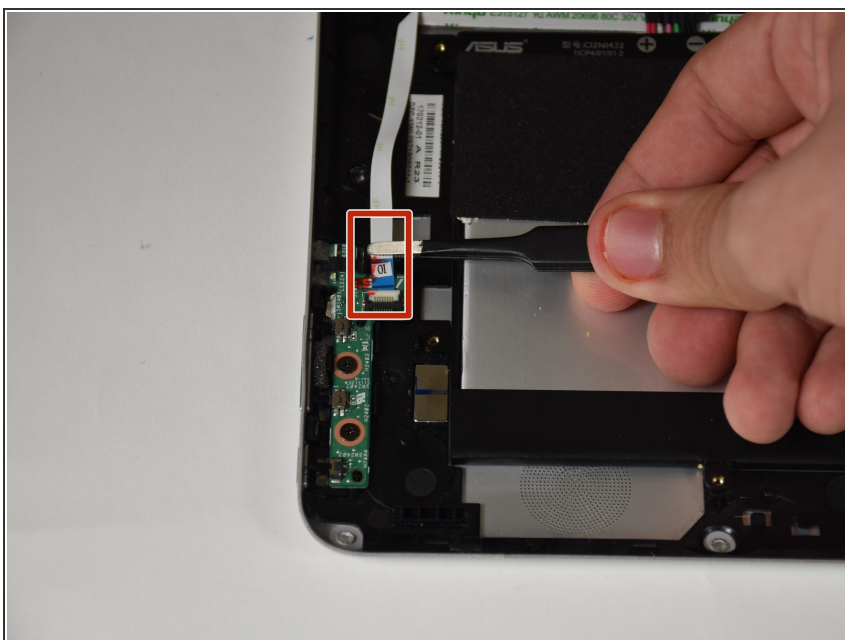


- Use the tweezers to remove the white cable from the volume control component.

Step 7

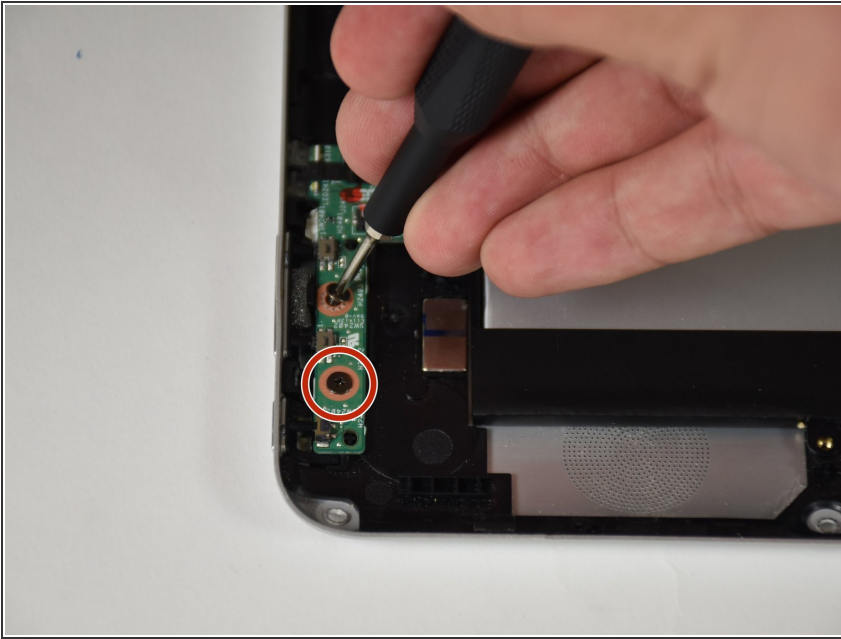

- Remove the two 1.2 mm screws using the J00 size screwdriver.

Step 8

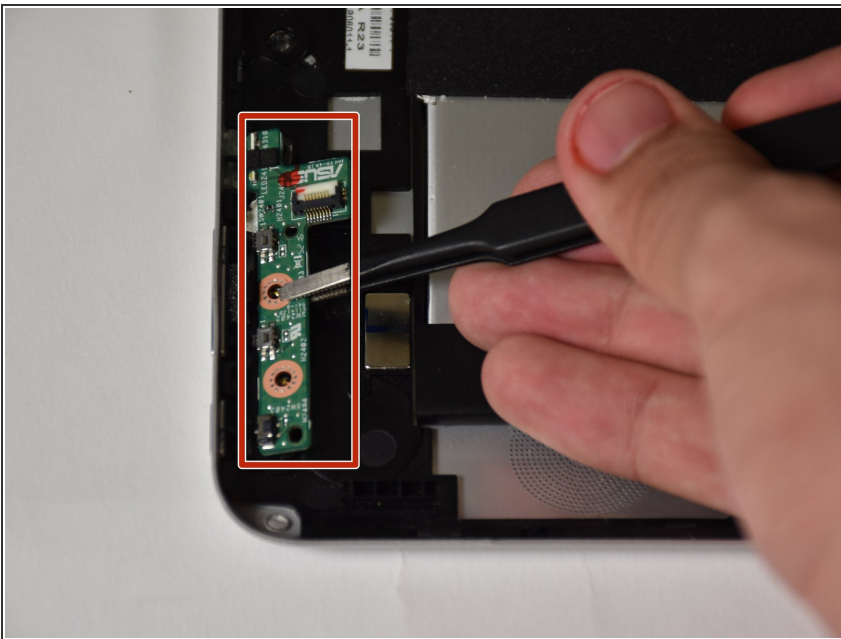

- Grip the component using the tweezers and lift it out of the device.

To reassemble your device, follow these instructions in reverse order.