


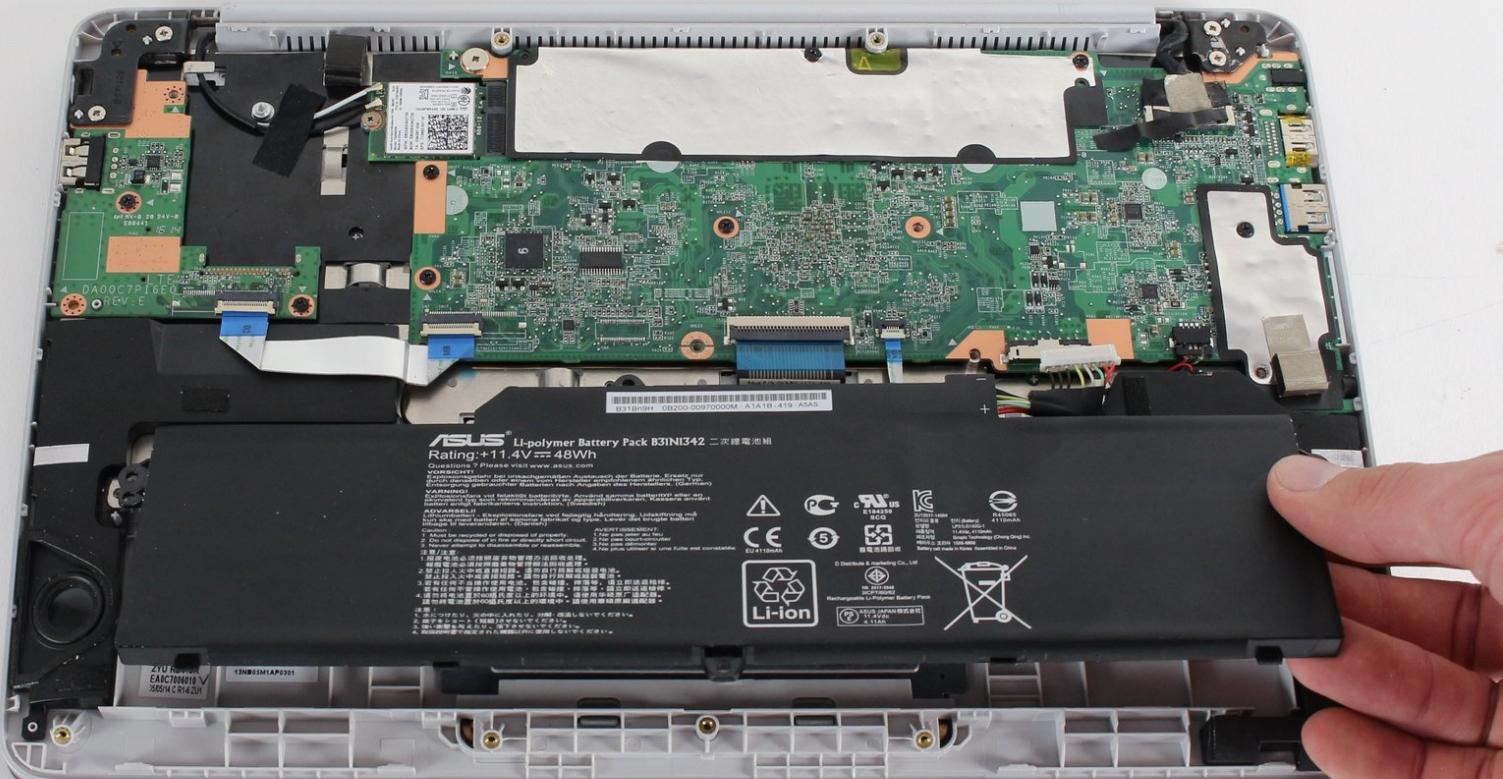

# ASUS Chromebook C200MA DS01 Battery Replacement

Replace your Asus Chromebook C200MA Battery.

Written By: Christopher Lim



## INTRODUCTION

This replacement guide will show you how to access and remove the battery in your Chromebook.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Back Panel



**!** Before proceeding, power down your Chromebook. Close the display and lay it on a soft surface, top-side down.

- Remove the five 8.4 mm Phillips #0 screws.
- Remove the four 4.6 mm Phillips #0 screws.

## Step 2



- Use the plastic opening tool to gently work around the edge of the Chromebook until the back panel starts to lift off.


## Step 3



- Remove the back panel by lifting it away from the Chromebook.


*(i)* Some clicking will be heard as the panel is removed from the back, this is completely normal.

## Step 4 — Battery Connection

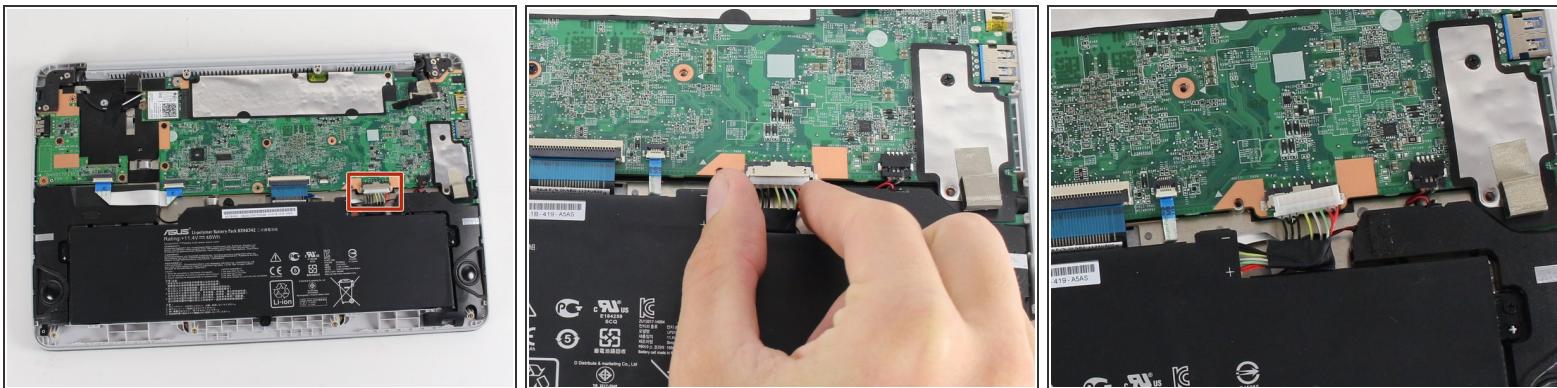


- To disconnect the battery, pinch the multi-color bundle cable with your thumb and forefinger and pull directly back.

## Step 5 — Battery

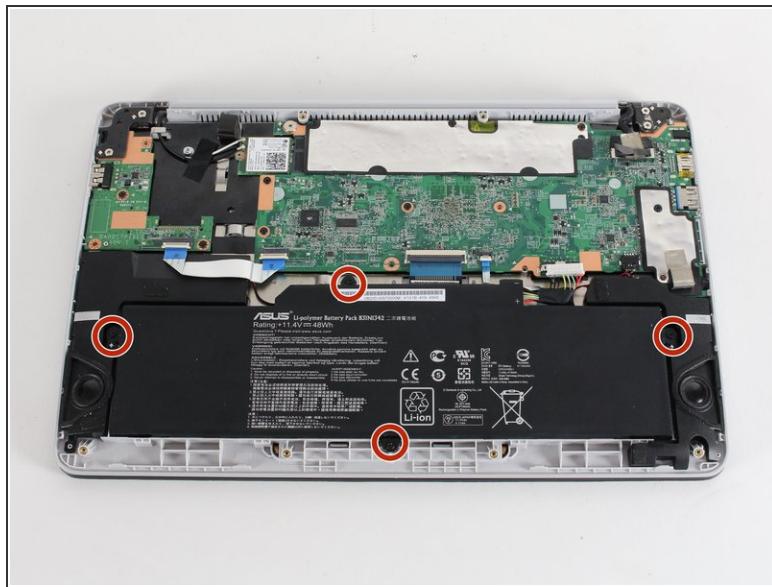

- Remove the four 4.7 mm Phillips #0 screws that secure the battery to the Chromebook.

## Step 6

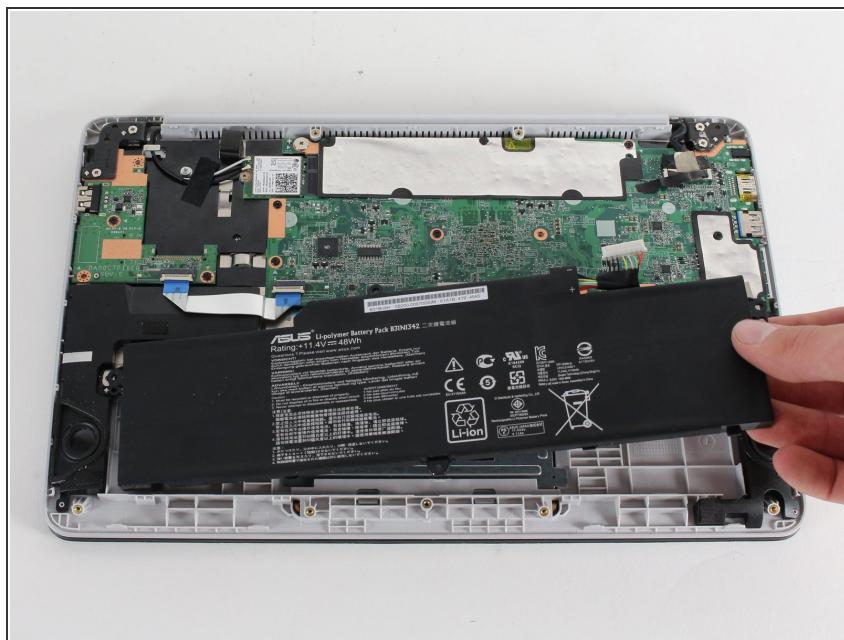

- Pull out the battery.

To reassemble your device, follow these instructions in reverse order.