


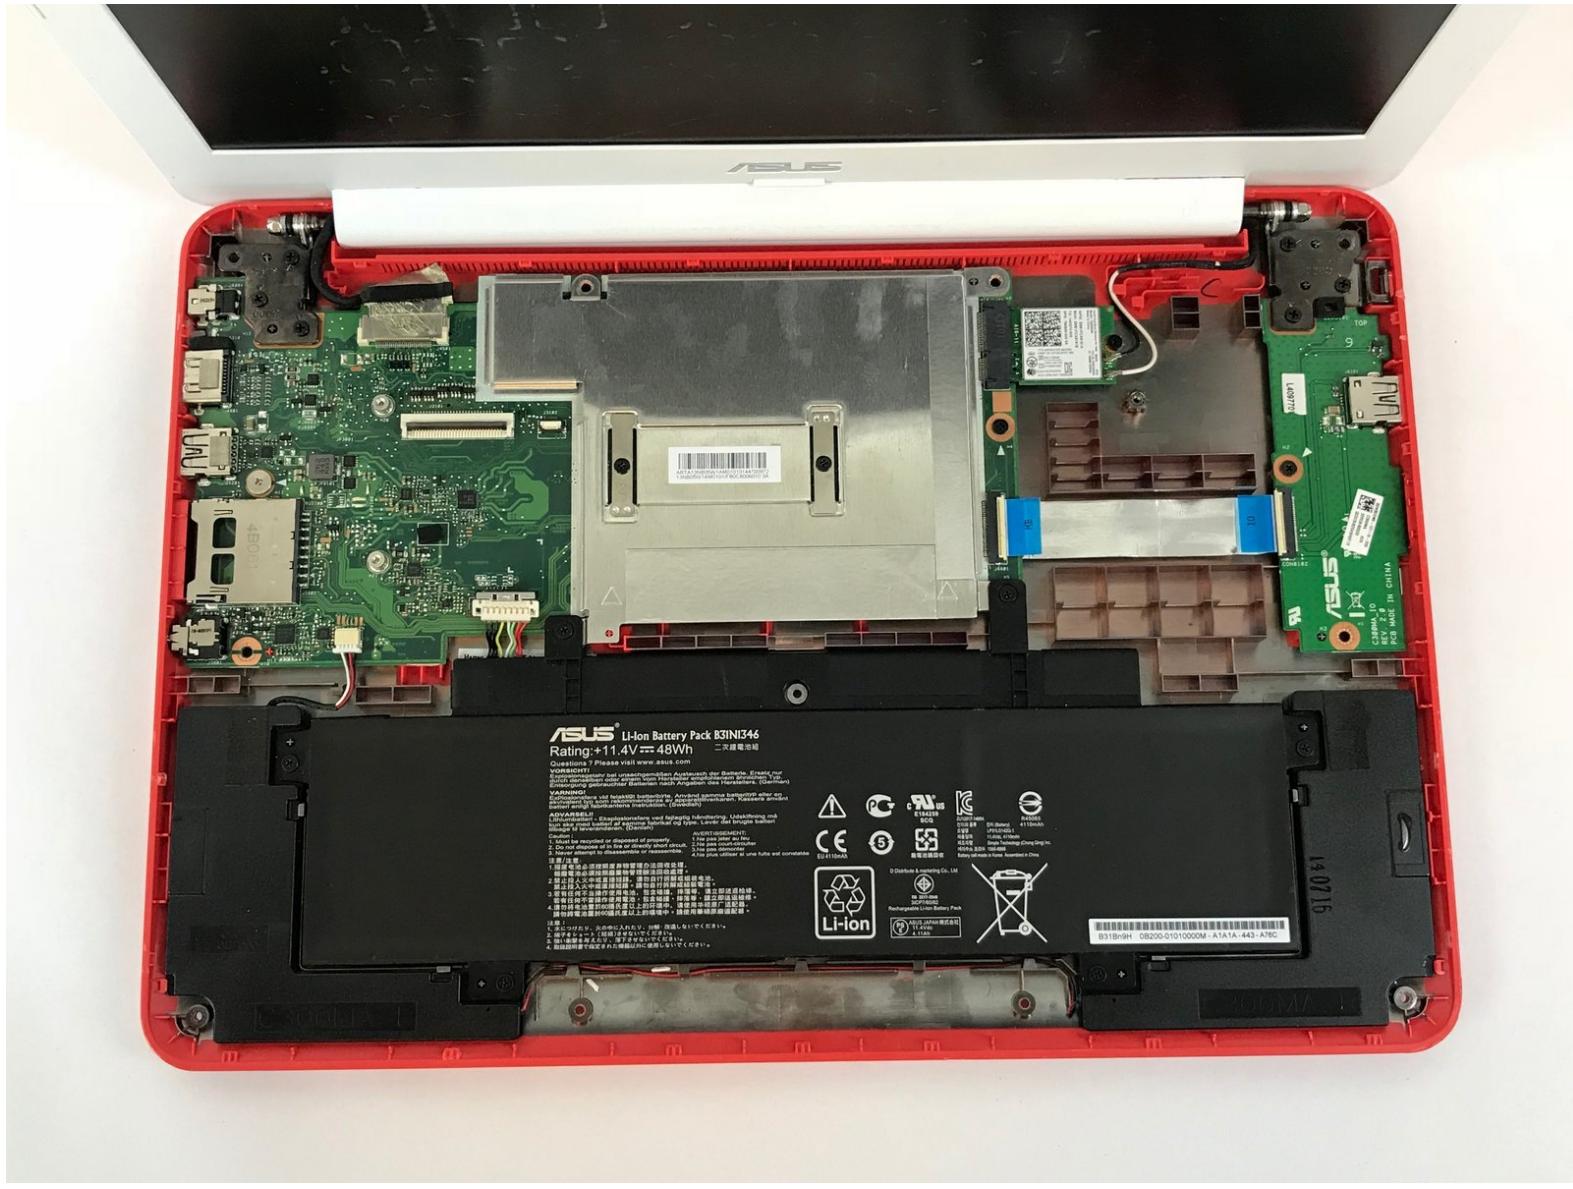

ASUS Chromebook C300MA-DH01 Audio Speakers Replacement

This guide will show you how to replace a broken or defective audio speaker system on the ASUS Chromebook C300MA-DH01

Written By: Gina Altimari



This document was generated on 2019-10-28 02:00:14 PM (MST).

INTRODUCTION

Use this guide to remove the audio speakers in your device.

TOOLS:

- [Spudger \(1\)](#)
- [JIS #0 Screwdriver \(1\)](#)

Step 1 — Audio Speakers



- Flip the Chromebook over so the bottom of the device is facing up.

Step 2




- Using the JIS-J0 Screwdriver, remove the following screws from the bottom:
 - (5) Five 6mm screws
 - (6) Six 8mm screws

Step 3



- Gently wedge the spudger in between the bottom of the device and the keyboard, and carefully pry the cover open. Then, carefully lift up on keyboard.


Step 4

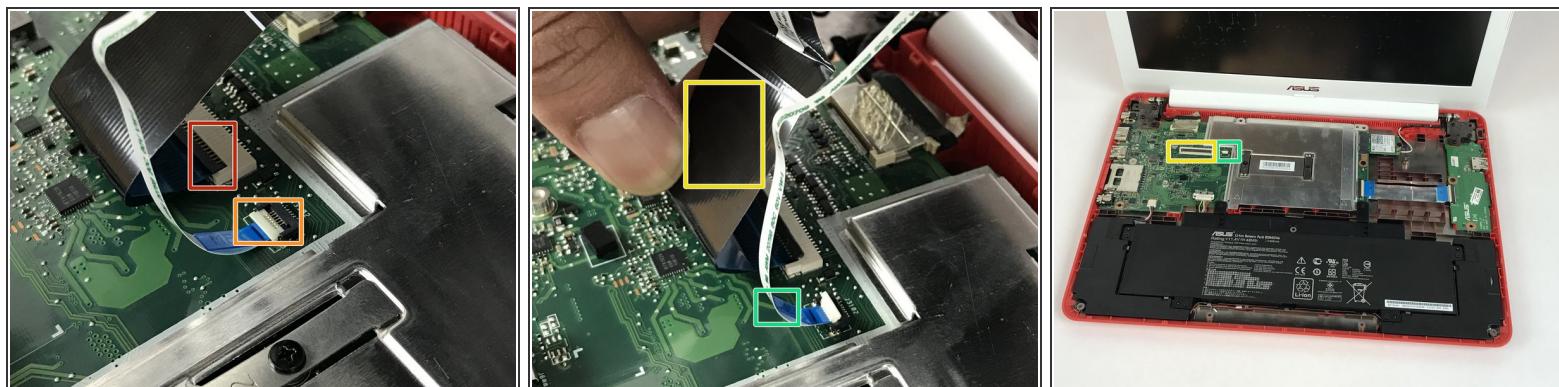

- Gently detach connecting cables
- Carefully flip up the large black tab.
- Carefully flip up the small white tab.
- Remove its corresponding black cable.
- Remove the corresponding white cable.


● The keyboard will be fully detached at this point.

Step 5

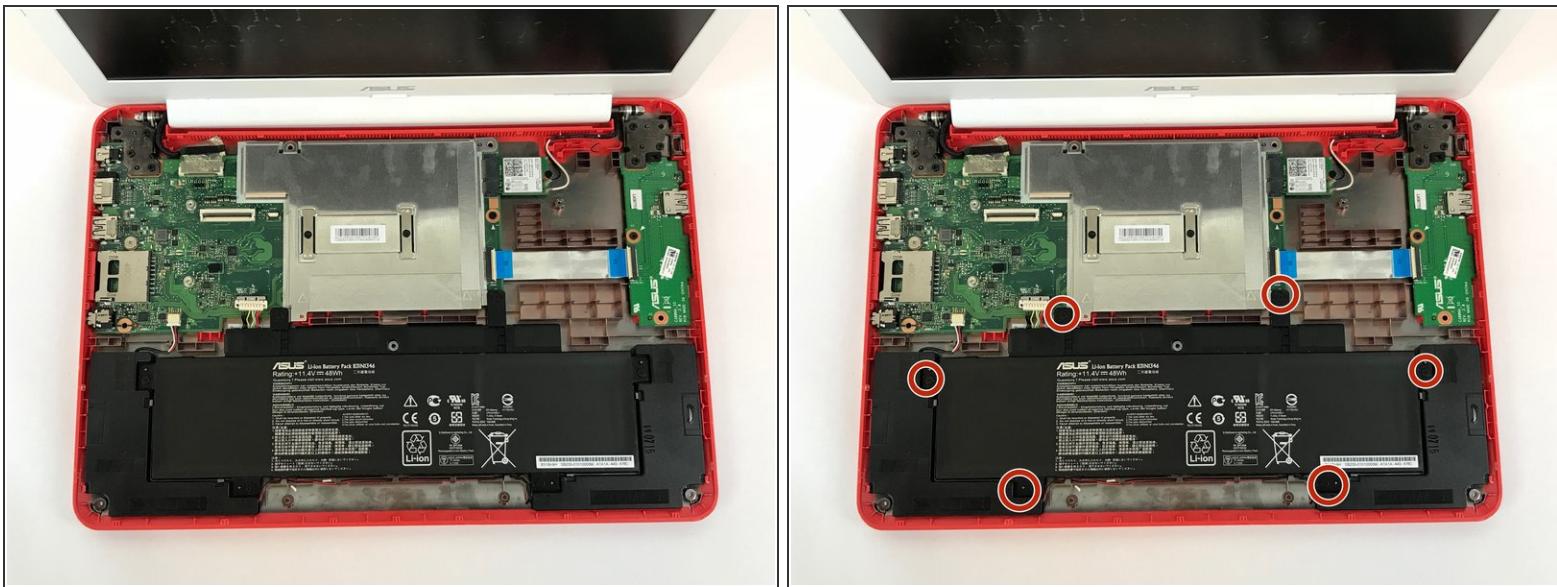


- Using the JIS-J0 screwdriver, unscrew and remove from the battery:
 - (6) Six 6mm screws

Step 6

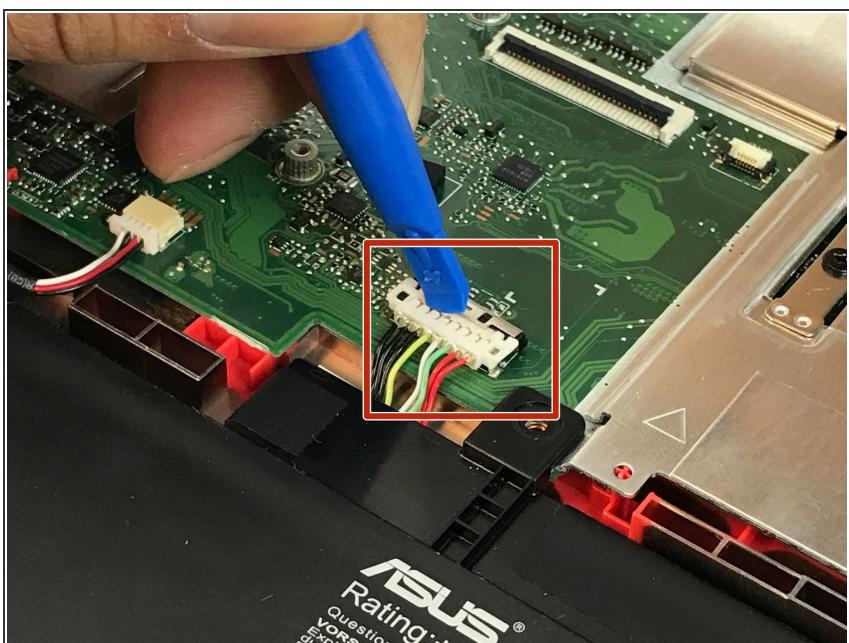

- Using the plastic opening tool, gently push the connector tab away from the battery to detach the cable.
- *i* The battery will be fully detached at this point. Carefully lift it out of the device.

Step 7

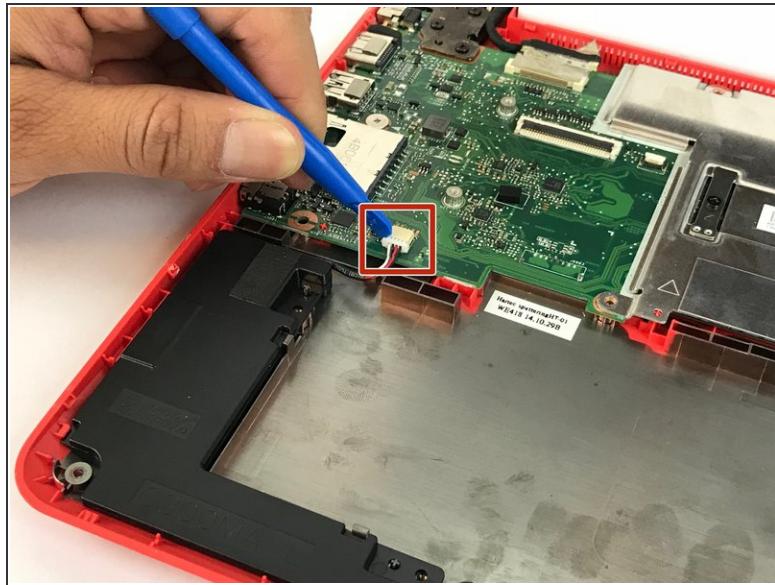

- Using the plastic opening tool, disconnect the audio connector by pushing the audio tab toward the speakers.
- With the audio cable detached, carefully lift the speakers out of the device.

To reassemble your device, follow these instructions in reverse order.