



# ASUS Eee PC 1018P Battery Replacement

Swap out an old battery that either won't take or won't keep a charge like it used to.

Written By: Daniel Rodman



## Step 1 — Battery



- Lay the laptop flat on a hard surface with the bottom facing up and the battery pack on the side closest to you.

## Step 2



- Use both index fingers to push both spring tabs inwards towards the center of the laptop.

## Step 3



- With the spring tabs pressed inward, use your fingernails to lift of the edge of the battery, pivoting it up and towards you.
- Pull the battery pack up and away from you to completely free it from its recess in the case.

To reassemble your device, follow these instructions in reverse order.