




ASUS Eee Pad Transformer Speakers Replacement

How to properly replace the speakers in an ASUS Eee Pad Transformer.

Written By: Rillian Dennis

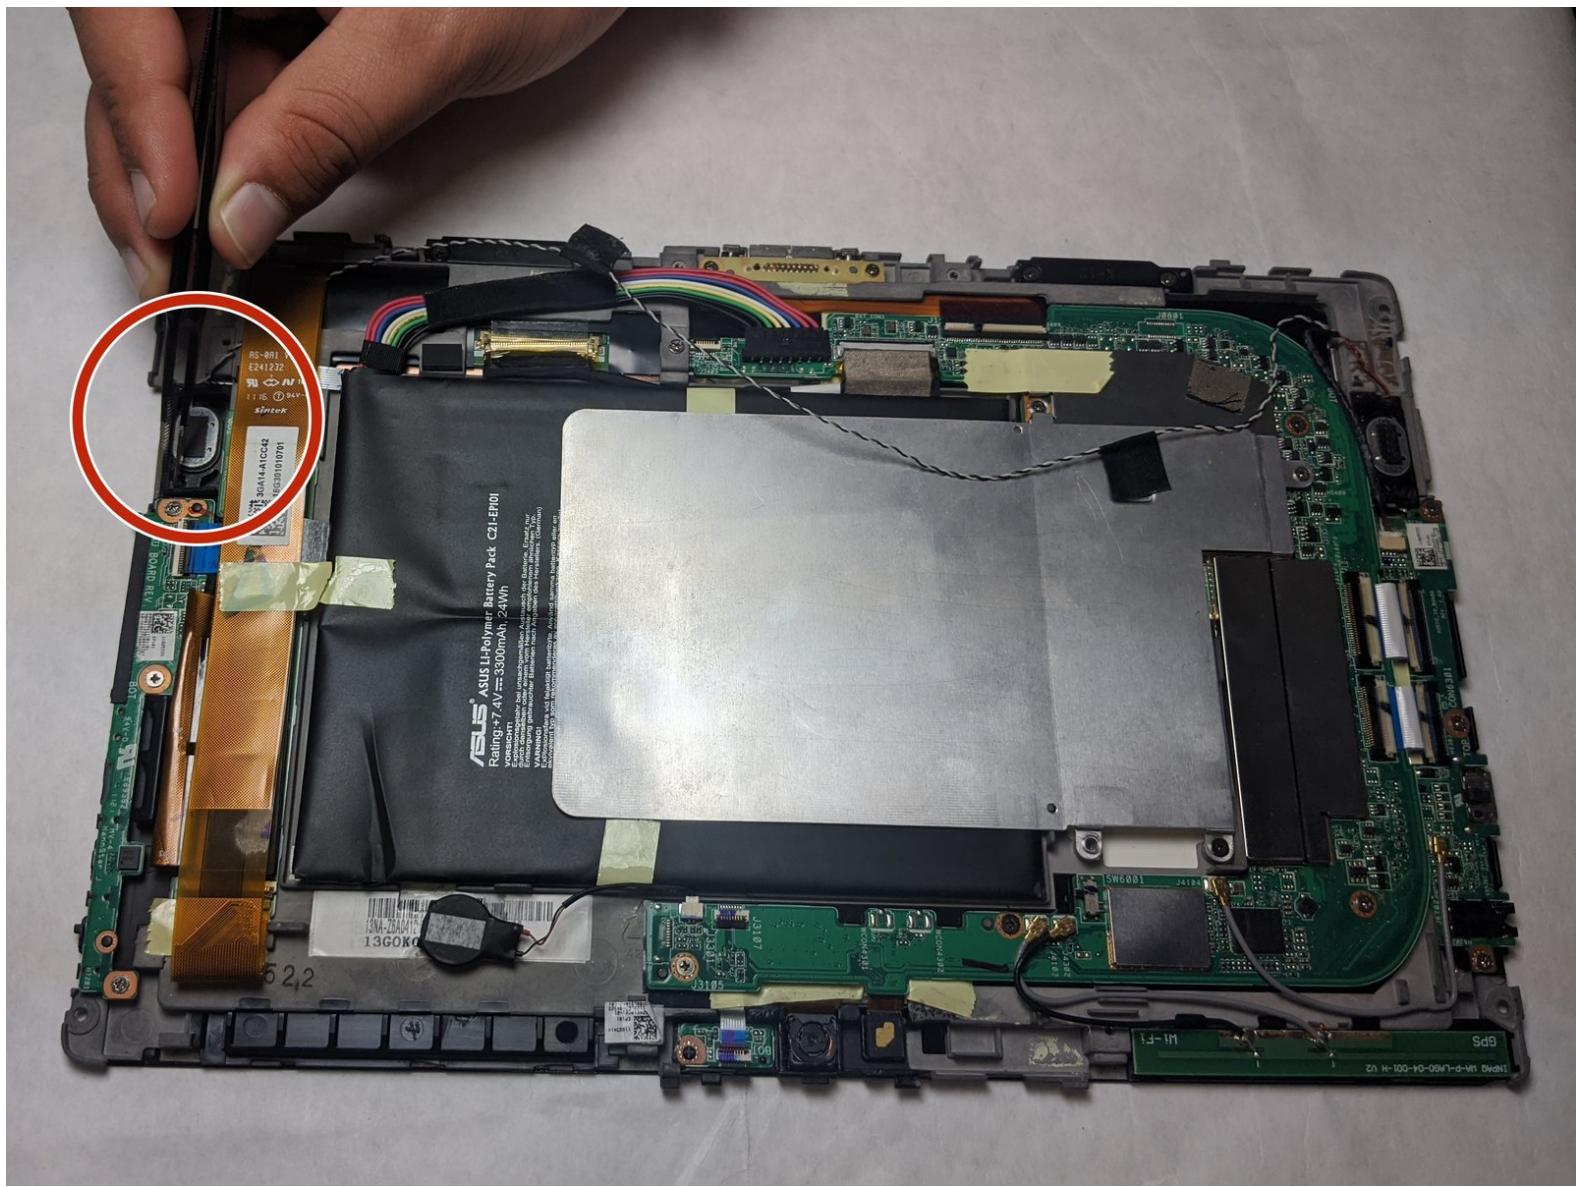

INTRODUCTION

Are the speakers in your ASUS Eee Pad Transformer no longer producing sound? If so, they need to be replaced. Here is the guide to replace the speaker set. All you need is a Phillips #0 Screwdriver and T5 Torx Screwdriver to remove the screws, a Plastic Opening Tool to remove the plastic border, and tweezers to remove the speakers and connection wire.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [T5 Torx Screwdriver](#) (1)

Step 1 — Back Panel



- Use T5 Torx Screwdriver to remove two 4.5 millimeter T5 screws on either side of the port on the bottom of the tablet.

Step 2



- Use the Plastic Opening Tool to pry between the main tablet body and the outer rim casing. Remove the outer rim casing by prying all the way around the device and pulling the rim upward.


ⓘ The physical buttons are located on the outside of the rim on the right side, proceed with the guide to locate internal buttons.

Step 3




- Remove the four 2 millimeter Phillips #00 screws at the corners of the tablet.

Step 4

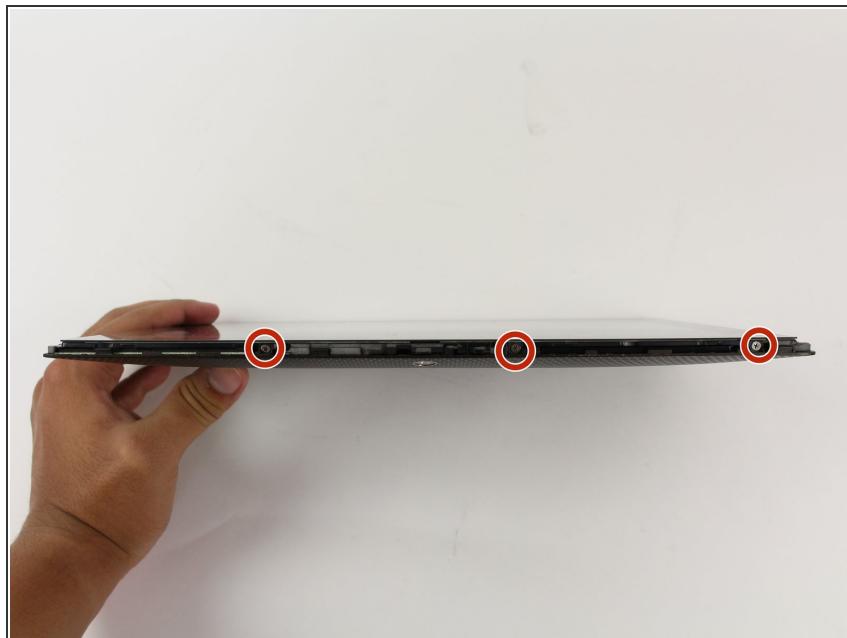

- Use a Phillips #00 Screwdriver to remove the three 3 millimeter screws securing the front panel to the back panel found above the camera area, on the top portion of the tablet.

Step 5

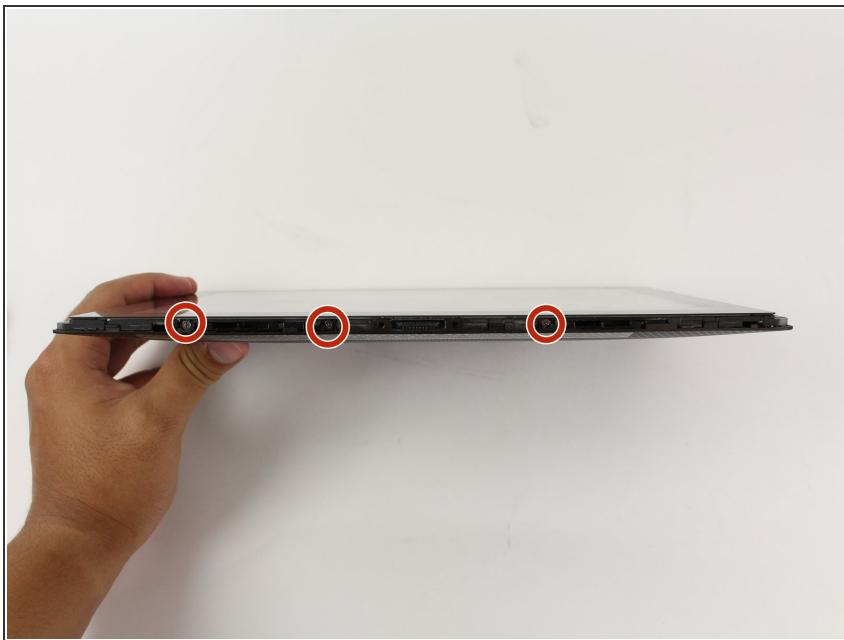



- Use a Phillips #00 Screwdriver to remove the three 3 millimeter screws securing the front panel to the back panel found on the bottom portion of the tablet near the port.

Step 6





- Remove back panel by pulling away from the remaining device.

Step 7 — Speakers

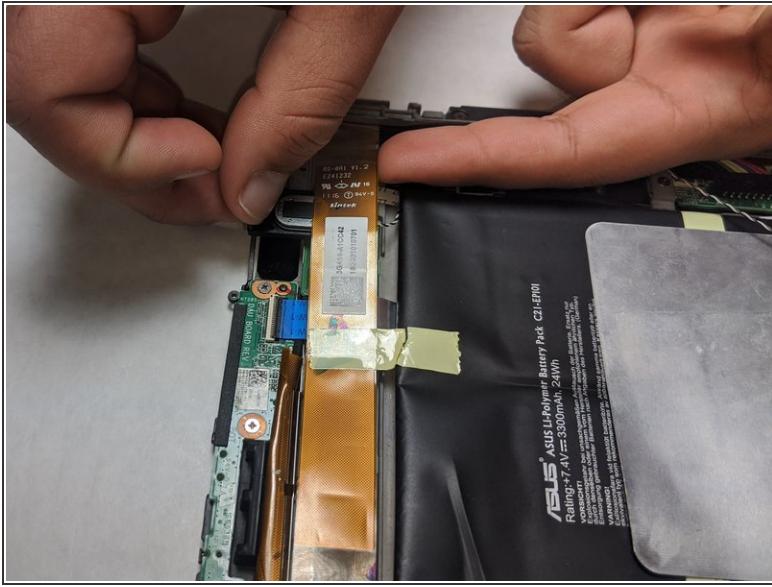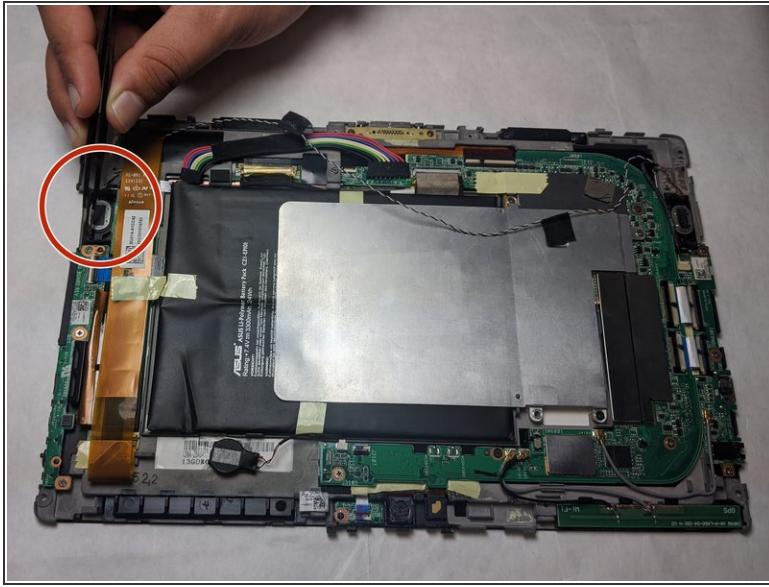



- Use the tweezers to grab onto the speaker and lift gently up until the speaker is removed.
- Use your fingers to gently slide the speaker under the orange strip.

Step 8

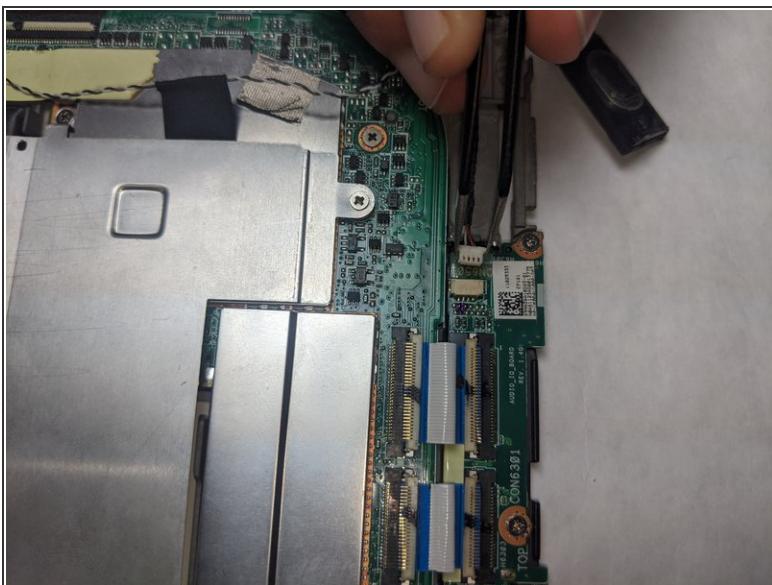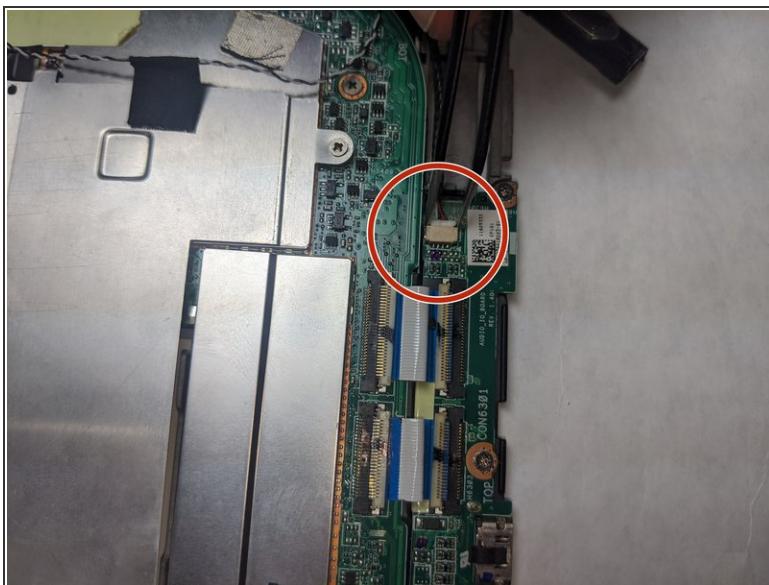

- Use the tweezers to disconnect the speakers from the motherboard.

Step 9

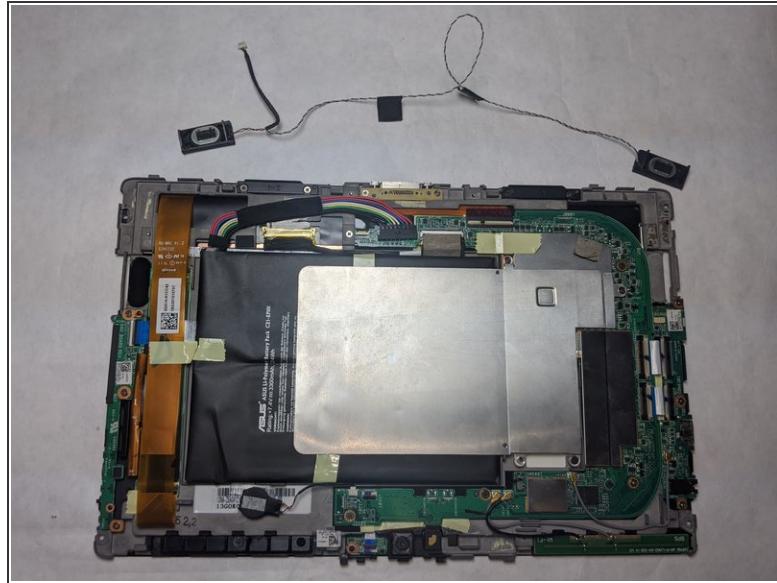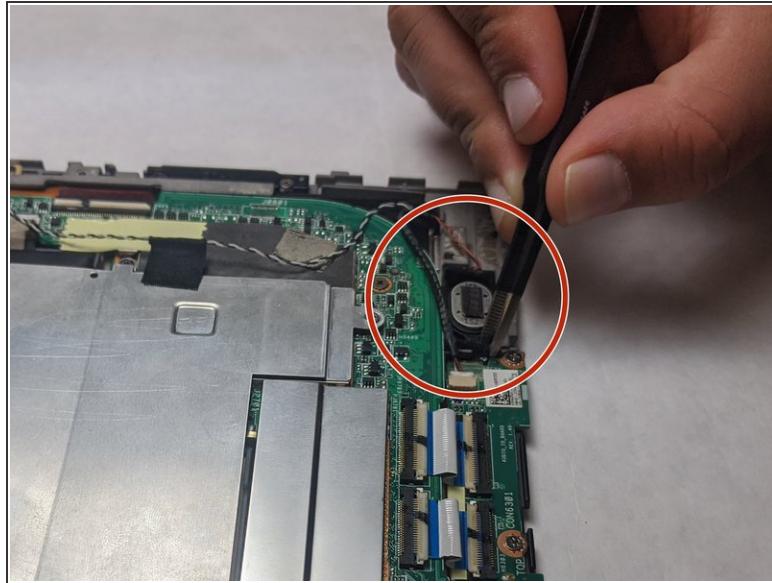

- Use the tweezers to grab onto the speaker and gently lift it up until the speaker is removed from the device.

To reassemble your device, follow these instructions in reverse order.