




ASUS G73JH-BST7 SD Hard Drive Replacement

This guide will advise the operator how to replace the SD Hard Drives on the ASUS G73JH-BST7.

Written By: Deven Rodgers

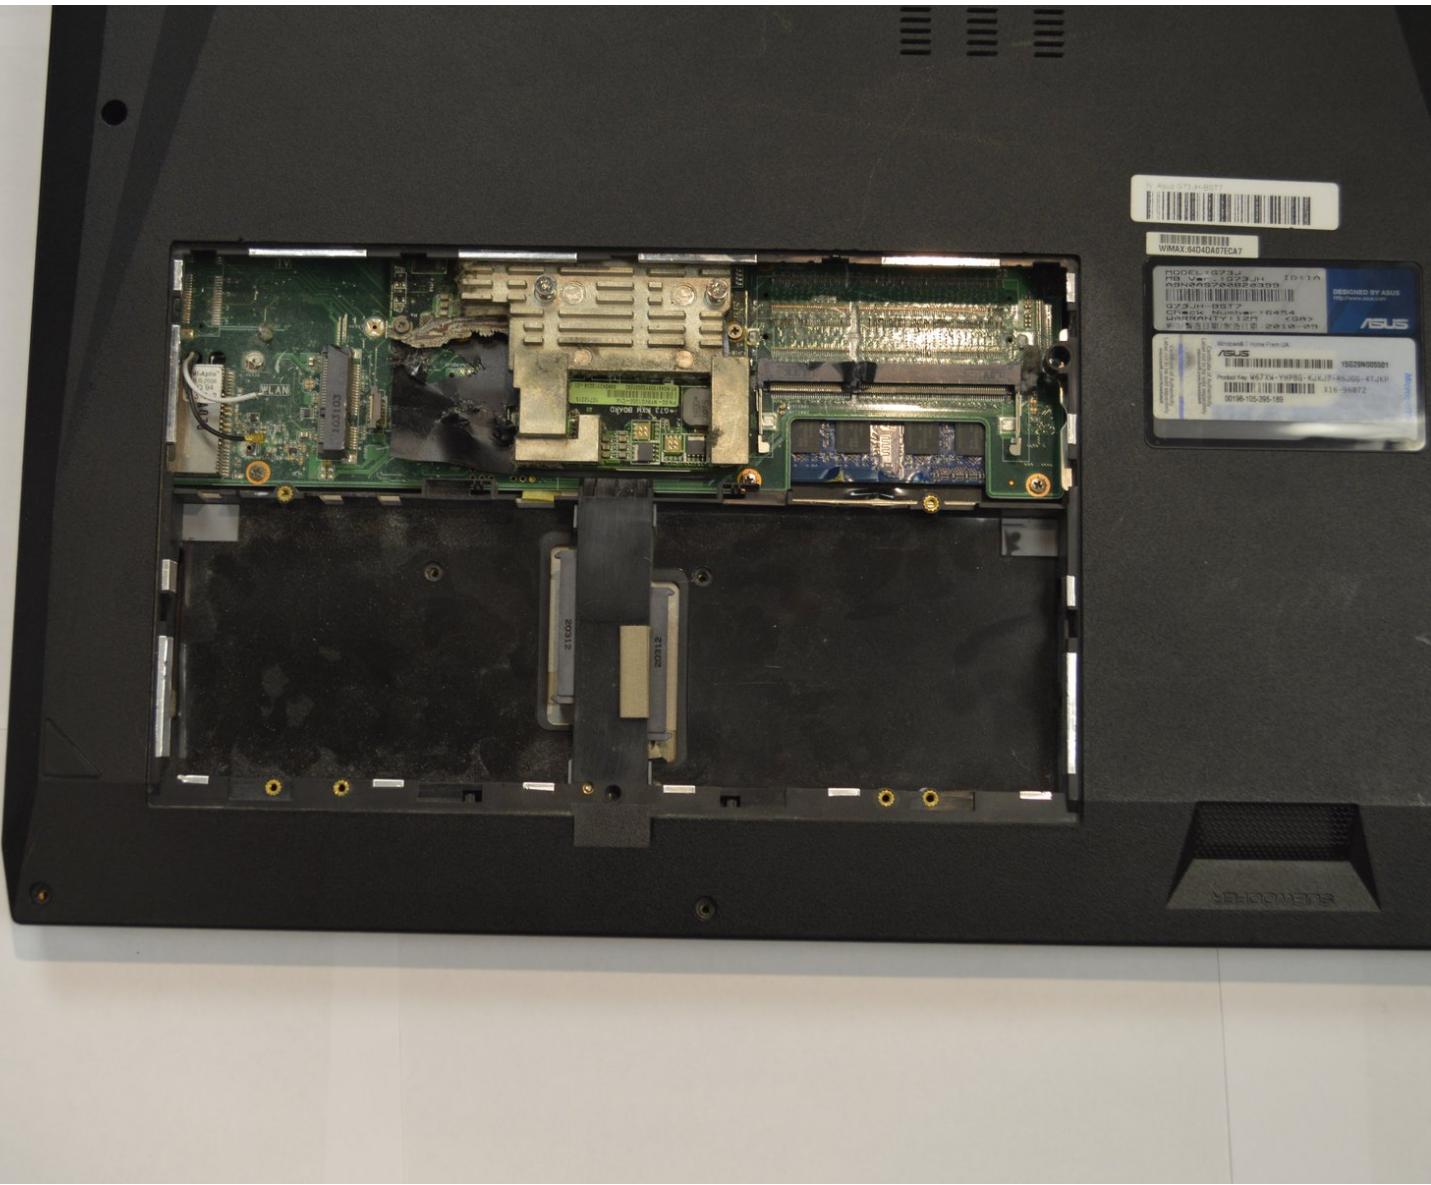

INTRODUCTION

If your computer is making unusual sounds, freezing, showing error messages, or showing a blue screen this may mean you need to replace your hard drive. Replacing the hard drive will increase the life span of your computer without it the computer will crash.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Flip the computer over, so that the bottom is facing up.

Step 2

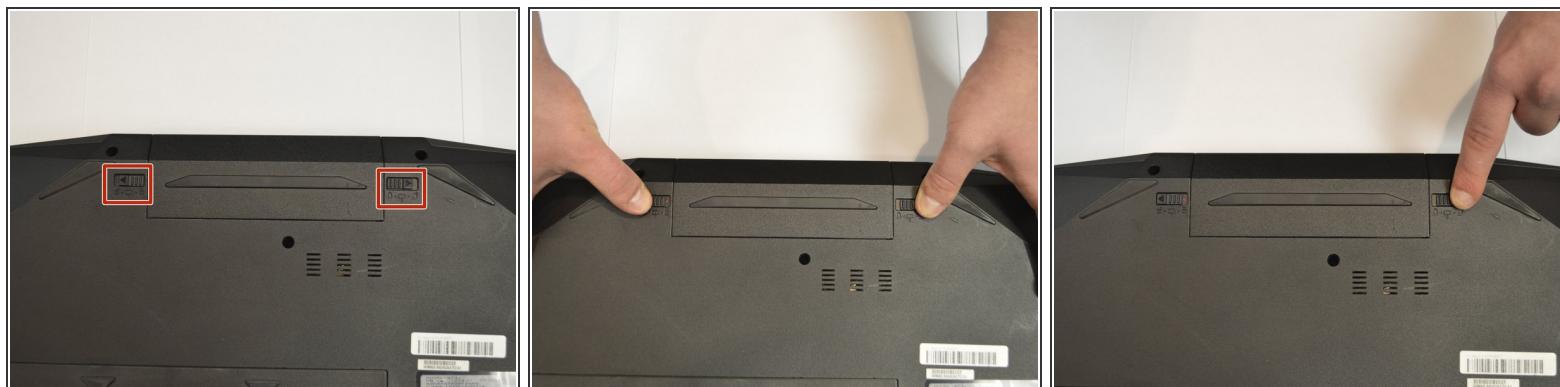

- Slide the two tabs away from the battery.

(i) The left tab will lock, but the right tab must be held away from the battery.

Step 3



- Use one hand to hold the non-locking tab in place, and use your other hand to pull the battery away from the computer.

Step 4 — Back Panel



- With the bottom of the computer facing up, remove the two 7.1 mm screws using a Phillips #00 screwdriver.

Step 5



- Carefully pry the panel away from the computer, by lifting with a finger.
- There is a small tab where a finger will fit to lift the panel away from the computer.

Step 6 — SD Hard Drive



- Gently pull on the tabs to lift the SD Hard Drives out of the computer.

To reassemble your device, follow these instructions in reverse order.