




# ASUS GL752VW-DH74 Battery Replacement

This guide provides instructions for the replacement of the Asus GL752VW-DH74 battery.

Written By: Maxwell Seibert

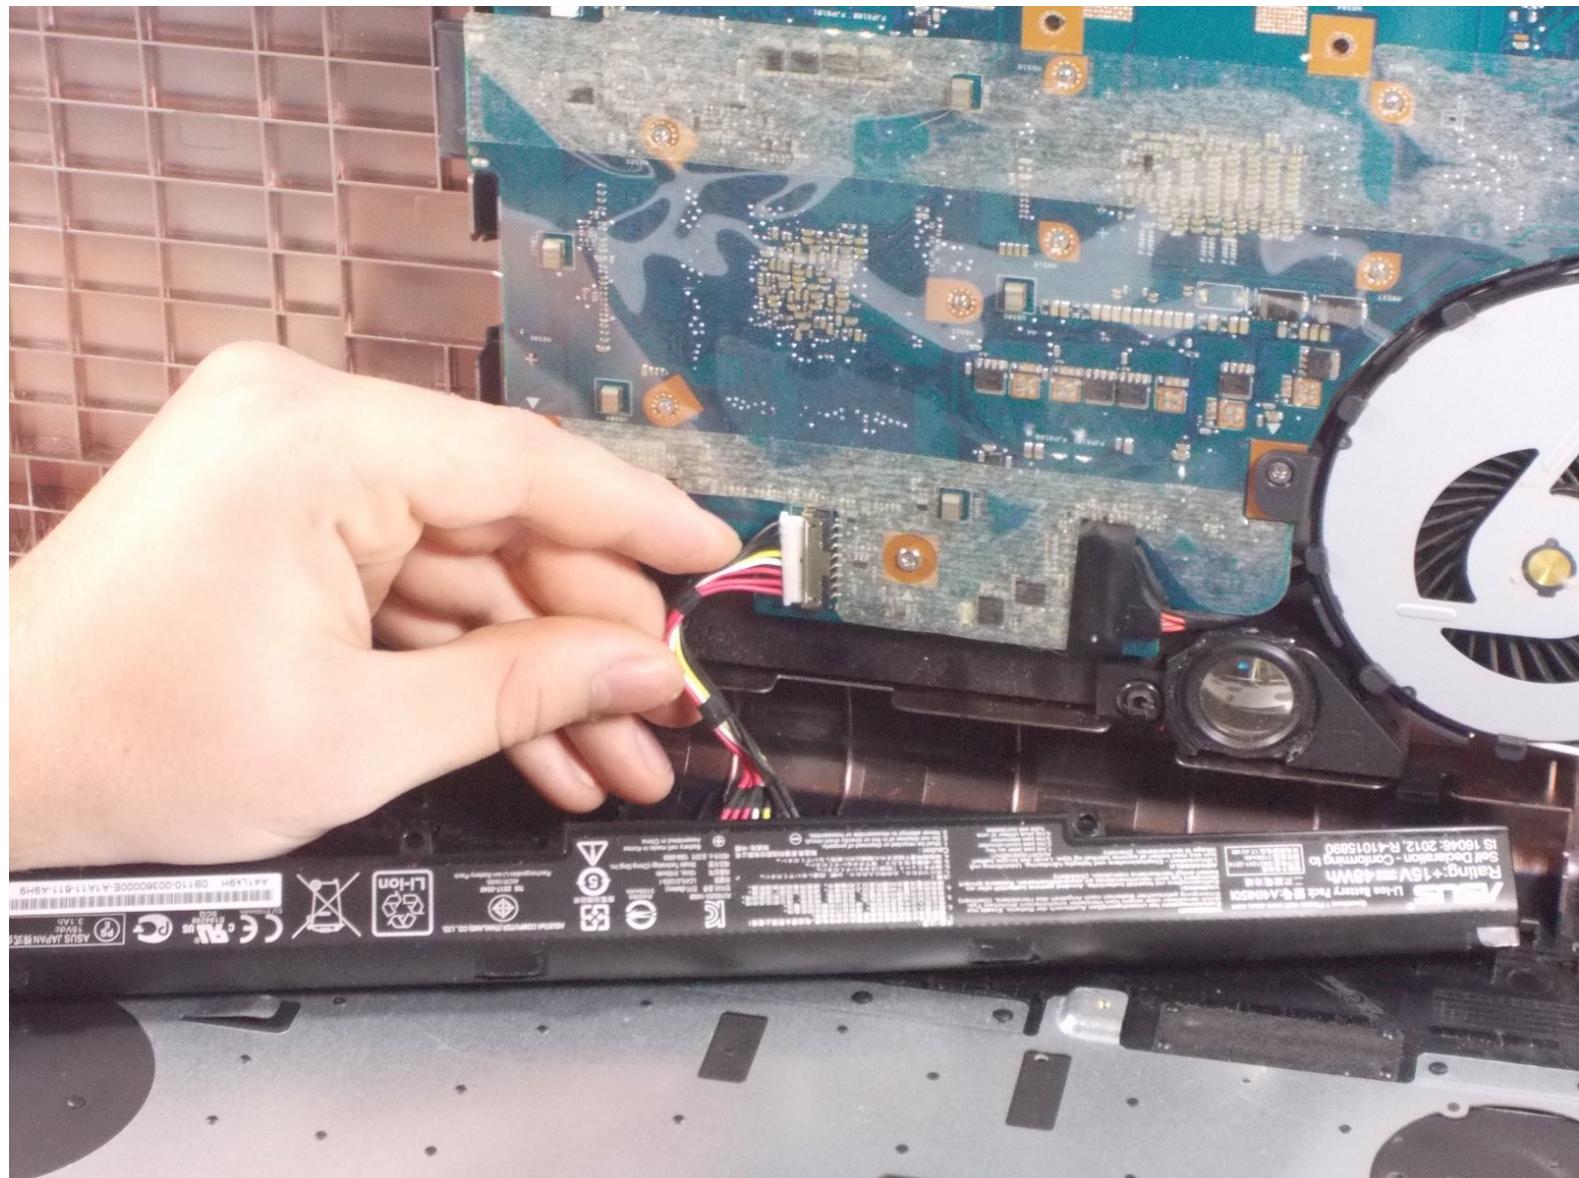

## INTRODUCTION

This guide provides instructions for the replacement of the Asus GL752VW-DH74 battery.

### TOOLS:

- Spudger (1)
- SIM Card Eject Tool (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

### PARTS:

- [Asus GL752VW Replacement Battery](#) (1)

## Step 1 — Optical Drive



- Begin by putting the needle into the hole in the disk tray.

## Step 2



- Use the spudger to help ease out the disk drive.

## Step 3



- Pull out disk tray entirely.

## Step 4 — Battery



- Remove the 3 small screws located underneath the disk drive.

## Step 5



- Unscrew the 8 remaining .8 cm phillips head screws on the back of the device (circled in red).

## Step 6




- Use the opening tool to pry the back of the laptop case from the top

## Step 7




- Disconnect the 3 cables connecting the motherboard to the keyboard.

## Step 8

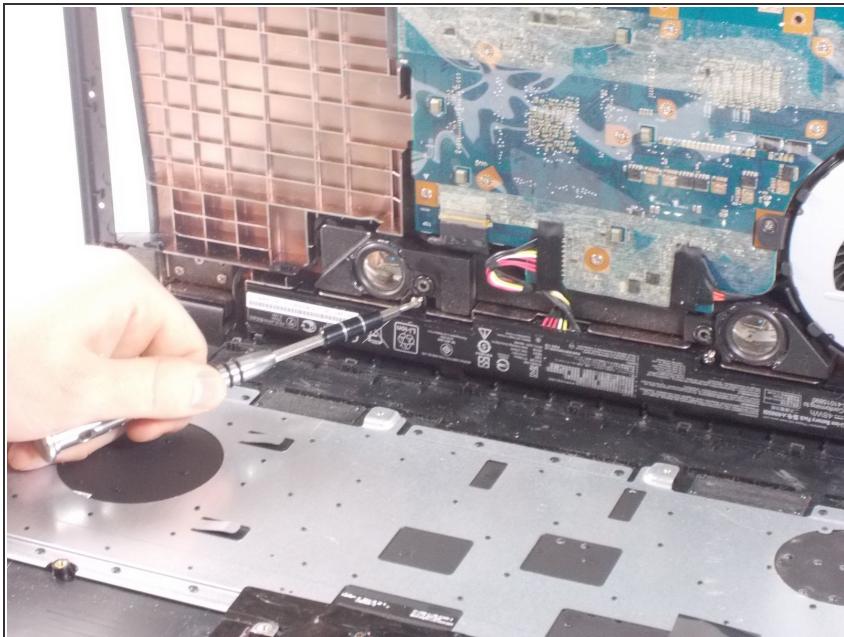

- Unscrew the two 8mm screws attached to the battery

## Step 9

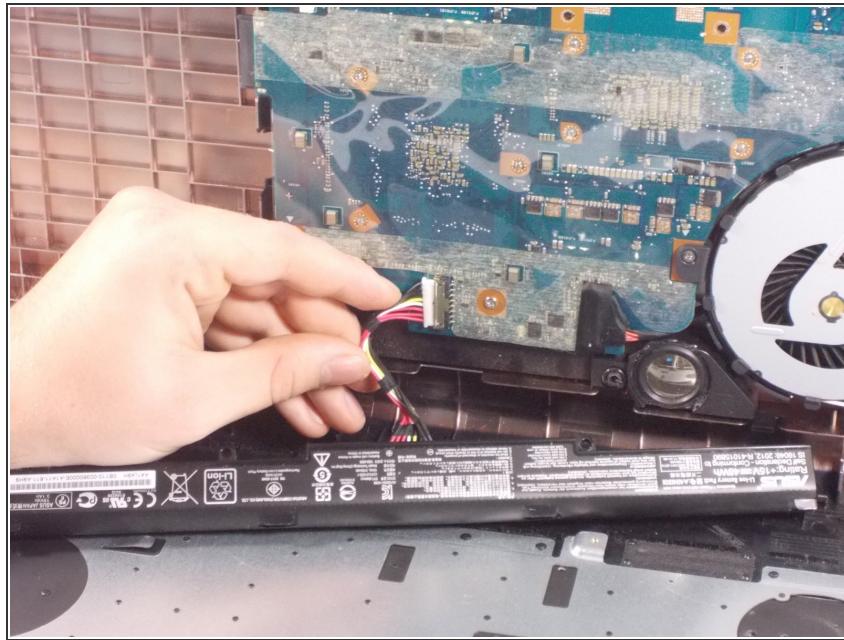

- Disconnect the bundled cable connector and remove the battery.

To reassemble your device, follow these instructions in reverse order.