



ASUS GL752VW-DH74 Keyboard Replacement

This guide will demonstrate how to remove and replace the keyboard for your laptop.

Written By: Ryan Maitland



INTRODUCTION

This guide will demonstrate how to remove and replace the keyboard for your laptop.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)
- [SIM Card Eject Tool](#) (1)

Step 1 — Optical Drive



- Begin by putting the needle into the hole in the disk tray.

Step 2




- Use the spudger to help ease out the disk drive.

Step 3



- Pull out disk tray entirely.

Step 4 — SSD

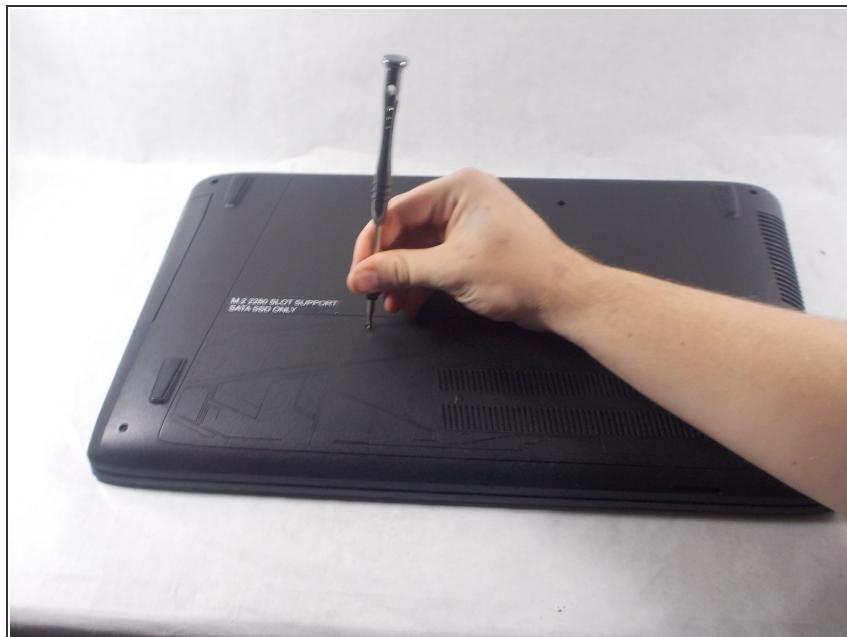

- Unscrew both 8mm phillip's head screws that hold on the access gate.

Step 5




- Use either your finger, the screw driver, or a spudger to pop out the gate.

Step 6



- From here, you can access the harddrive, motherboard, SSD, and RAM.


Step 7

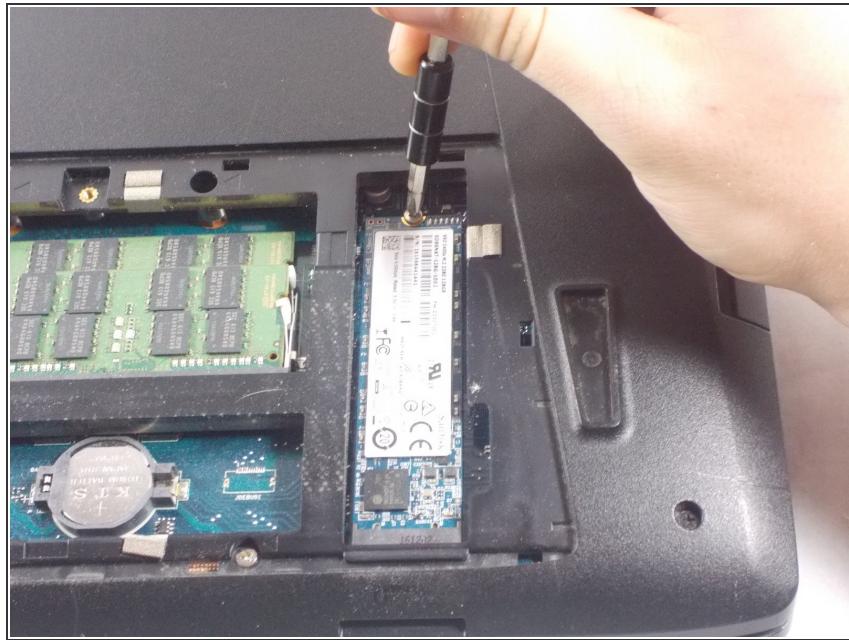

- Remove the 4mm screw holding in the SSD.

(i) Note that the screw is holding it down so it will pop up once the screw is removed.

Step 8

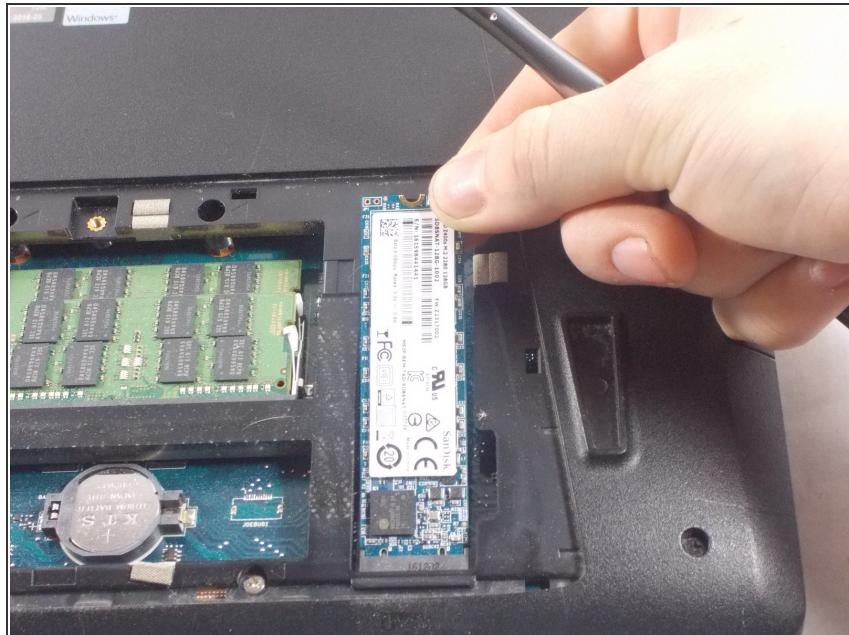

- Remove SSD from slot.

Step 9 — Keyboard



- Remove the three screws from the disk drive.

Step 10



- Remove all screws located under the panel as seen in the ram replacement guide. (8 in total)

Step 11



- Remove the 6 screws located on the outer shell of the laptop.

Step 12




- Use the blue spudger to ease off the outer shell of the laptop going around the three frontal edges.

Step 13




- Gently crack open the outer shell until the white, gold and silver power strips are visible. Proceed by removing the strips from the bottom side of the laptop.

Step 14

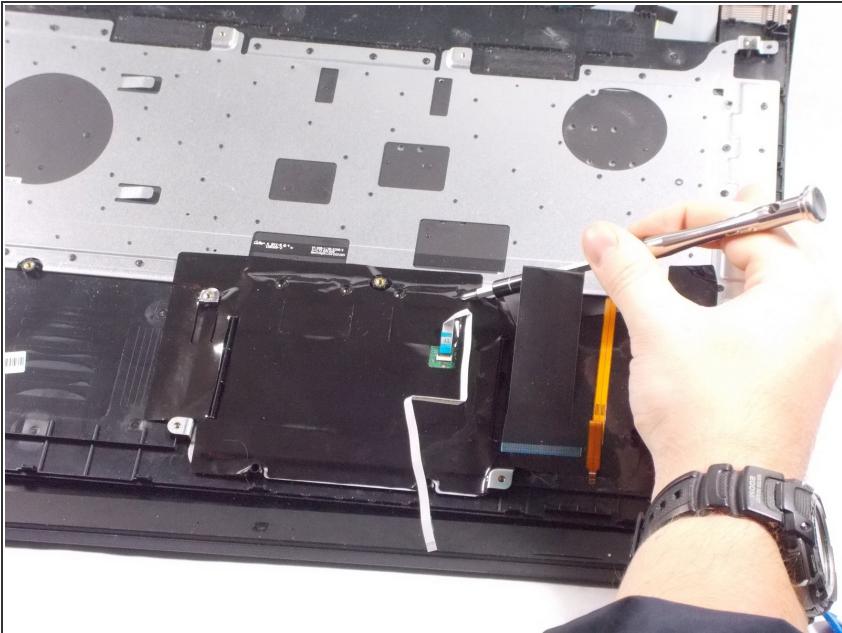



- Open the inner laptop and remove the two screws located in the picture.

Step 15

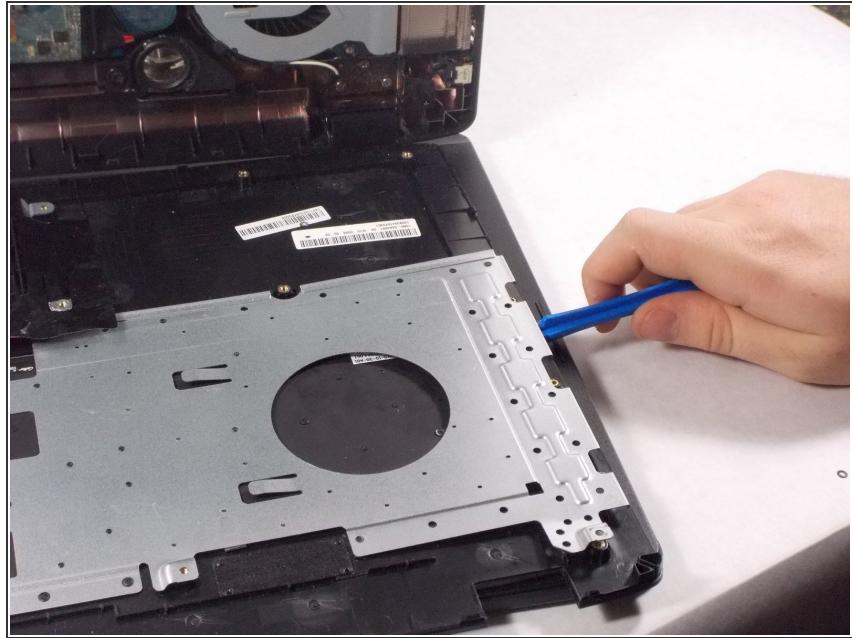

- Gently pop open the keyboard cover by using the spudger.

Step 16

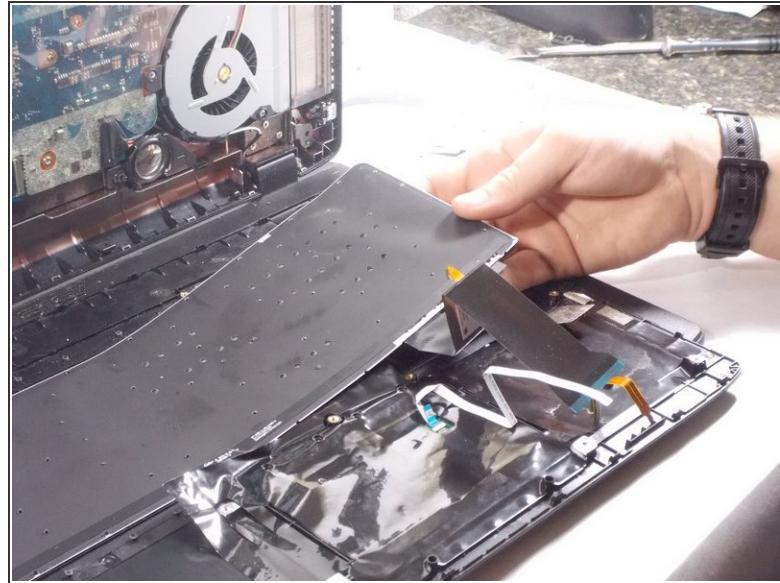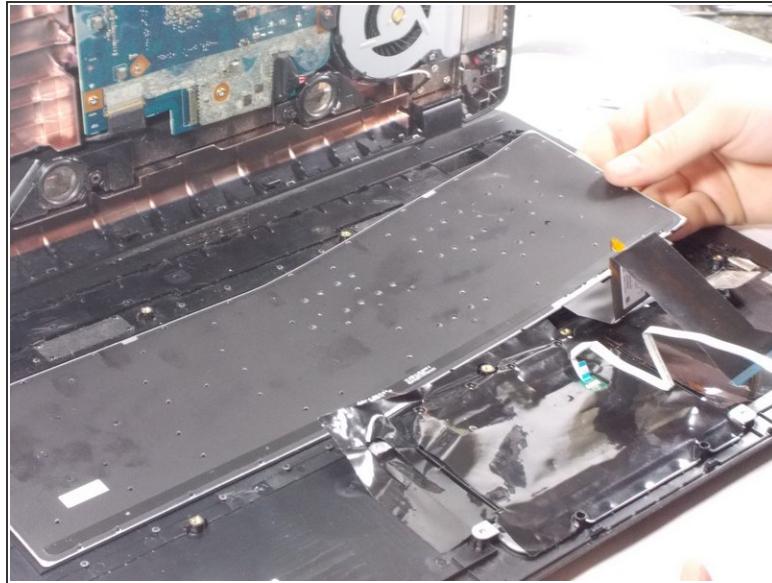

- After removing the metal keyboard cover proceed by removing the keyboard.

To reassemble your device, follow these instructions in reverse order.