



ASUS GL752VW-DH74 Optical Drive Replacement

Occasionally the optical drive can malfunction, jam, or break. This guide will show you how to remove the disk drive.

Written By: Ralph Lopez



INTRODUCTION

This guide will demonstrate how to remove and replace the optical drive, should it ever malfunction, break, or jam.

TOOLS:

- [Spudger \(1\)](#)
- [SIM Card Eject Tool \(1\)](#)

Step 1 — Optical Drive



- Begin by putting the needle into the hole in the disk tray.

Step 2



- Use the spudger to help ease out the disk drive.

Step 3



- Pull out disk tray entirely.

To reassemble your device, follow these instructions in reverse order.