



# ASUS K50IJ Battery Replacement

This is an ASUS K50IJ battery replacement.

Written By: Andrew Anderson



## INTRODUCTION

Batteries get old and stop holding a charge. This guide will show you how to remove and replace that bad battery.



## PARTS:

- [Asus K50IJ Laptop Battery \(1\)](#)

## Step 1 — Battery



- Slide the tab over to unlock the battery cover located on the bottom-left corner of the laptop.

## Step 2



- Lift the exposed lip and remove the battery cover.

## Step 3



- Press the tabs on the battery and lift them. The battery should come out easily.

To reassemble your device, follow these instructions in reverse order.