



ASUS K53E-BBR1 RAM Replacement

This guide will show you how to replace the RAM in your ASUS K53E-BBR1 laptop.

Written By: William Colangelo



INTRODUCTION

This guide will tell you how to open up your laptop and replace your RAM. It is relatively simple and only requires a screwdriver.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Battery



- Flip the laptop over so you can see the battery.

Step 2



- Slide the lock on the right side of the battery to the right. If done correctly the slider will stay in place and there will be a red indicator.

Step 3




- Slide the other sliding lock on the left side of the battery to the left, and with your other hand slide the battery out from the laptop.

Step 4 — RAM




- Remove the two 4mm Phillips #0 screws located on the opposite ends of the laptop.

Step 5

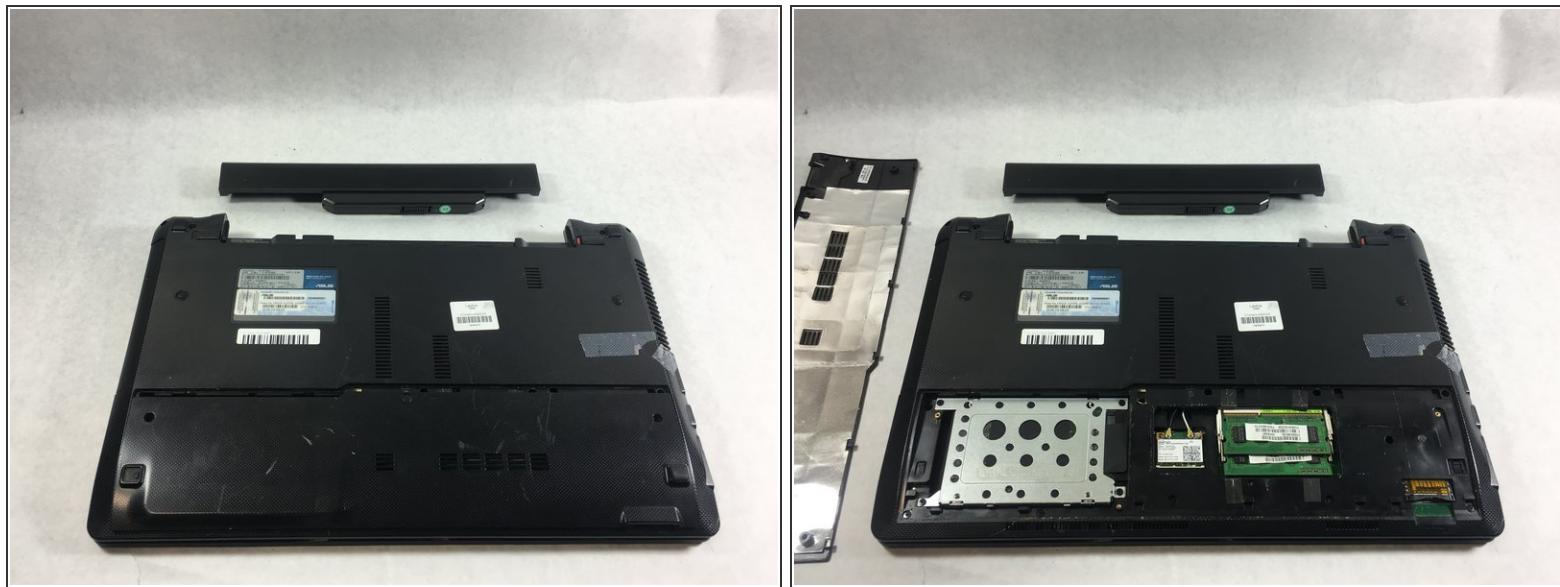


- Slide the back panel backwards until it stops.
- You can now lift the panel up and out of the laptop casing.

Step 6

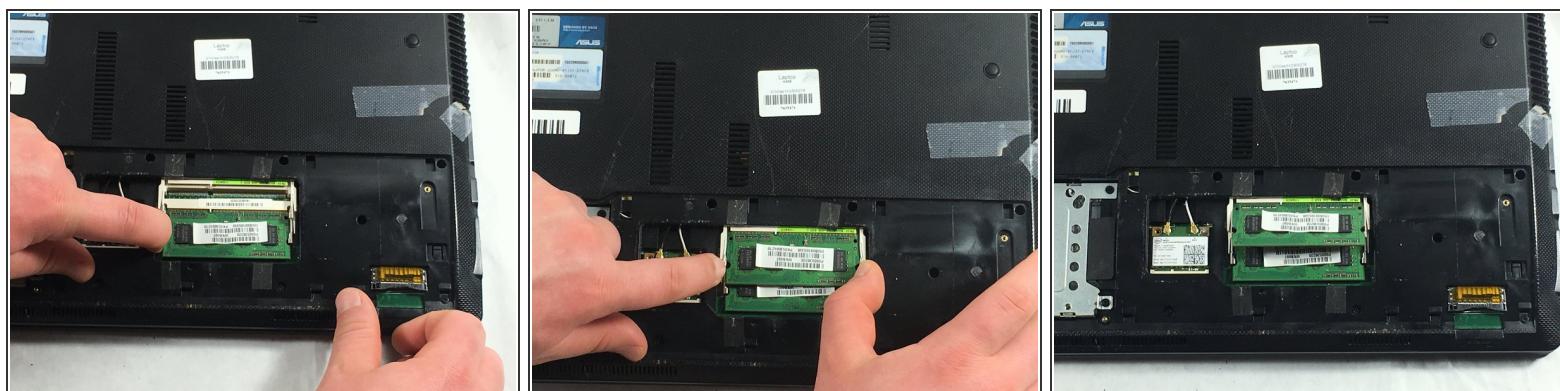

- The RAM is now visible.
- Remove the RAM by pressing out on both tabs visible on each side of the RAM.
- To work the tabs, take your finger tips and press outwards from the indents on the RAM.

Step 7

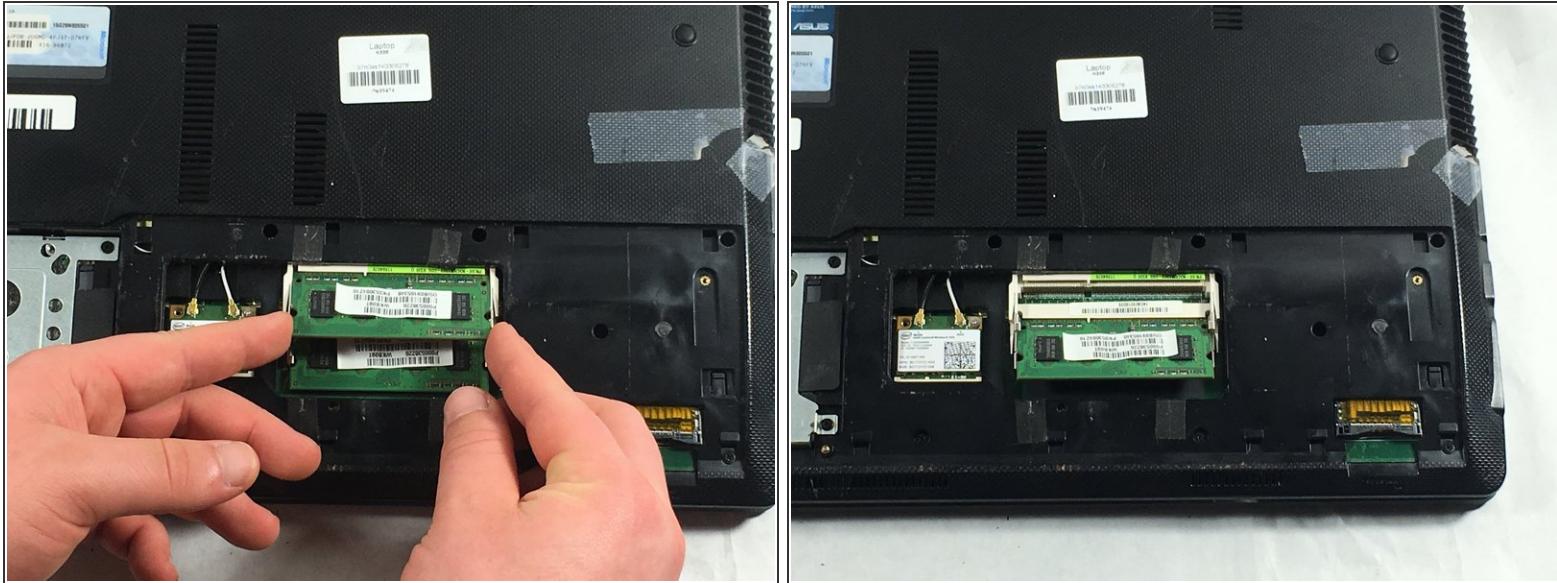

- The RAM is now angled up and you can remove the RAM by pulling it out in the direction it is facing.
- Gently Pull the RAM out of its connector without pushing down or pulling up.

Step 8



- Repeat the previous two steps for the second stick of RAM.

To reassemble your device, follow these instructions in reverse order.