



ASUS N56JR-MH71 RAM Replacement

This guide will show you how to remove the RAM from the ASUS N56JR-MH71 laptop.

Written By: Ruben Lopez




INTRODUCTION

If you want to upgrade memory, this guide will show you how to replace the RAM. Be sure the type of RAM used is DDR3L SDRAM.

TOOLS:

- Essential Electronics Toolkit (1)

Step 1 — Battery

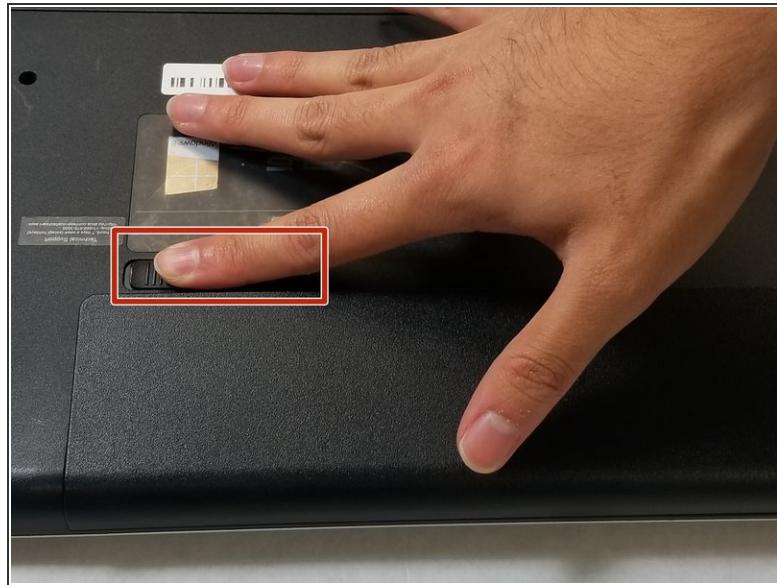

- Push the battery latch.

Step 2



- Keep the battery latch held while you remove the battery.

Step 3 — RAM



- Remove the one screw securing the back cover.

- Pry off the cover using a finger.

(i) This device was missing its screws on the back cover when we received the device. As a result, we do not know what head type the screws are, along with their lengths.

Step 4



- Push the clips outwards using two fingers.

- Lift the RAM to remove it from the slot.

(i) Repeat step 4 for the second RAM slot.

To reassemble your device, follow these instructions in reverse order.