




ASUS Padfone X mini Station Speaker Replacement

How to replace a faulty ASUS Padfone X mini Station speaker to restore sound to your device.

Written By: Alexzander Pastore

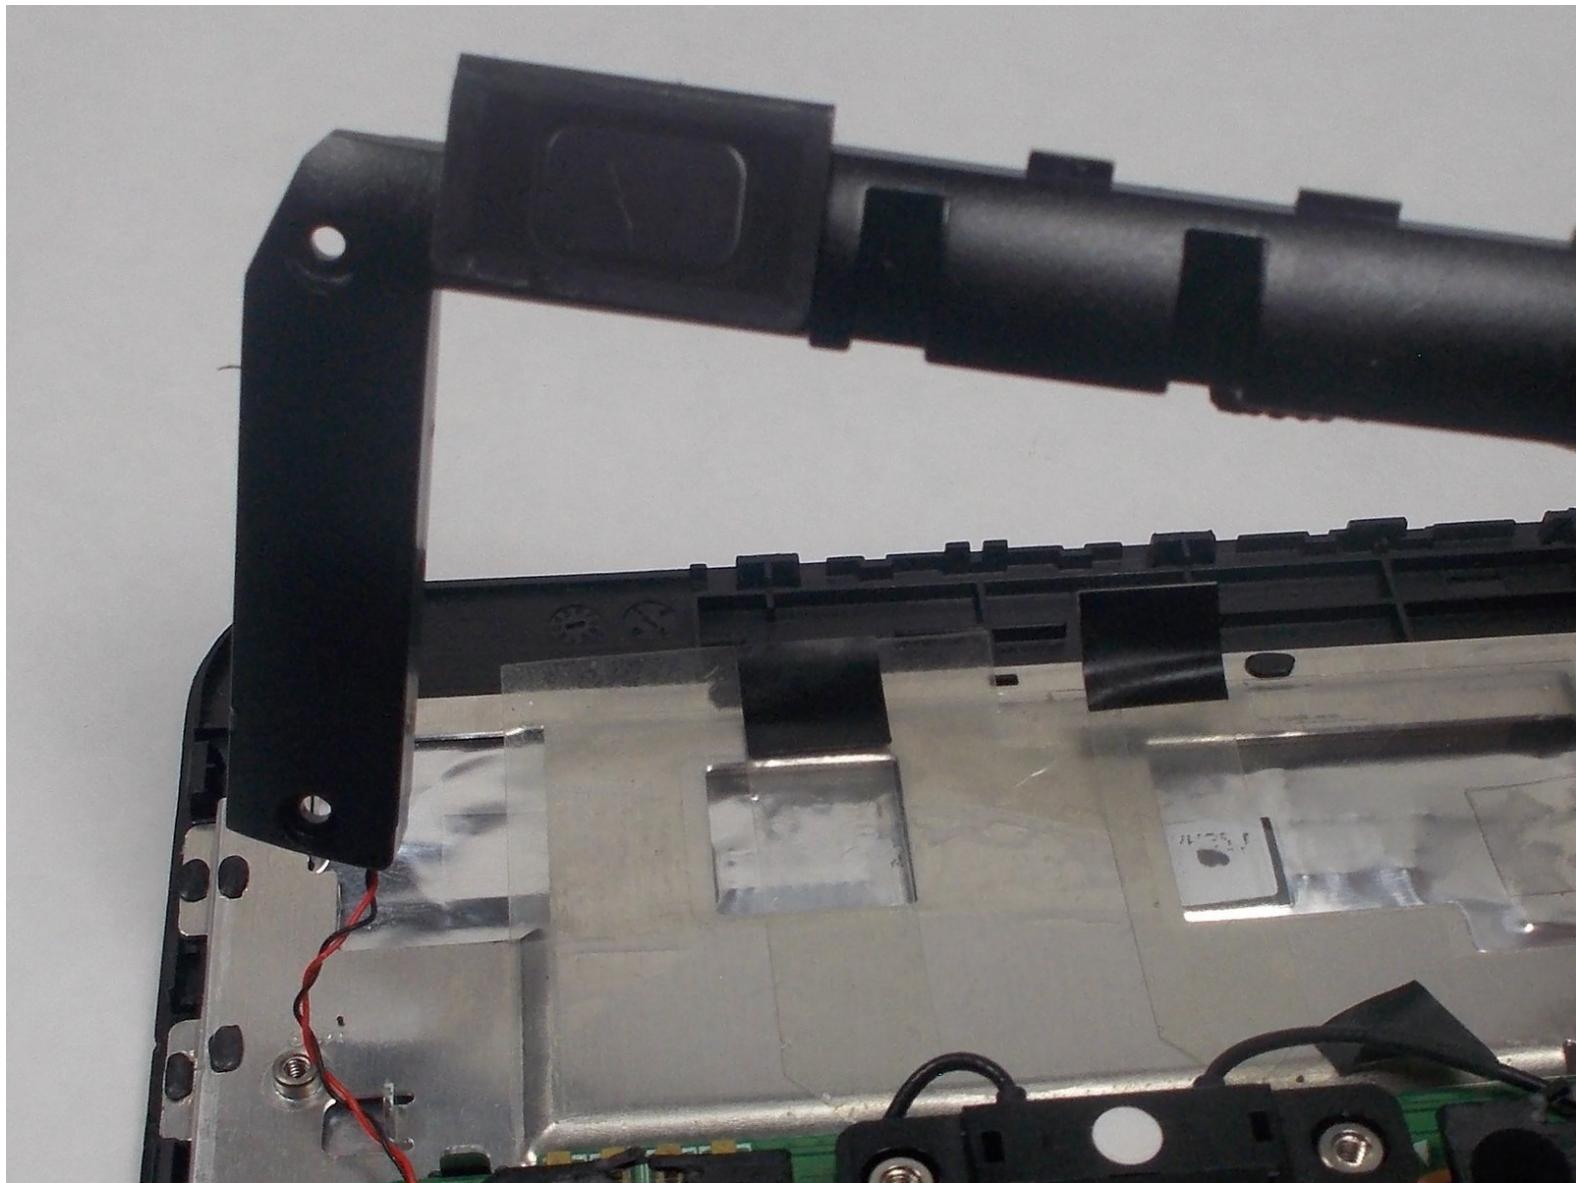

INTRODUCTION

This guide will be helpful for repairing the speaker if the troubleshooting page recommends that you replace it. This is a necessary step when you have determined no other way to repair your current speaker.

TOOLS:



- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Metal Spudger \(1\)](#)

Step 1 — Battery



- Insert the plastic opening tool between the edge of the screen and the back cover.
- Gently pry them apart. Use hands to pull them apart if necessary.

Step 2

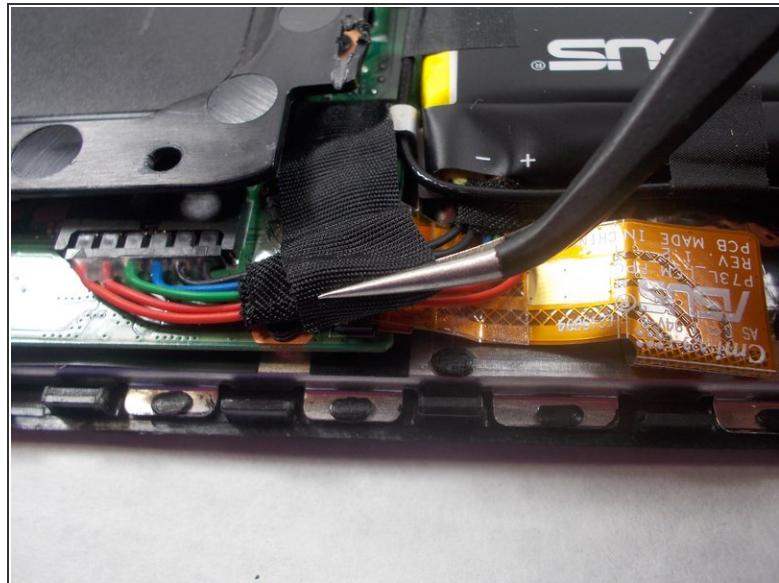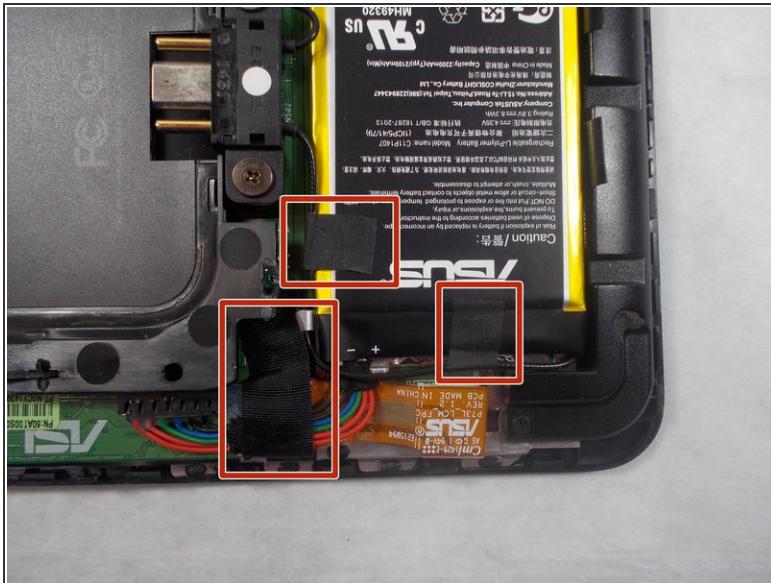

- Remove the three pieces of tape that secure the battery and its wires. Peel gently so you don't damage any wires.

Step 3




- Disconnect the ribbon from the motherboard by gently pulling with your fingers.
- Using the opening tools, pry the battery off of the adhesive.
- Be careful not to pull the battery out right away. The ribbon cable is tucked beneath another wire.

Step 4 — Speaker




- Use a Phillips #00 screwdriver to remove the three 2.5mm screws that secure the speaker case to the motherboard.
- Remove all tape covering the screws before removing them.

Step 5

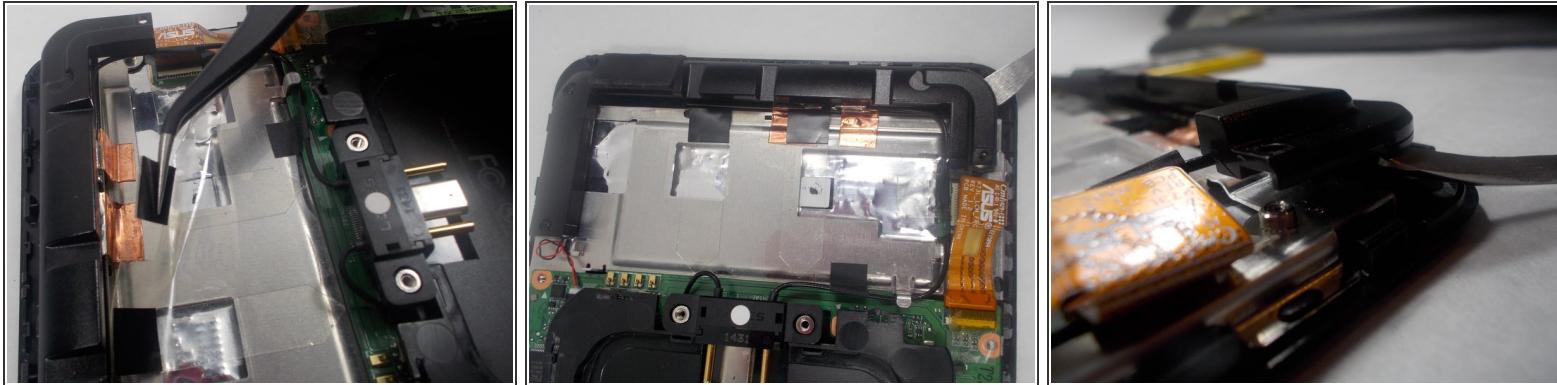

- Use tweezers to remove the three pieces of tape that are covering the metal.
- Insert the metal spudger beneath the speaker case and wedge it upwards to remove speaker case from the device body.

Step 6

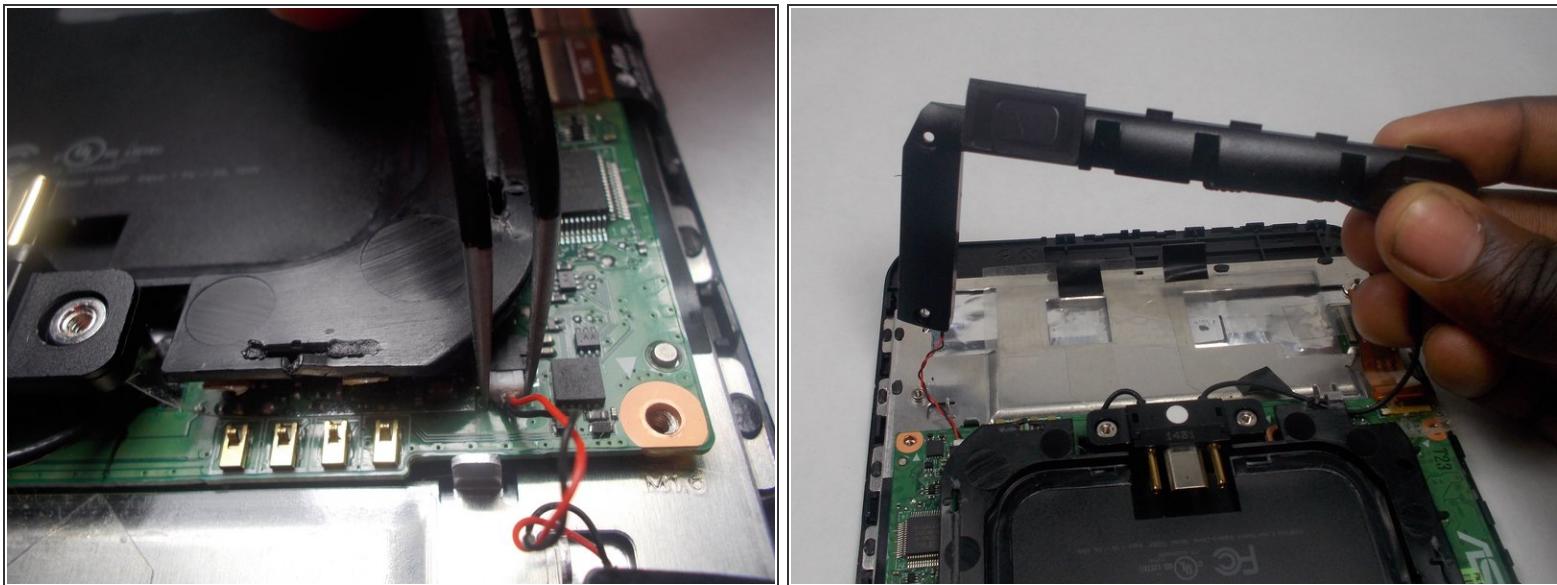

- Use tweezers to detach the connector from the motherboard.

To reassemble your device, follow these instructions in reverse order.