



ASUS Portable AiO PT2001 Back Panel Replacement

How to remove the back panel of the ASUS Portable AiO PT2001.

Written By: Vinu Weerasinghe



INTRODUCTION

This guide will show how to remove the back panel of the ASUS Portable AiO PT2001. Removing this panel is required to access the internal components.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (2)

At least one wide plastic opening tool.

- [Spudger](#) (1)

Step 1 — Back Panel




- Remove the grey scuff guard at the bottom of the PC by pressing down on it, and pulling it away.
- Lift the hinge and remove the grey rubber tabs on either side of the PC's model information.
- Remove the two 7.62mm Phillips #1 screws beneath the rubber tabs under the hinge and the four 7.62mm Phillips #1 screws where the scuff guard was removed.
- Remove the two 4.74mm Phillips #1 screws under the hinge (near the hinge joints) and a 4.74mm Phillips #1 screw under the handle.

Step 2



- Use 1-2 plastic opening tools or nylon spudgers to firmly pry open the back panel.
- We recommend that you start prying the panel where the scuff guard was removed.
- Prying the back panel will cause loud popping noises. This is just the sound of the clips that hold the back panel to the PC popping off.
- ⚠ Using excess force while prying can break the clips that hold the back panel and can damage the ports on the side of the PC.

Step 3

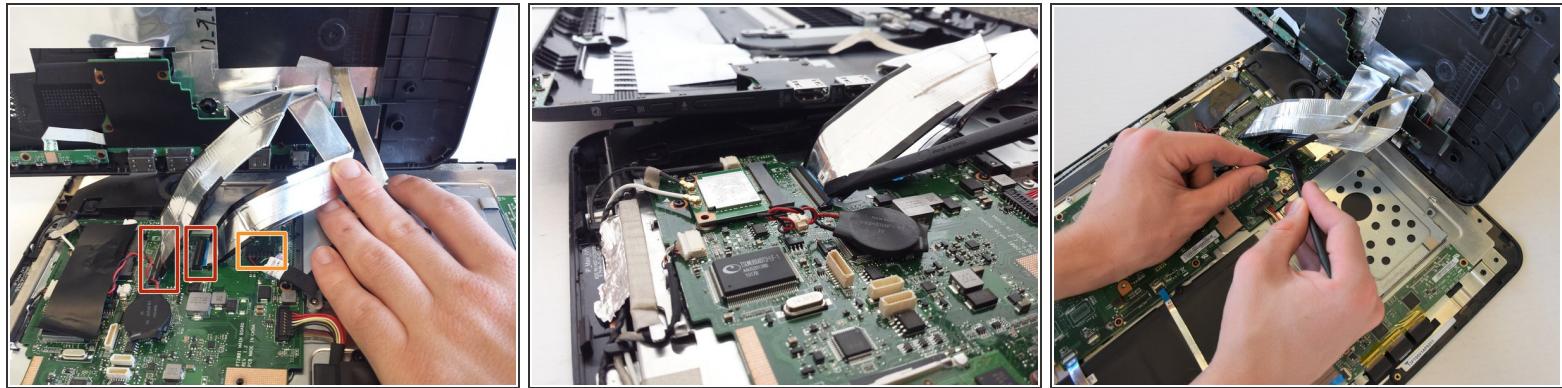

- Disconnect the three cables connecting the back panel ports to the motherboard.
- Flip up the locking latch holding the two ribbon cables with a plastic opening tool and pull the cables out.
- Gently wiggle the third connector out of its socket.

To reassemble your device, follow these instructions in reverse order.