



# ASUS Q324UA-BHI7T17 Display Assembly Replacement

This a step by step instruction on how to replace the screen of a ASUS Q324UA-BHI7T17.

Written By: Gabriel survance



---

# INTRODUCTION

If the display of your device is cracked or broken, use this guide to replace it.

---



## TOOLS:


- [Jimmy](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Display Assembly



- Remove all ten 5mm screws on the backplate using a Phillips #0 Screwdriver.
- Remove the back plate by prying from side.



## Step 2

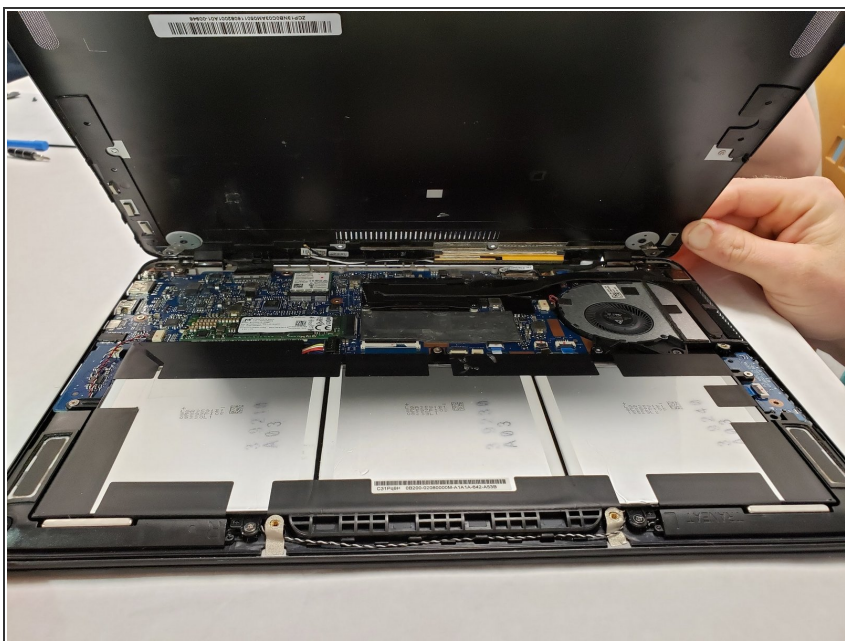

- Remove the back plate to access internal components.





## Step 3

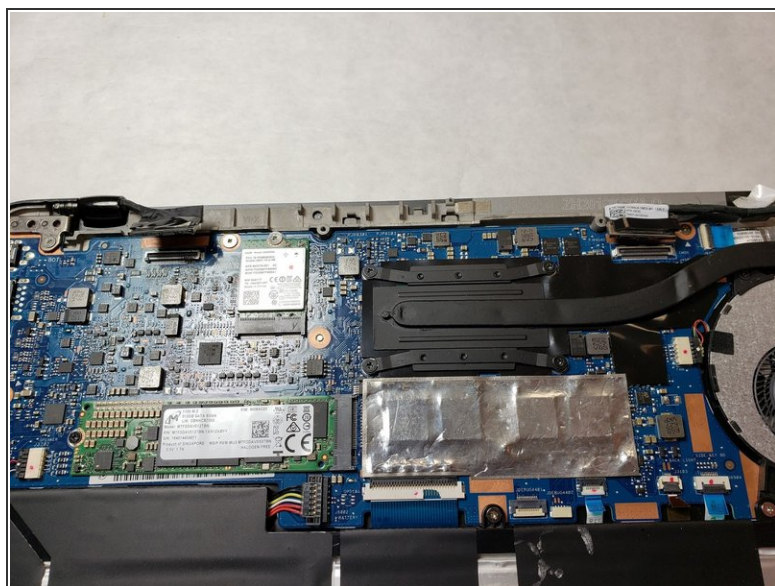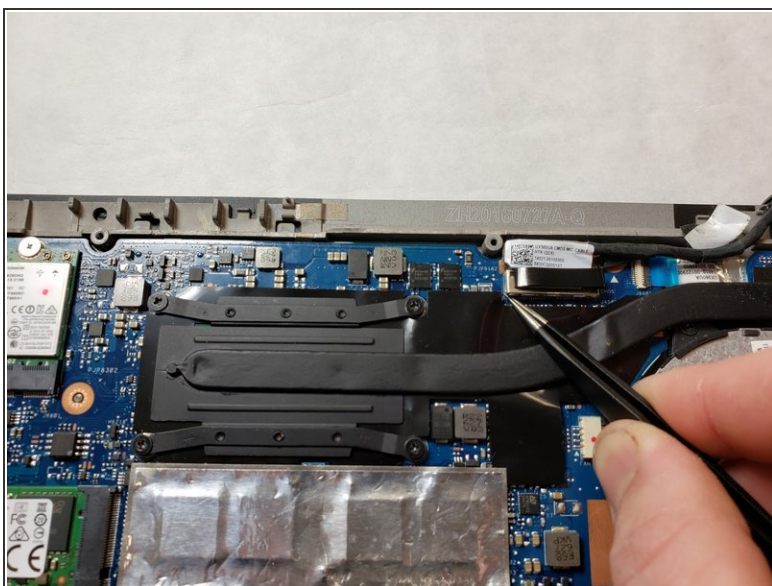

- Use a pair of tweezers to disconnect the two black rectangle connections.


## Step 4

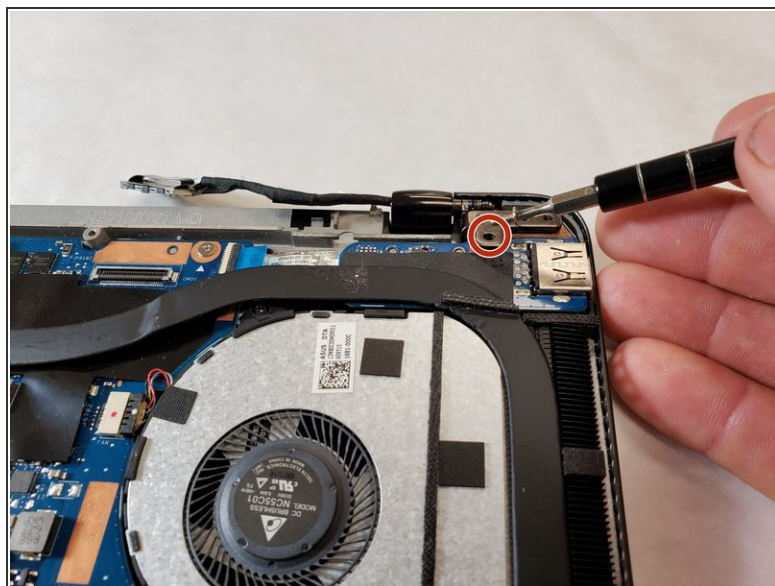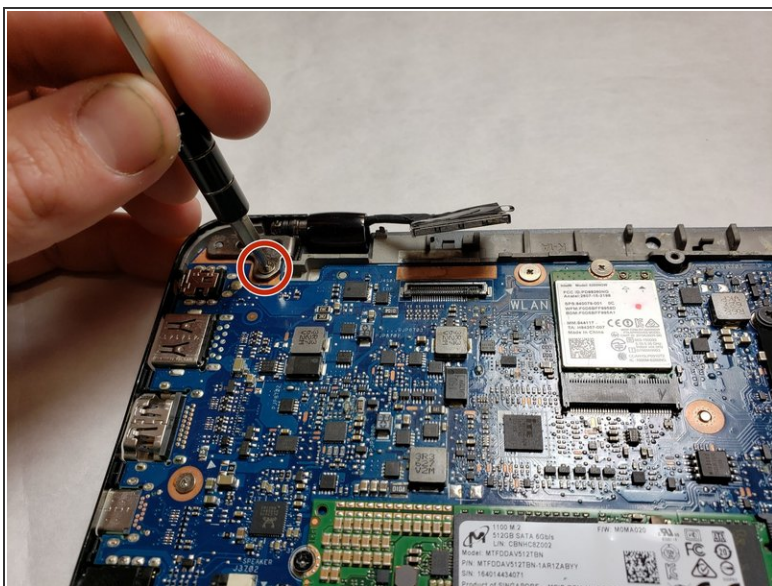

- Remove two 6 mm screws using a Phillips #0 Screwdriver.



## Step 5

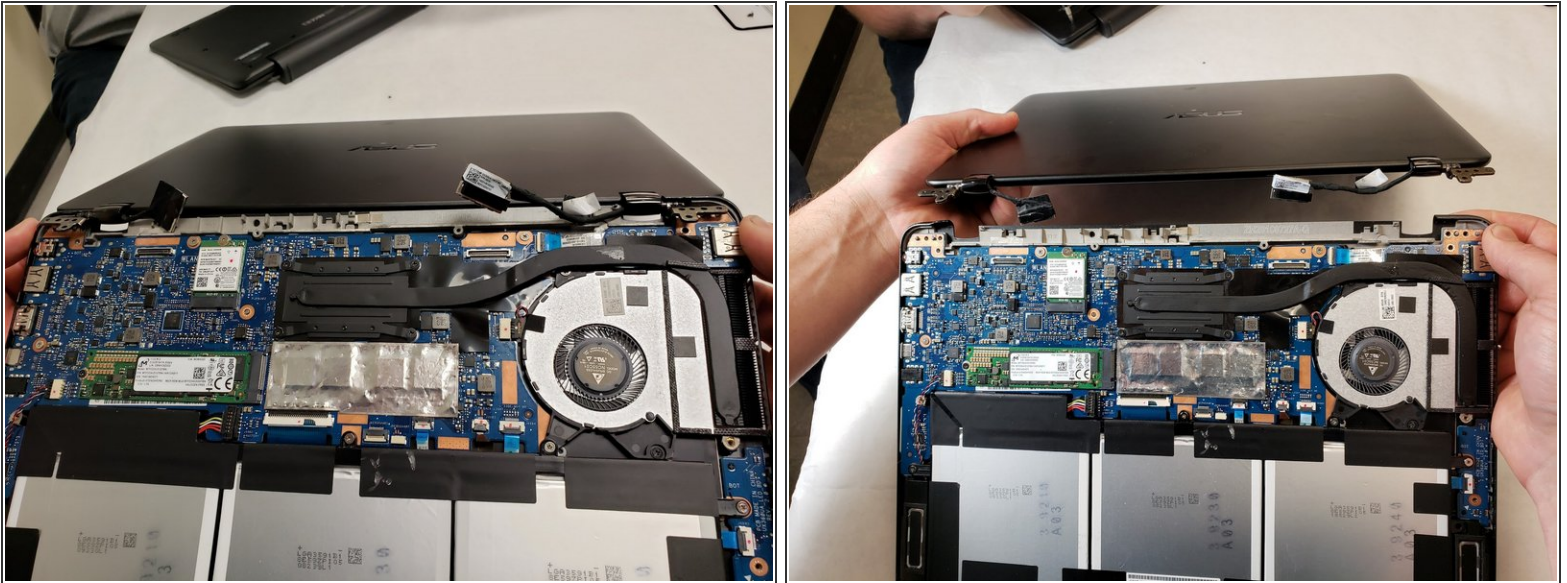


- Everything should be disconnected. Separate the display from the laptop.

## Step 6



- Wedge the Jimmy between screen and plastic cover and pry apart.

## Step 7

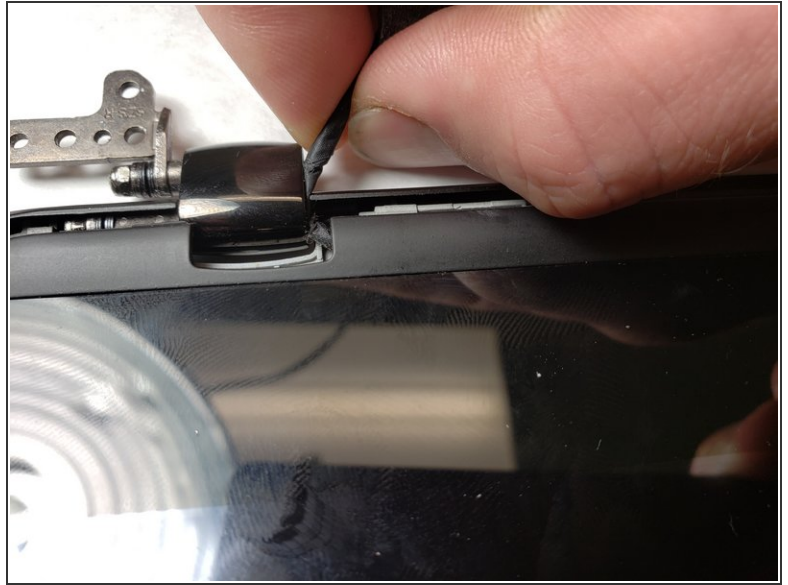

- Dislodge the wires connected to screen from between hinge and plastic cover.
- ⓘ Pulling the wires out will require substantial force.

## Step 8



- Remove the display from the device.

To reassemble your device, follow these instructions in reverse order.