



ASUS Q400A-BHI7N03 Battery Replacement

Removing and replacing the battery for the ASUS Q400A-BHI7N03.

Written By: Matthew Gold



INTRODUCTION

If the battery doesn't charge correctly, the battery needs to be replaced. This guide goes through the steps to remove the battery.

Step 1 — Battery



- Turn off the laptop.
- Disconnect the charging cable from the laptop.

⚠ Failure to unplug the cable could result in electric shock.

- Flip the laptop over so that it is upside down.
- The slightly raised area is the battery.
- Orient the laptop so that the battery is away from you.

Step 2



- In the top right corner, push the tab to the right to the unlocked position.

Step 3



- Find the tab in the top left corner. With one finger, pull the tab to the left to the unlocked position.
- While holding this tab in the unlocked position, gently pull the battery away from you.

To reinsert your battery, follow these instructions in reverse order. Remember to re-lock the tab in step 2.