




# ASUS ROG G75VX-BHI7N11 LCD Screen Replacement

A guide detailing how to disconnect the LCD screen of a gaming laptop.

Written By: Aaron Shein

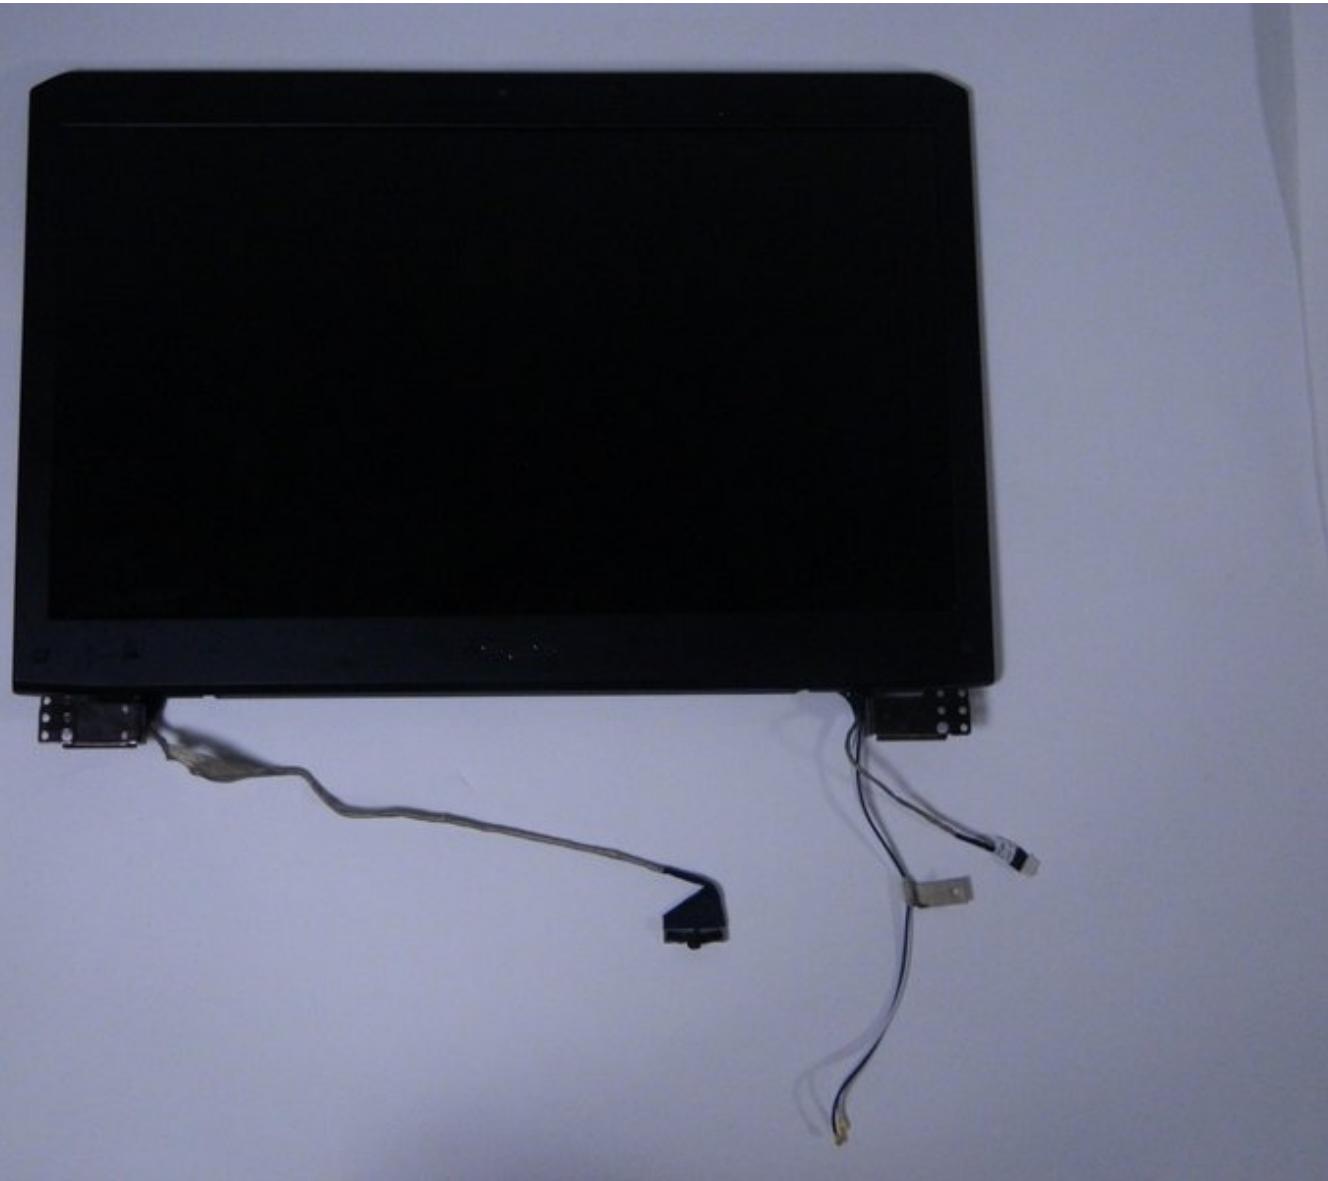

## INTRODUCTION

In this guide, you will be able to disconnect the screen from the rest of the laptop. Exercise caution while dealing with wires, make sure to not sever any while completing this guide.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — ASUS ROG G75VX-BHI7N11 Disassembly




- Remove the 6 screws on the edge of the laptop using a screwdriver.
- Remove the back casing being held on by the one single screw. First, lift the casing at the edge where the screw once was, then carefully lift at the rest of the edges to loosen the casing. Pull the casing towards the edge where the screw was.
- Remove the battery by sliding the switch circled in the picture and pulling the battery out.

## Step 2

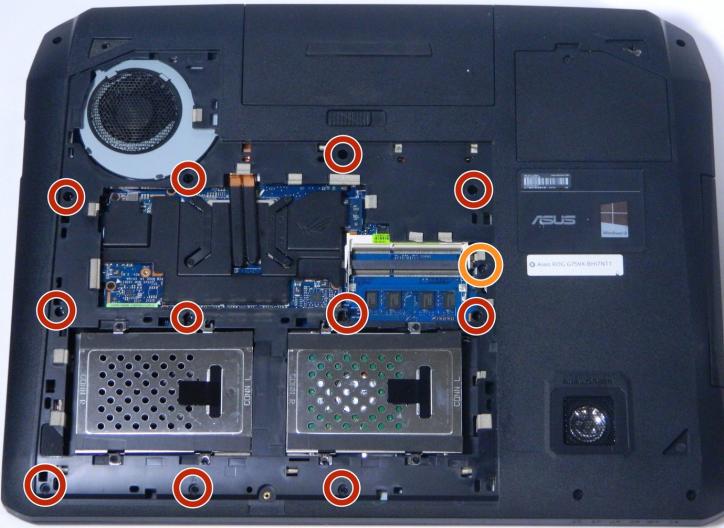

- Remove the 11 screws circled in the picture using a Phillips head screwdriver. They should be labeled on the laptop with a capital A, shown circled in red.
- Remove the screw labeled C.

## Step 3

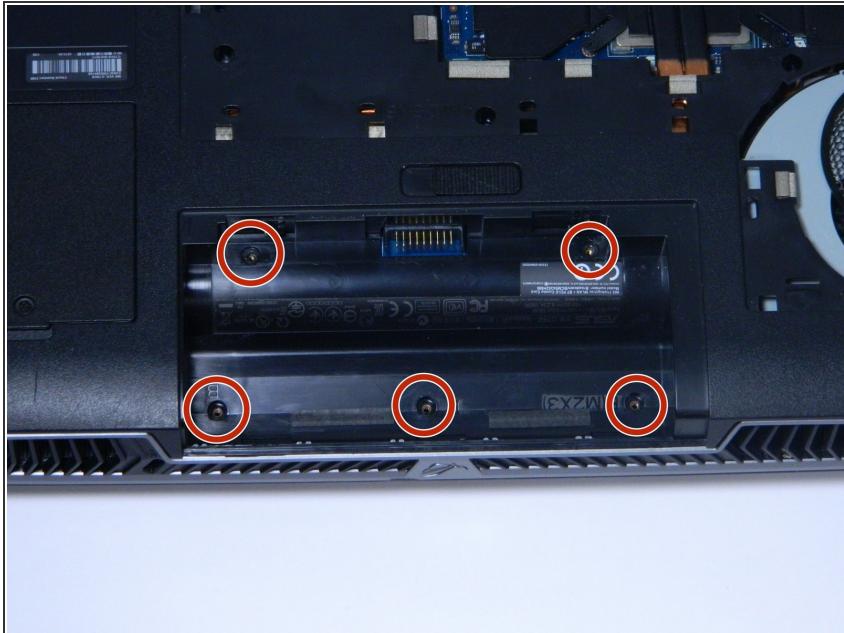

- Remove the 5 screws circled in the picture, located where the battery pack once was.

## Step 4



- Remove the DVD ROM on the side of the computer, by pulling it out. If necessary, use a plastic opening tool.

## Step 5




- Remove the three screws located where the DVD ROM once was, on the screen side of the laptop.

## Step 6





- Flip the laptop over and pop the back cover off behind the screen, by grabbing it on either side and pulling it up, vertically off of the laptop.
- There is a cable connecting the cover to the laptop, shown in picture 2.
- Disconnect the cable by pulling apart the white connectors, shown in picture 3.

## Step 7

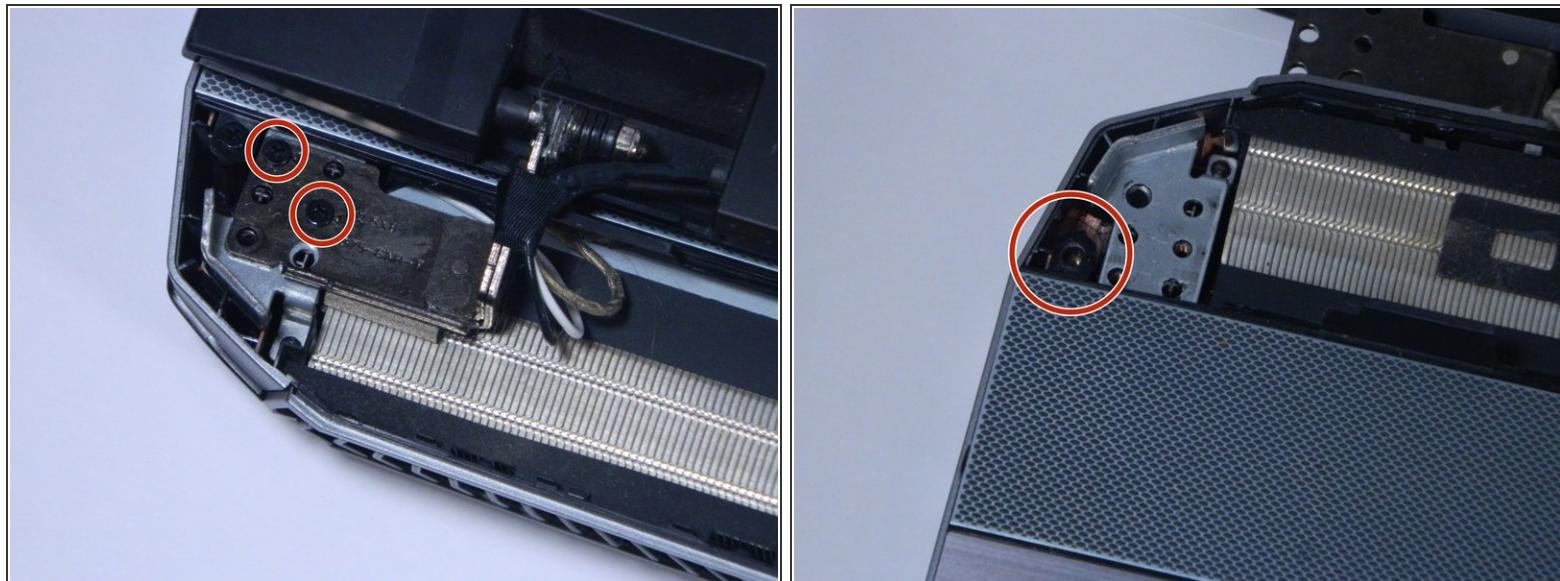


- There will be two smaller and two larger black screws on each hinge holding the laptop screen onto the computer. Remove all four of the larger screws with your P0 screwdriver.
- There is one screw on either side of the keyboards, next to the screen hinges. Remove both screws.

## Step 8

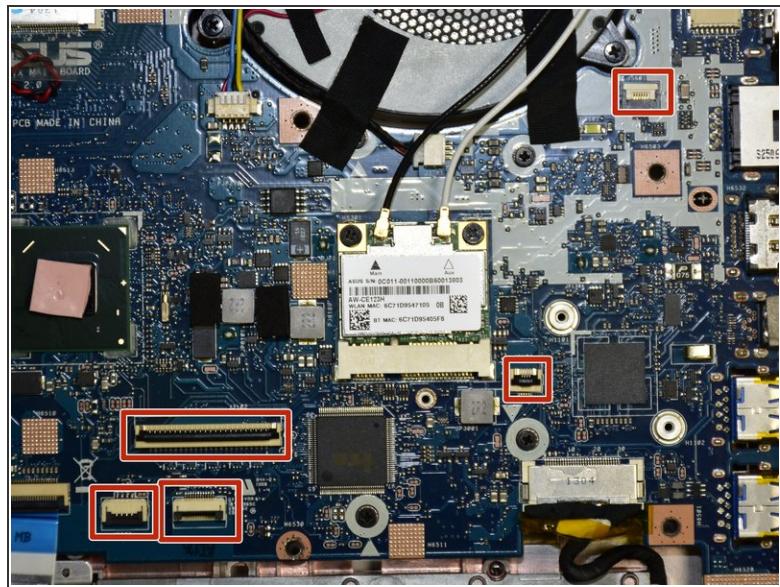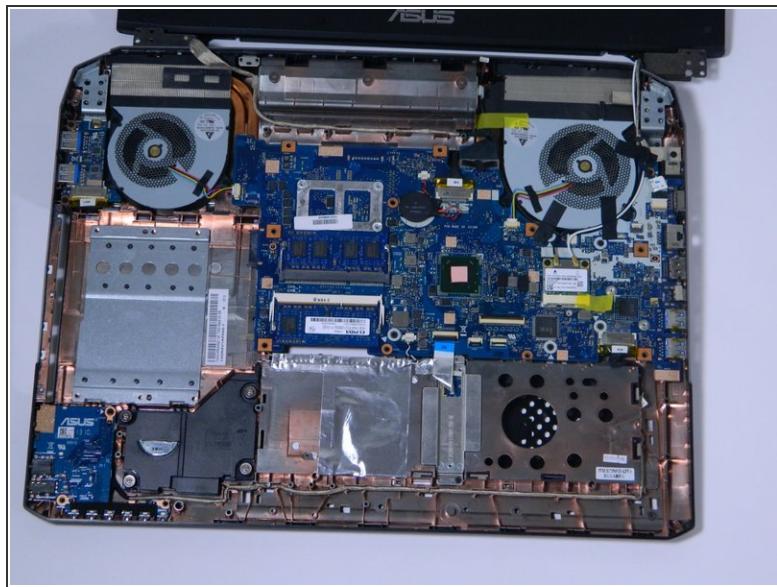

- You may now remove the keyboard plate. Simply lift from the back, and pull it off all the way around.
- Caution with removing the keyboard, as there are 5 ribbon cables that connect the motherboard to the keyboard (motherboard port locations shown in picture 2).
- The ribbon cables must be carefully disconnected from the motherboard side, by flipping a latch on the port and pulling the ribbon out.

## Step 9 — LCD Screen

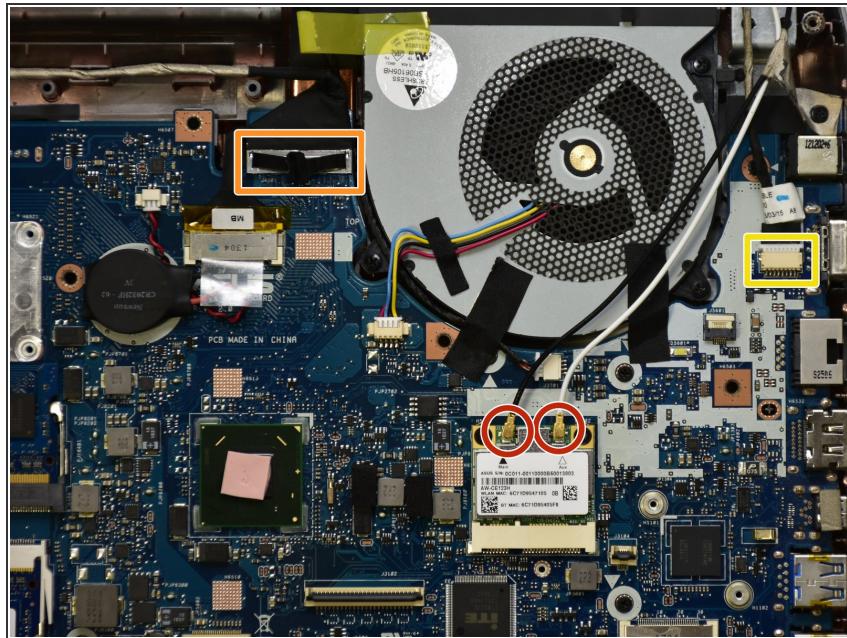

- Disconnect the two wires from the WiFi chip by pulling up from the motherboard.
- Disconnect the large cable to the left of the fan.
- Disconnect the cable to the right of the fan by sliding it towards the back of the laptop and out of its port.
- There was a fifth cable connecting to the screen, but that was disconnected in an earlier step.

## Step 10



- The screen is now removed, and able to be replaced.

To reassemble your device, follow these instructions in reverse order.