


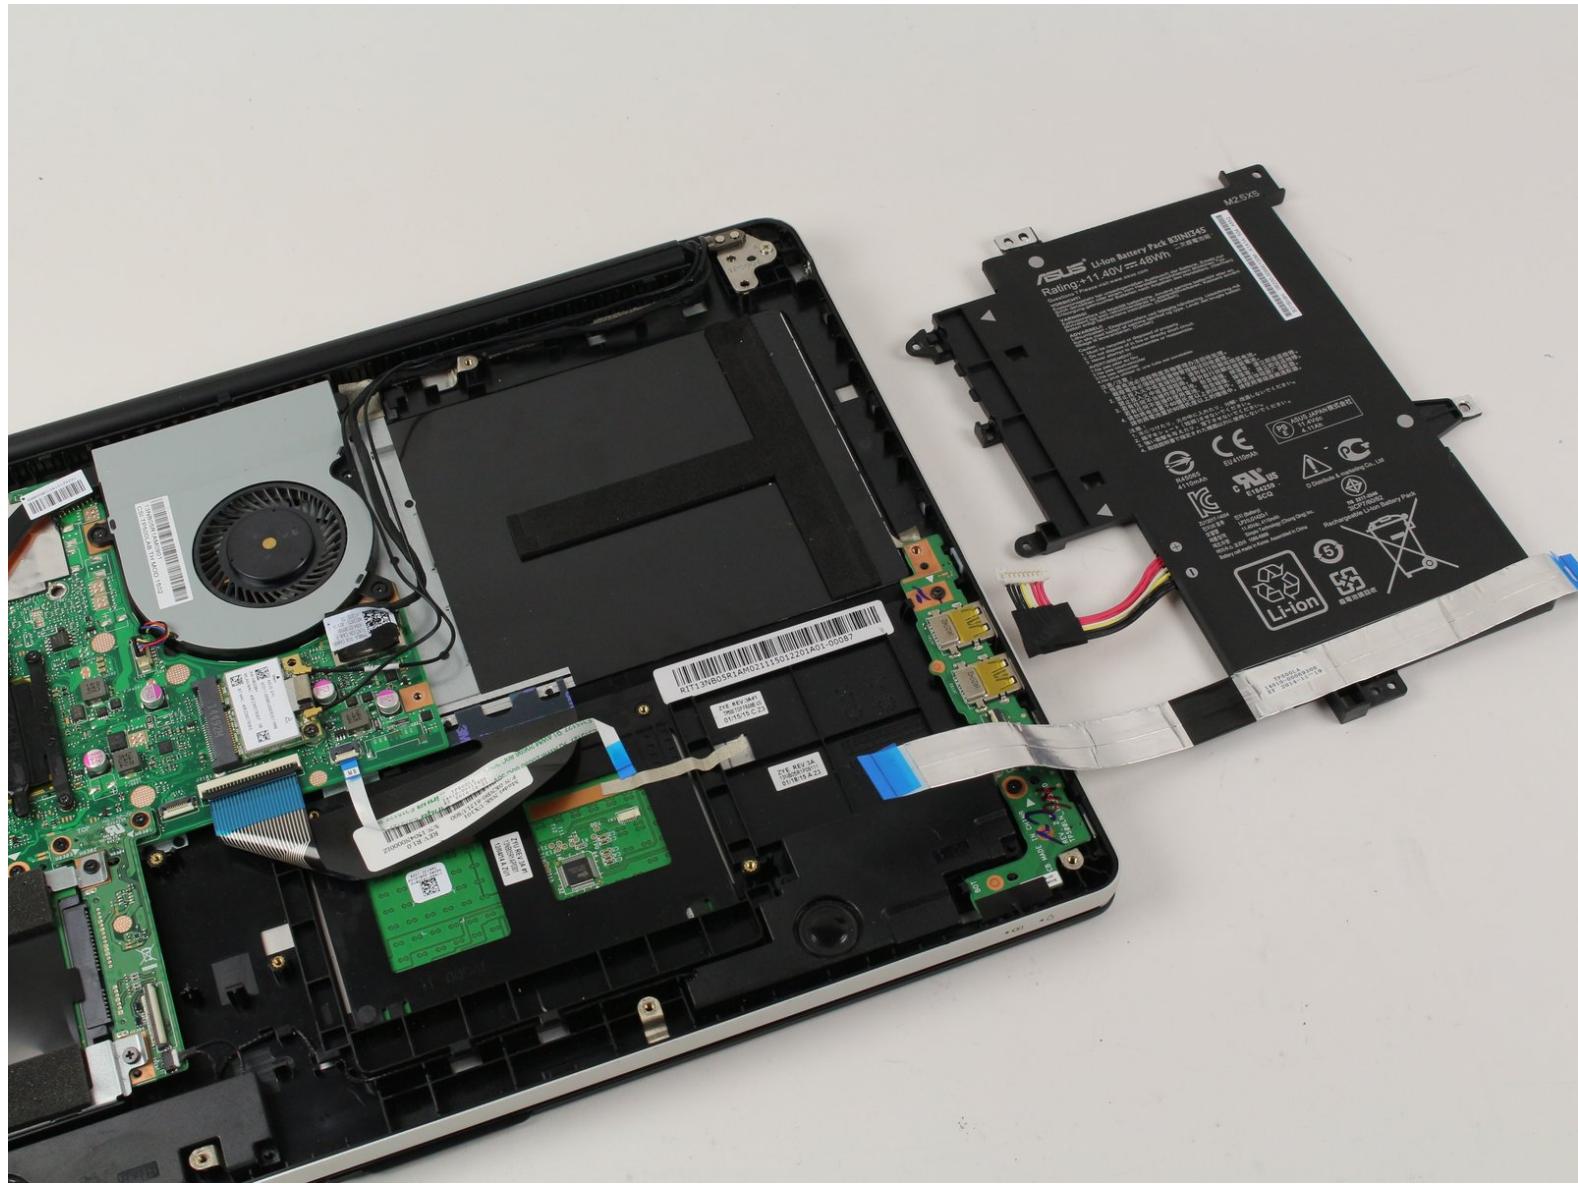

# ASUS Transformer Book Flip TP500LA Battery Replacement

In this guide, we will show you how to access and remove the battery of the ASUS Transformer Book Flip TP500LA released back 2014.

Written By: Garrett Fitzpatrick



This document was generated on 2019-09-18 05:46:28 AM (MST).

## INTRODUCTION

In this guide, we will show you how to access and remove the battery of the ASUS Transformer Book Flip TP500LA. This guide will assist you in replacing your dysfunctional battery with a new one.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Back Case




- Remove the ten 10 mm Phillips #0 screws found on the computer's back case.

## Step 2



- Slide a heavy-duty spudger between the back case and the computer.
- Slowly work around the edges to undo the clips to fully separate the back case from the computer.
- Gently lift off the back case.

## Step 3 — Battery

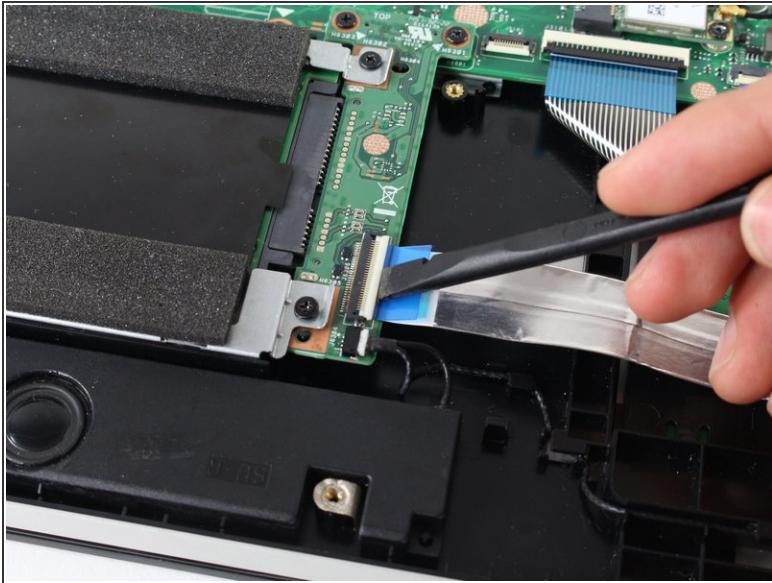


- Slide a heavy-duty spudger into the ZIF connector and gently flip up the retaining flap to open the connector.
- Pull the blue tab to remove the ribbon.

## Step 4



- Remove the three 5 mm Phillips #0 screws.
- Remove the single 6 mm Phillips #0 screw.

## Step 5

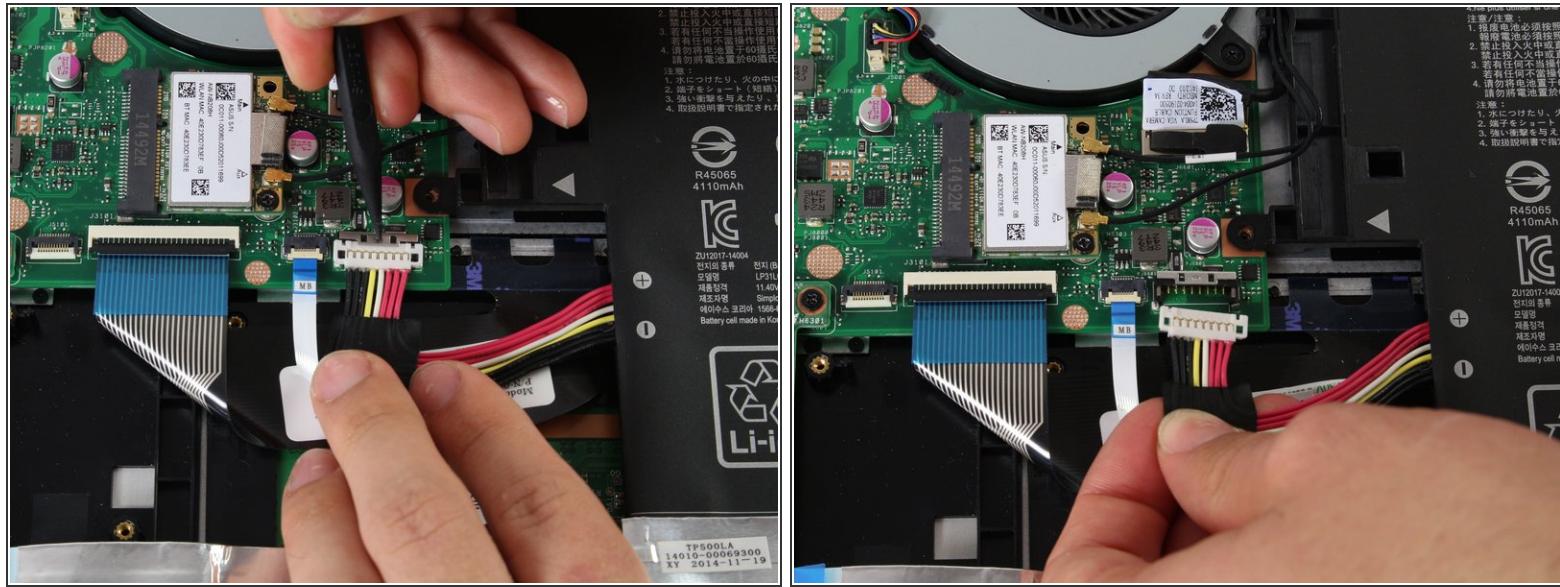

- Use the heavy-duty spudger to pry the white 8-pin connector away from the motherboard.
- Gently pull the connector away from the motherboard.

**⚠** The black 8-pin connector on the motherboard is very fragile, so be careful when removing the white 8-pin connector.

## Step 6



- Use the blue plastic opening tool to loosen and remove the three black wires from the battery.
- Slide the battery out from the computer to remove.

To reassemble your device, follow these instructions in reverse order.