




ASUS U46E-RAL7 RAM Replacement

RAM replacement guide for the ASUS U46E-RAL7 Laptop.

Written By: Connor

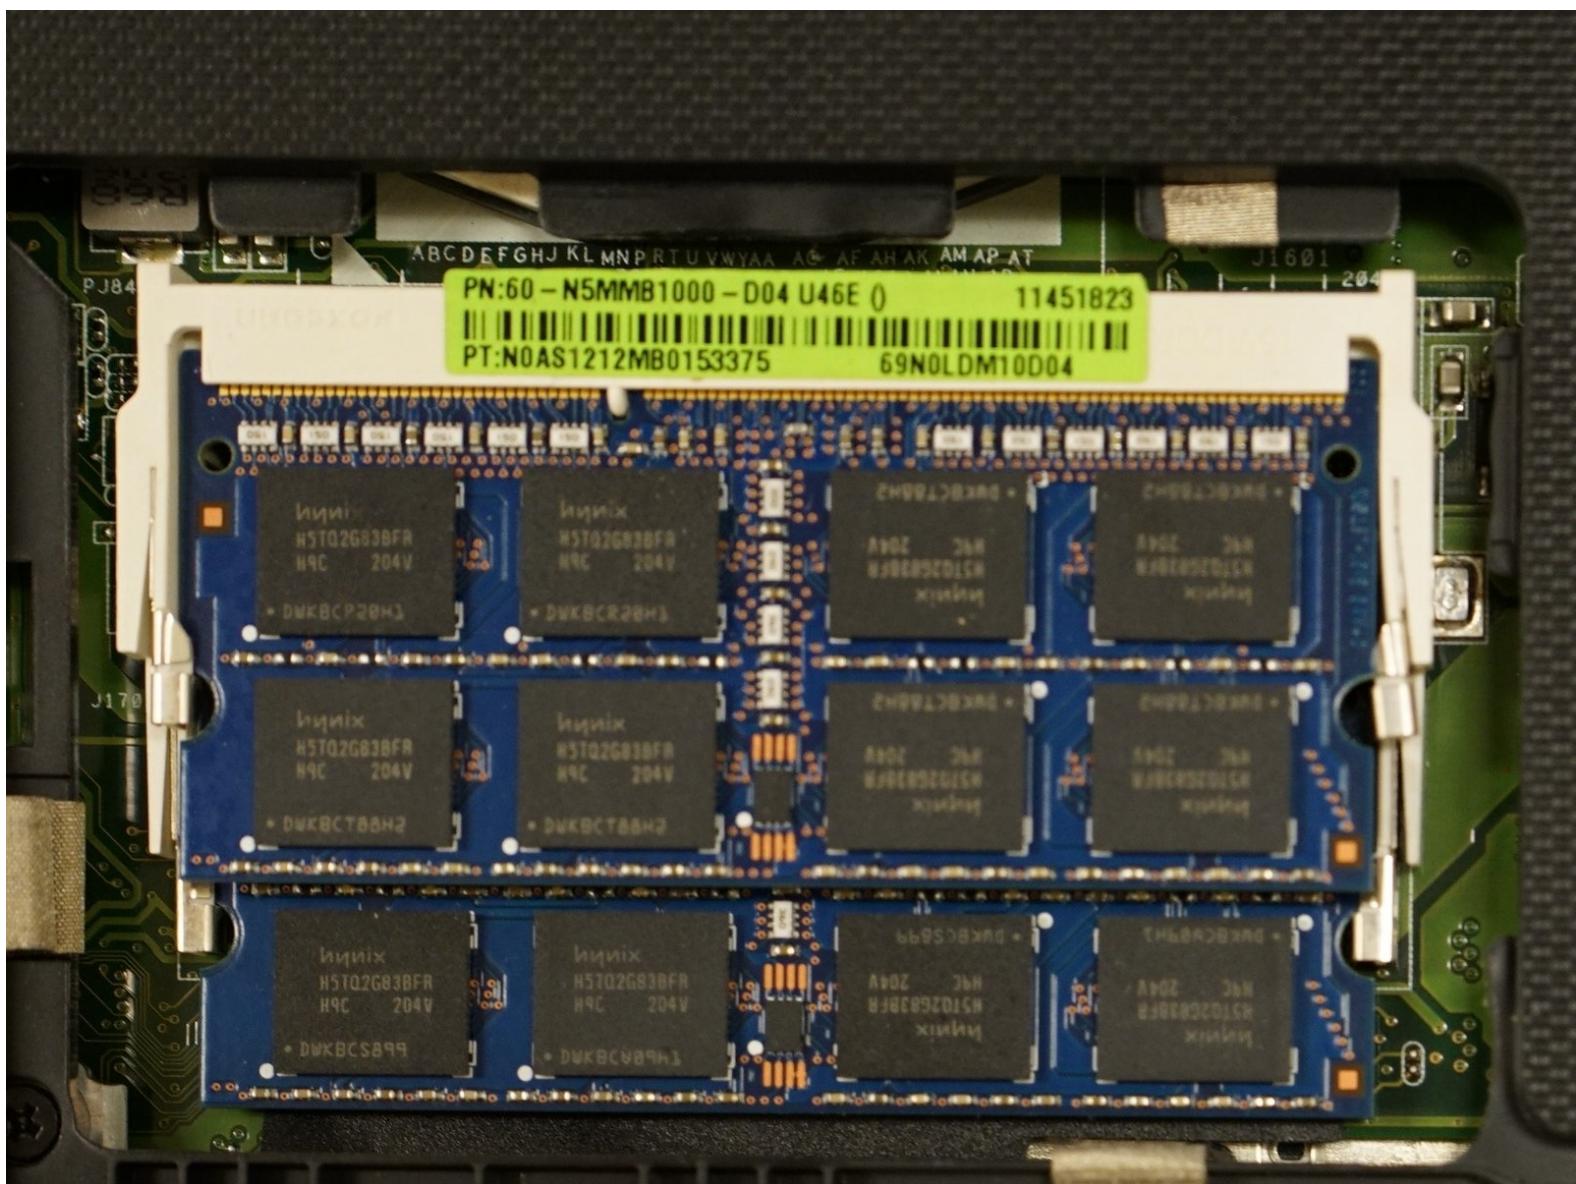

INTRODUCTION

In this guide, the user will be able to follow step-by-step instructions for replacing the RAM in his or her ASUS U46E-RAL7 Laptop.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — RAM



- Using a size 0 Phillips screwdriver, remove two (2) 5mm screws from the L shaped back panel.

Step 2



- Using a plastic opening tool, pop off the L shaped panel.

Step 3



- Place both index fingers on the metal bars on the edge of the ram.
- Press down gently until the RAM pops up.

Step 4



- Pull the RAM stick out of the socket.

Step 5



- Repeat steps 1-4 for the second stick of RAM.

To reassemble your device, follow these instructions in reverse order.