



ASUS U52F-BBG6 Random Access Memory (RAM) Replacement

Written By: Ashley DeHuff




INTRODUCTION

This guide will help you replace or upgrade your random access memory. This replacement will be very easy and will only require you to remove some screws.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Random Access Memory (RAM)

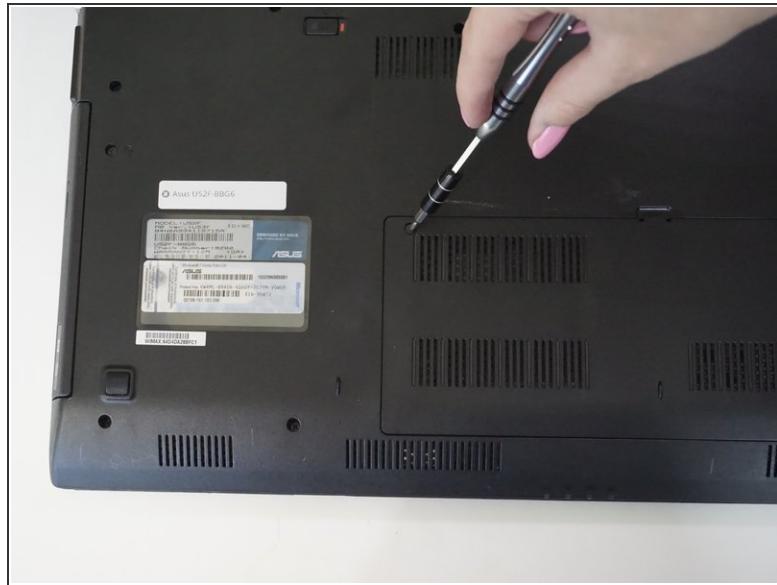

- Unscrew the two 3mm Phillips screws with the PH0 screwdriver.
- Unhook the back panel by inserting your fingernail in the slot provided.
- Lift the panel upward.

Step 2

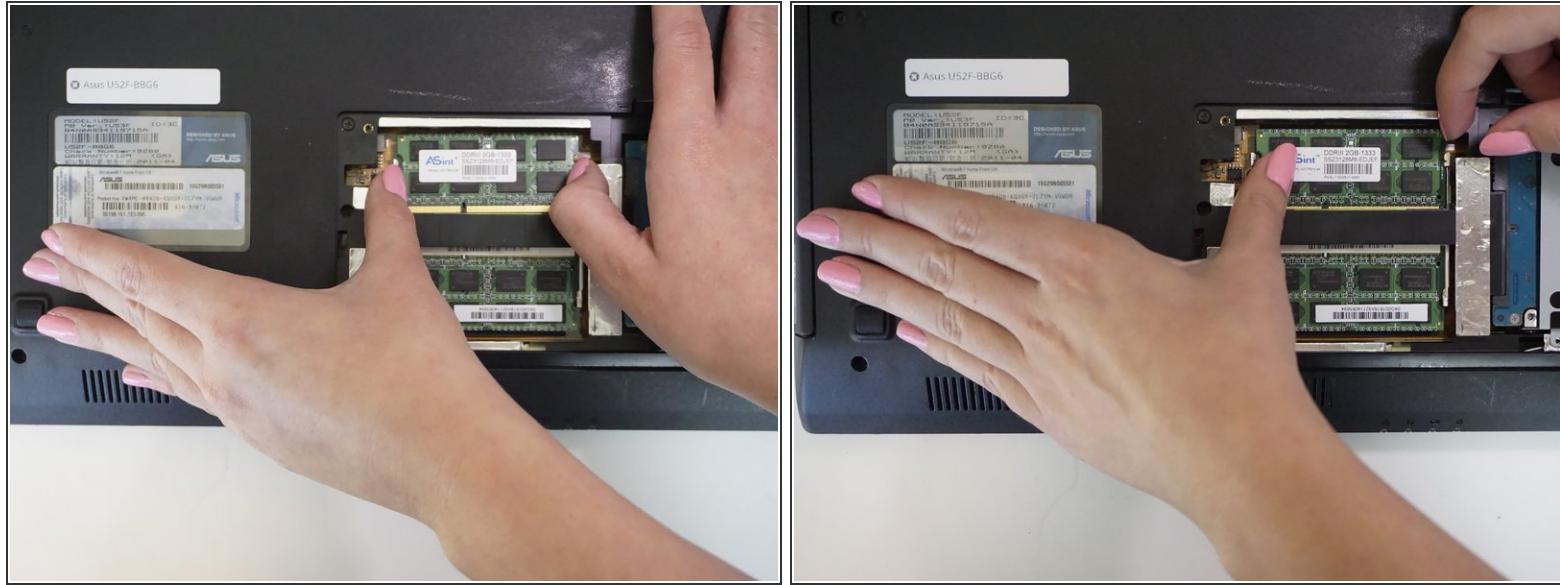

- Use both hands to pull the gold prongs outward.
- ⚠ Be careful not to get pinched as the RAM will spring upwards when released.
- Lift the RAM out.

To reassemble your device, follow these instructions in reverse order.