




ASUS U52F-BBG6 Wi-Fi Chip Replacement

This is a guide to show you how to replace your Wi-Fi Chip. I would allow yourself at least thirty minutes to complete this guide.

Written By: Ashley DeHuff

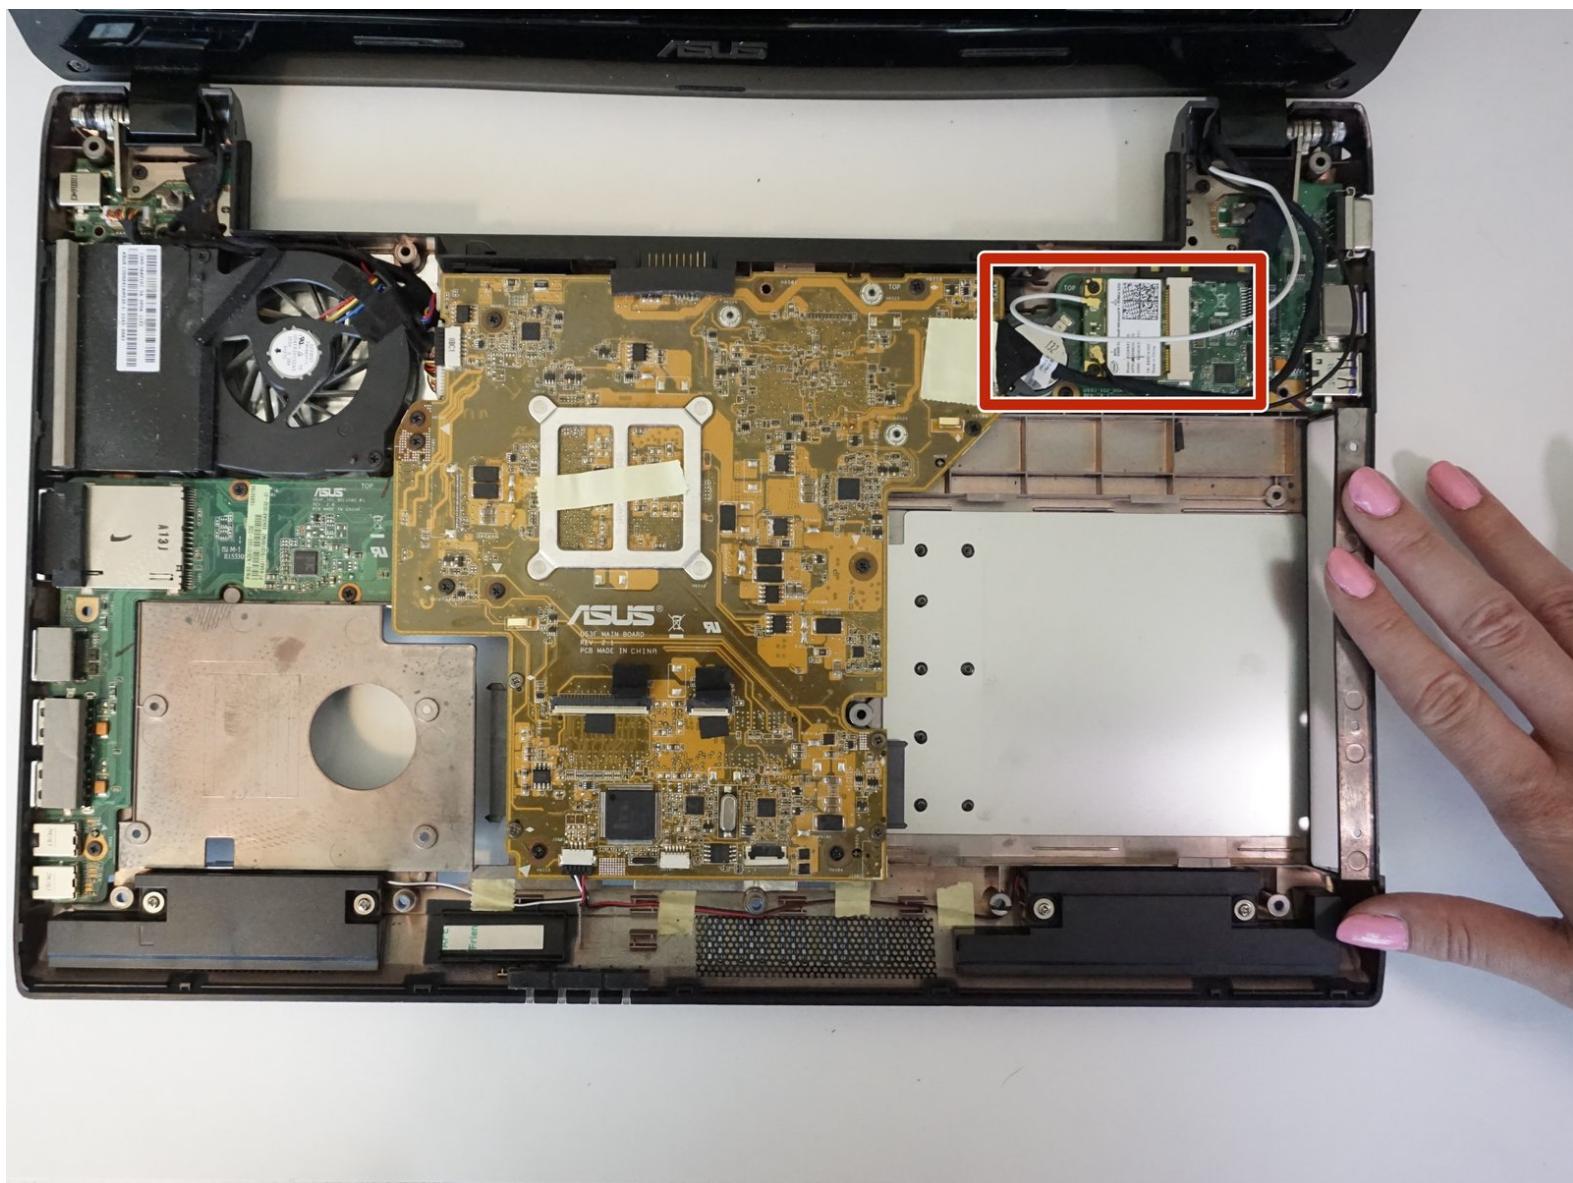



INTRODUCTION

Use this guide to replace your Wi-Fi chip. Keep in mind it will take a lot of effort when removing the back panel.

TOOLS:


- **JIS #1** (1)
- **Phillips #0 Screwdriver** (1)
- **Metal Spudger** (1)

Step 1 — Back Cover

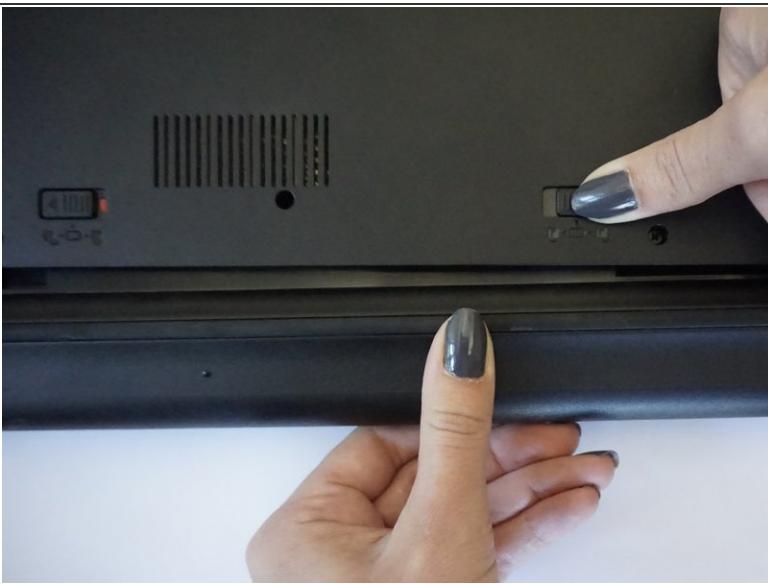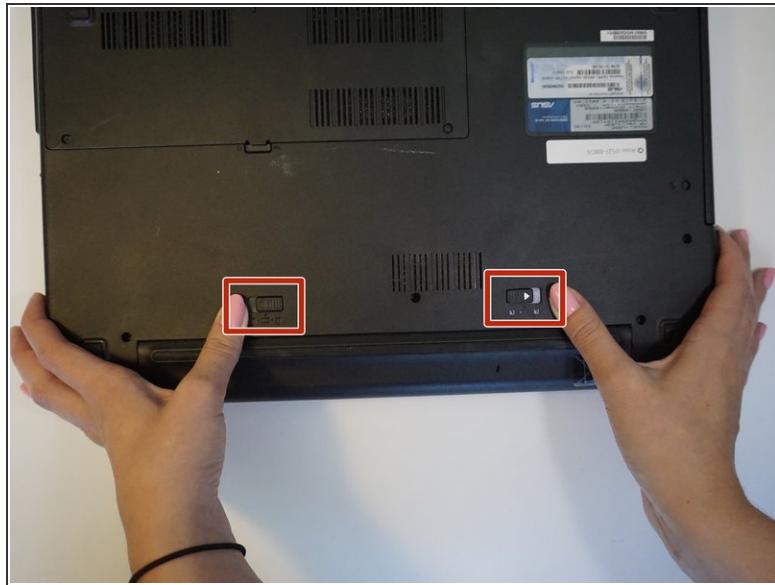


- Flip the laptop over to the back.
- Slide the right latch to unlock, then simultaneously slide the left latch outward while pulling the battery out.

Step 2

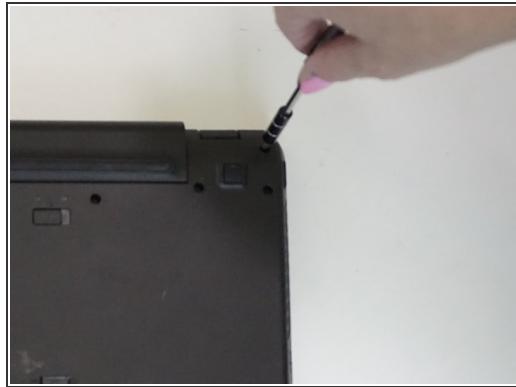


- Unscrew all twelve 3mm Phillips screws with the J1 screwdriver.
- Unscrew two 3mm Phillips screws on the black panel using the PH0 screwdriver.
- Lift the black panel upward by inserting your fingernail in the space provided.

Step 3

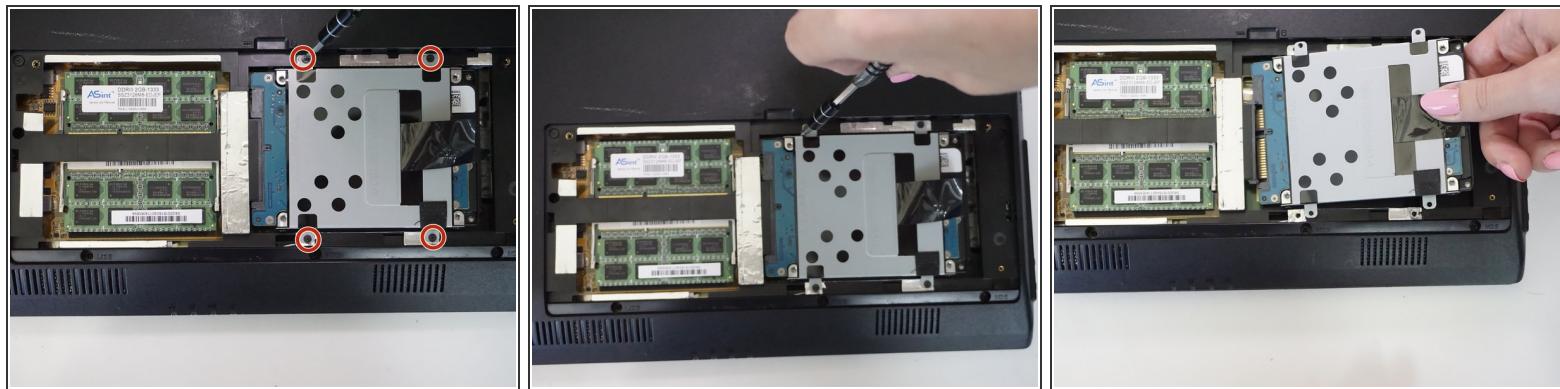

- In the RAM and hard drive compartment, unscrew the four 3mm Phillips screws using the J1 screwdriver.
- Gently pull out the hard drive.

Step 4

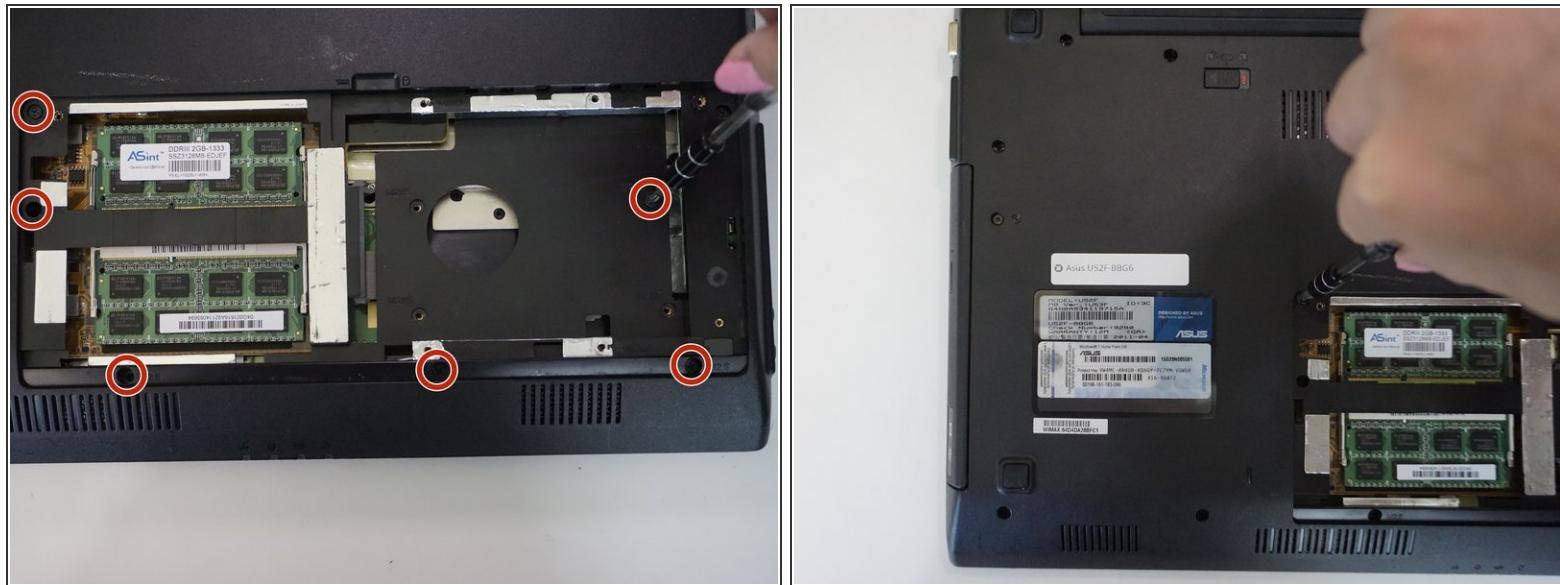



- Unscrew six 3mm Phillips screws in the RAM and hard drive compartment with the J1 screwdriver.

Step 5



- Pull the CD drive outward with your left hand.

Step 6

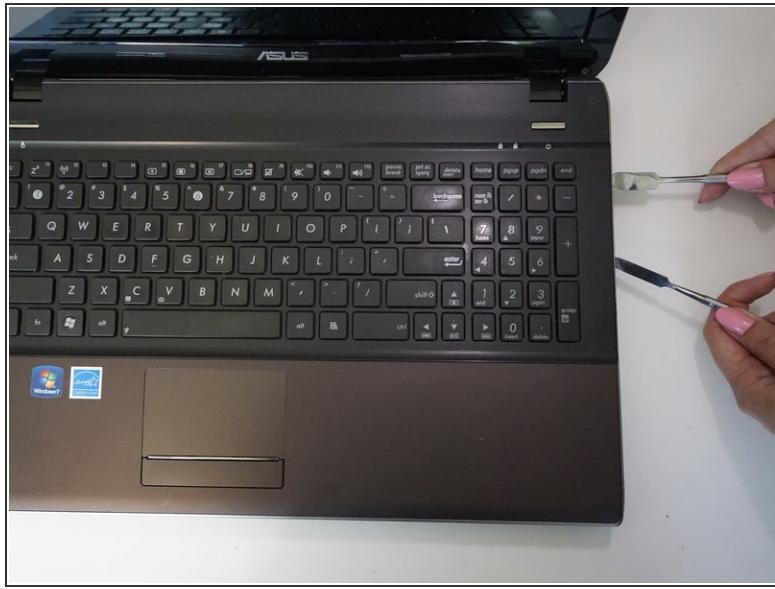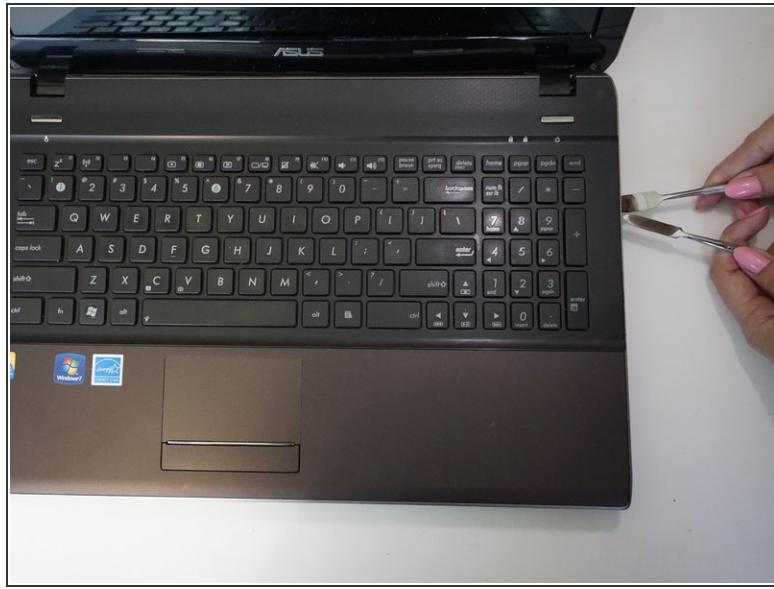



- Insert and gently twist the flat metal spudger between the keyboard assembly and the bottom plastic cover so that a small seam is opened.
- Put in the metal spudger in the seam to hold its place while twisting and levering the flat metal spudger along the whole keyboard.

⚠ Be careful not to hit any of the internals with the metal spudger. The regular black nylon spudger should be used whenever possible, especially around batteries or sensitive internal components.

ⓘ You will need add a lot of pressure to open the laptop. Expect to hear snaps as the clips holding the two pieces are released.


- Slowly pry off the back

Step 7 — Keyboard

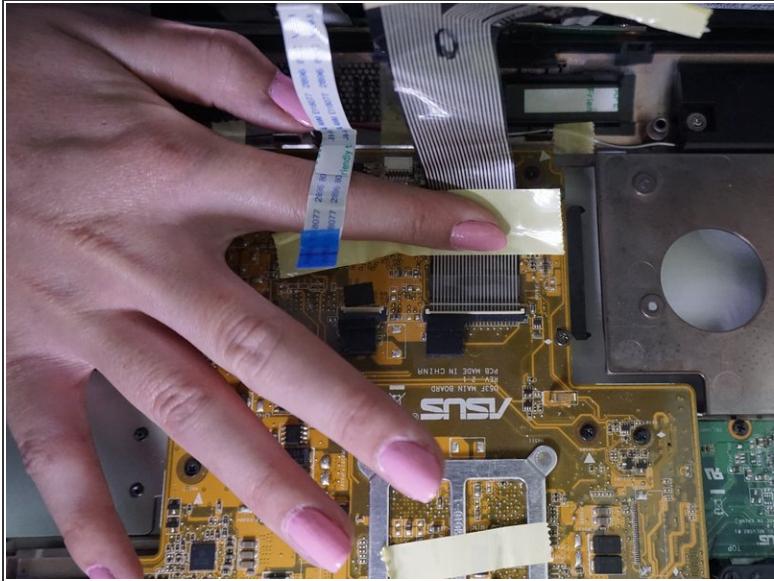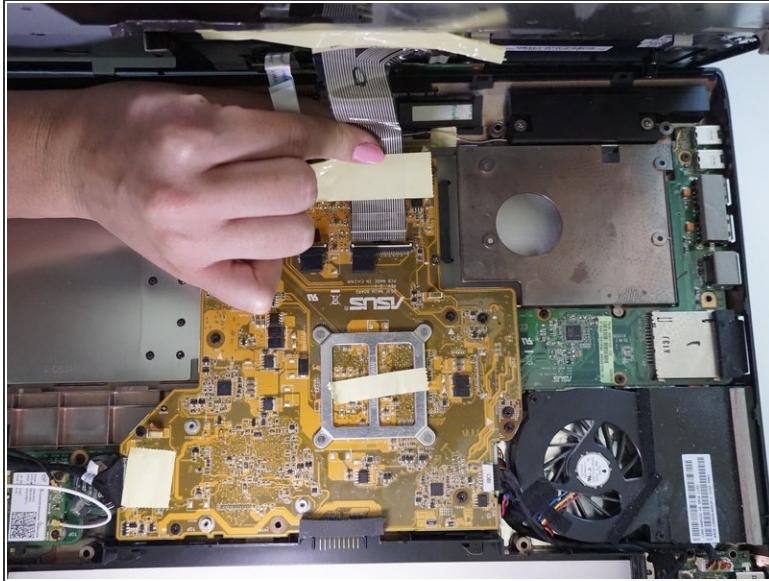


- Unlatch the clip attaching the white flattened flexible cord with a blue tip to the circuit board with your thumb.
- Pull out the white flattened cord.

Step 8

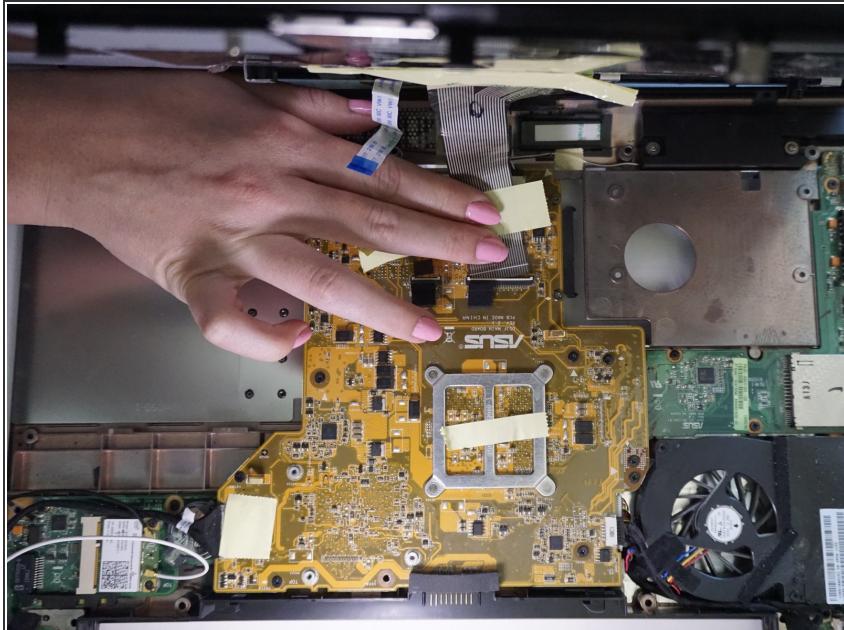



- Pull back yellow tape attaching the metal colored flexible flattened cord to the circuit board.
- Lift up the latch at the end of the cord.
- Pull out the cord to release the keyboard.

Step 9 — Wi-fi Chip

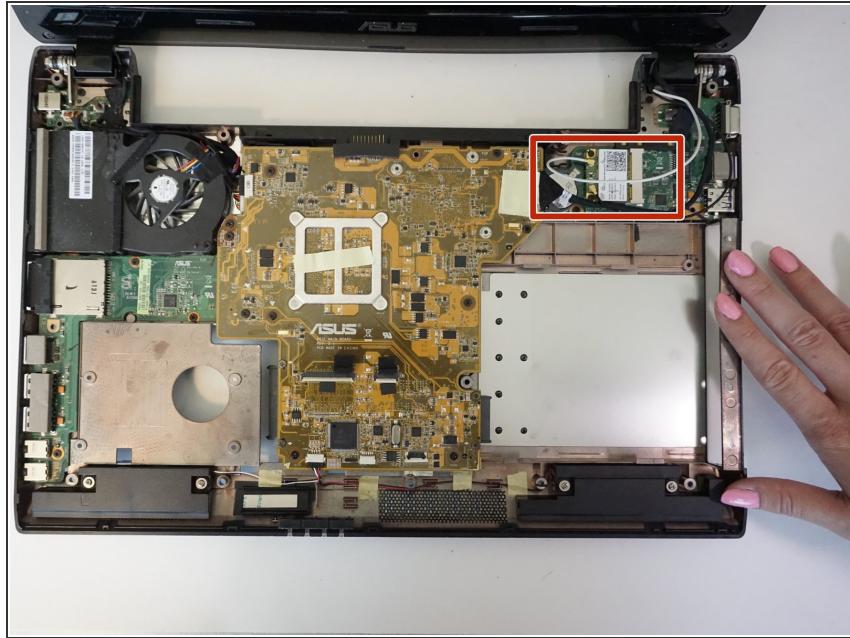


- Find the Wi-Fi chip circuit board, which has a white sticker on it and is connected to a black and white wire.

Step 10

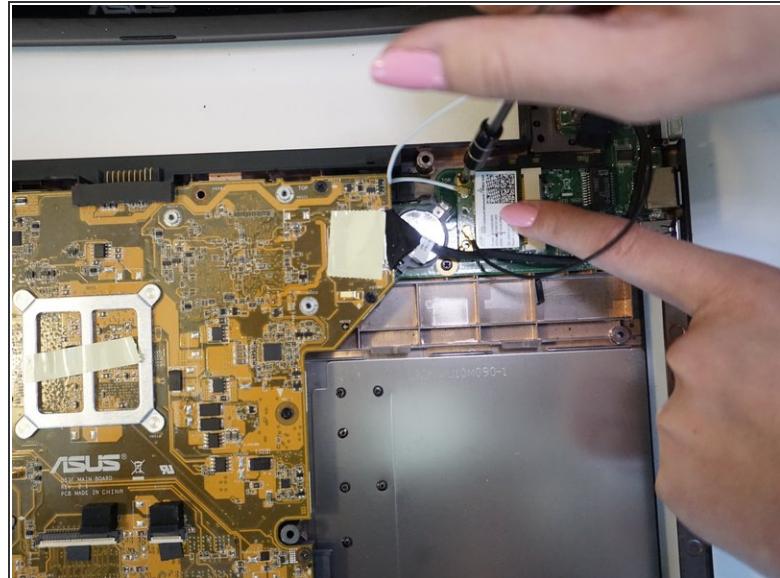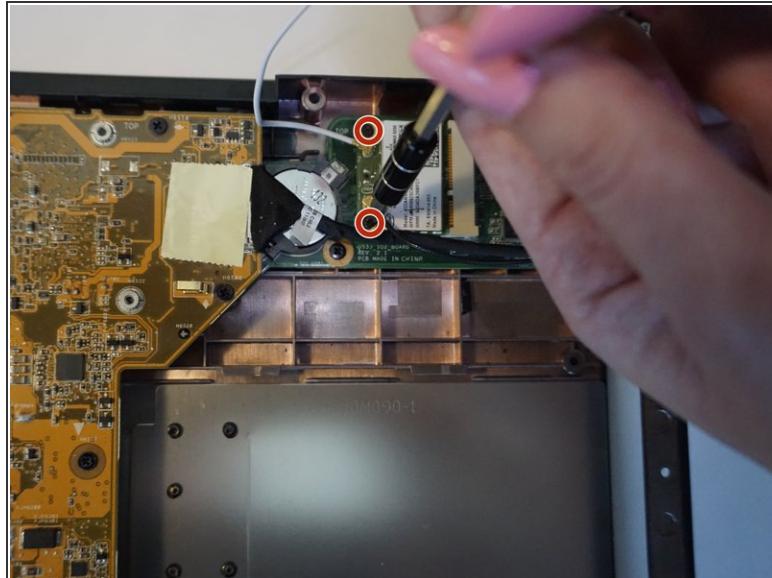


- Unscrew the two 3mm Phillips screws using a J1 screwdriver to release the Wi-Fi chip.

Step 11

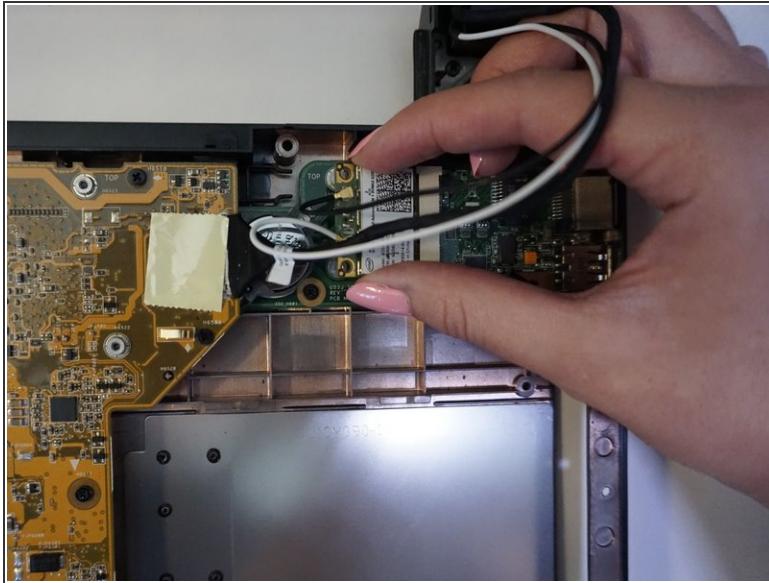

- Pull out the Wi-Fi chip

Step 12

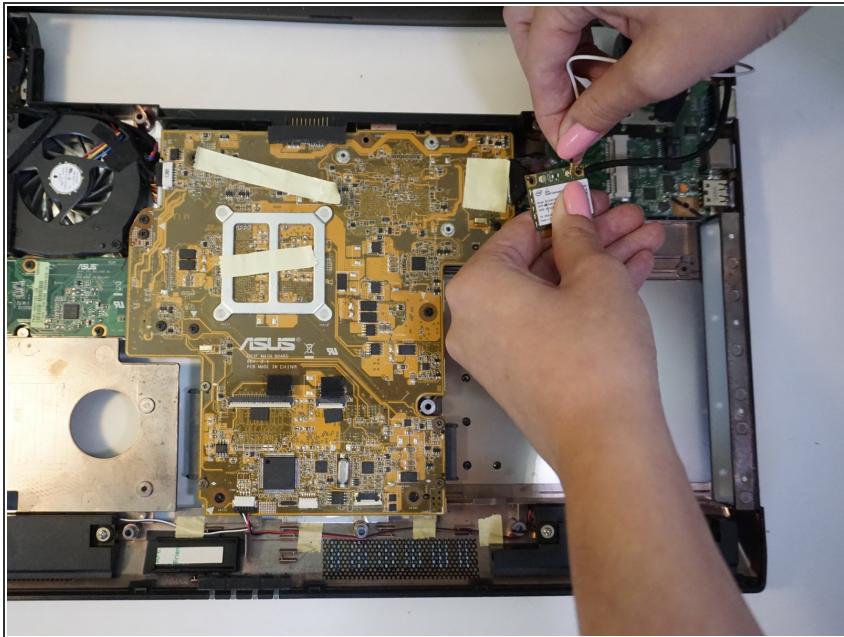

- Pull off both wires from the chip.

(i) It's advised to label the wires to remember where each colored wire connects to on the circuit board.

To reassemble your device, follow these instructions in reverse order.