




# ASUS U57A-BBL4 Fan Replacement

How to replace the fan in the ASUS U57A-BBL4 laptop.

Written By: Isabella Bernardi

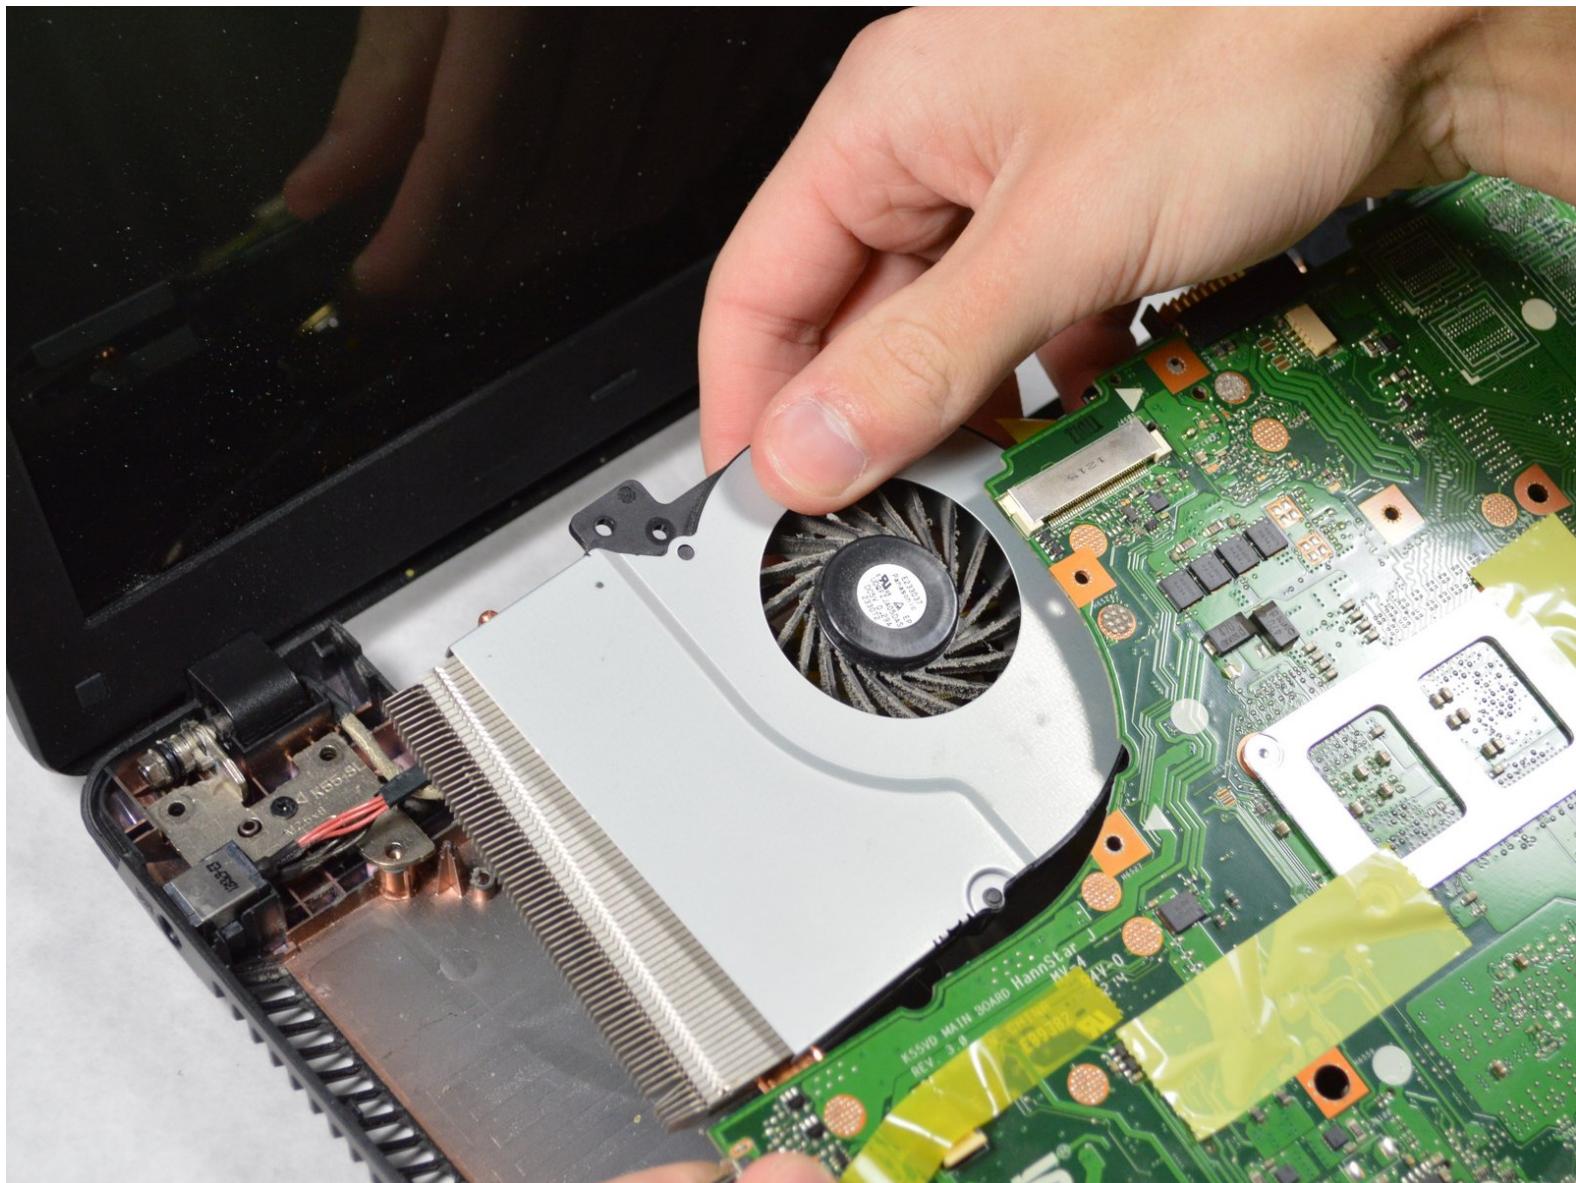

## INTRODUCTION

If your laptop makes a buzzing sound or seems to be overheating, the fan might need to be cleaned or replaced. This guide will help you remove the fan to clean or replace it.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)


## Step 1 — Battery



! Make sure the laptop is completely shut down to avoid data complications.

- Hold the left lock switch towards the left to the unlock option.

## Step 2

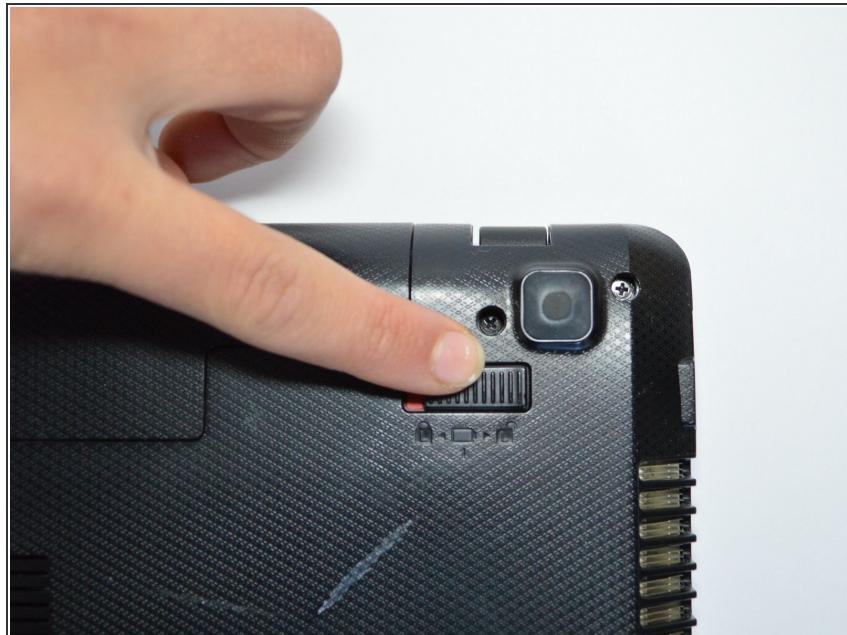


- Toggle the right lock switch to the unlock option.

## Step 3




- Gently slide the battery out while still holding the left unlock switch.

## Step 4 — Front Panel Assembly

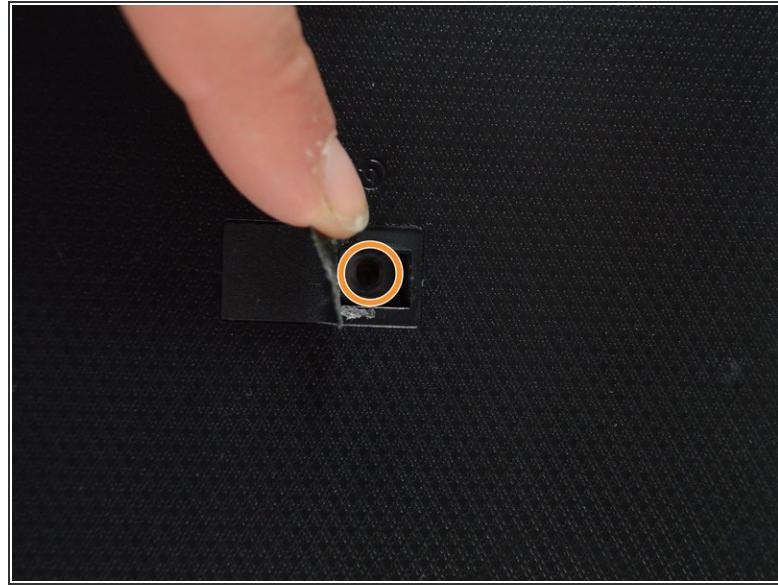


- Remove the two 2 mm Phillips head screws on each side on the bottom using PH00 screw driver.
- Remove the one 2 mm screw underneath the black cover in the middle using the same screw driver.

## Step 5

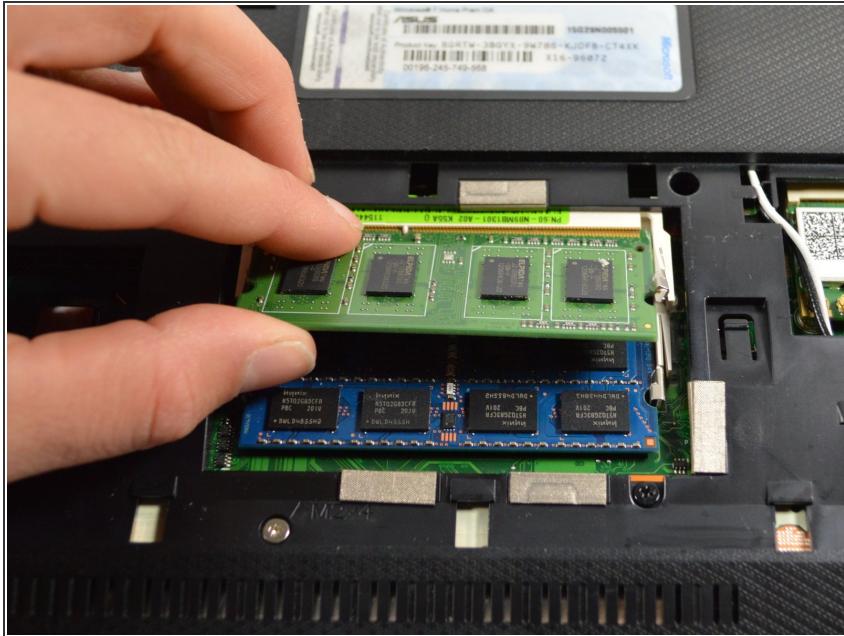


- Remove the RAM by lifting up with your fingers and sliding it out towards you.

## Step 6

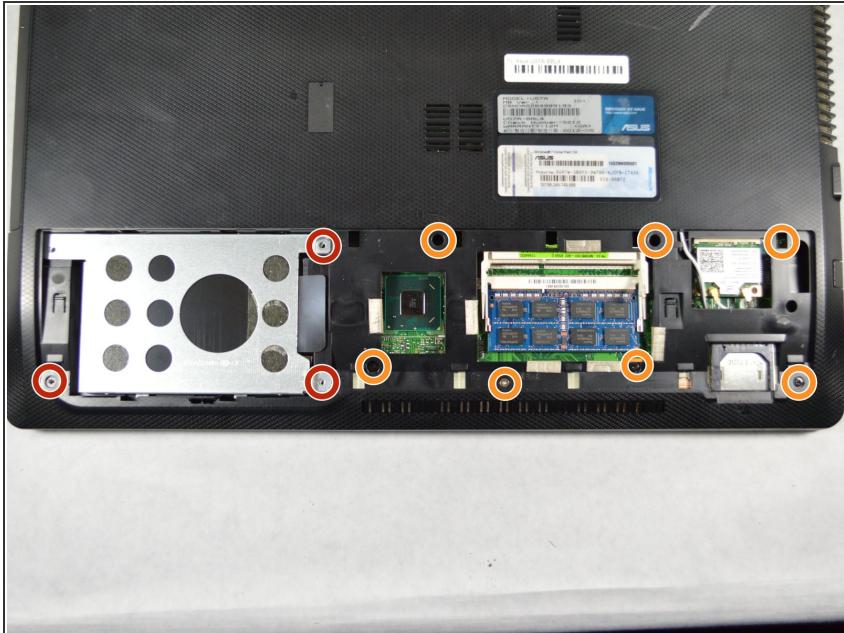

- Remove the three 2 mm Phillips head screws on the hard drive using PH00 screw driver.
- Remove the remaining seven 1.8 mm Phillips head screws using the same screw driver.

## Step 7

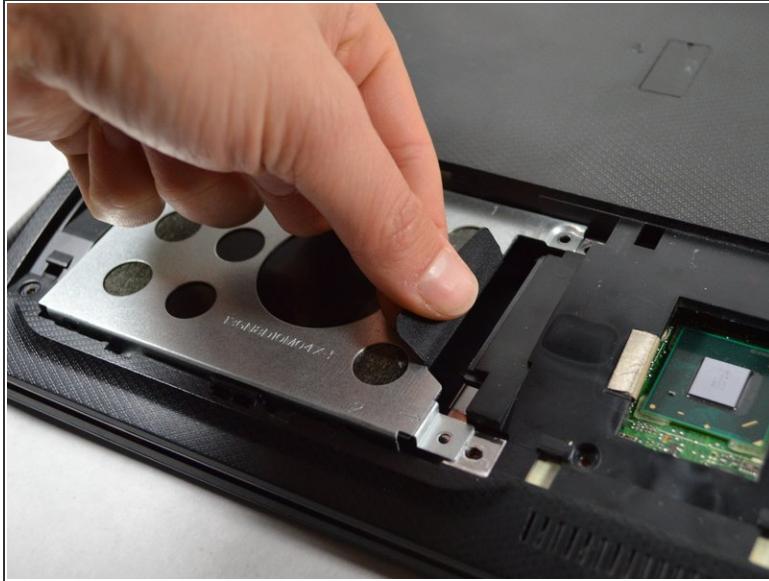


- Remove the hard drive by sliding it to the left and lifting up.

## Step 8



- Remove the six 2 mm Phillips head screws on the top edge of the laptop using PH00 screw driver.
- Flip the laptop right-side up and open the screen.


## Step 9

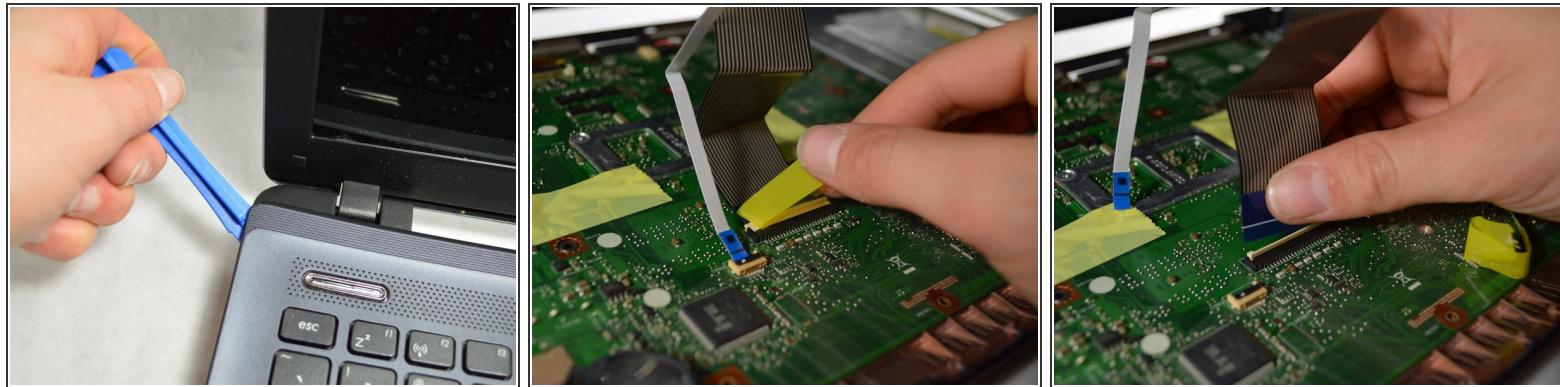

- Starting in a corner of the keyboard, pry the keyboard from the laptop using a plastic opening tool.
- Remove the ribbon cable on the bottom of the keyboard by lifting up on the tape and pulling up.


***(i)*** The front panel is now loose from the laptop.

## Step 10 — Optical Drive

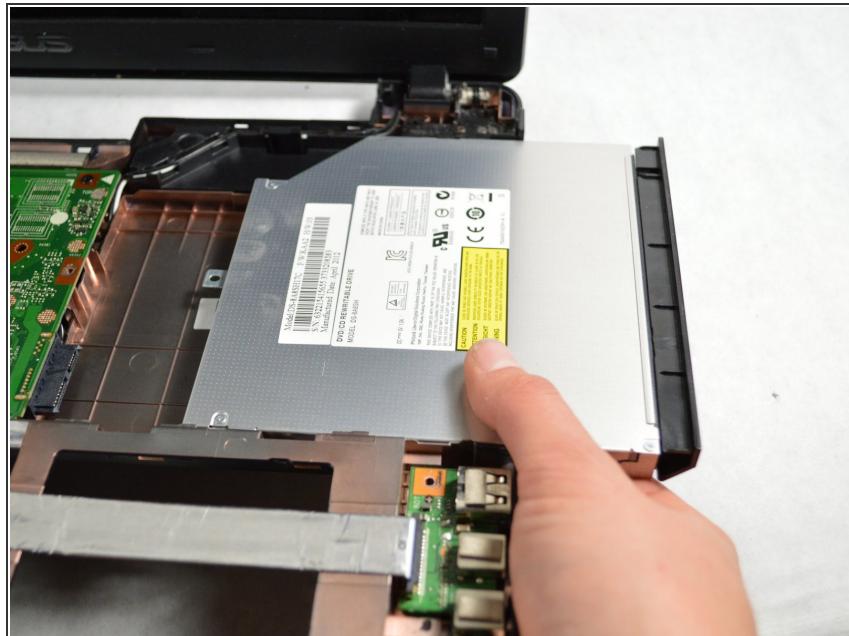



- Slide the optical drive out. It should easily come out.

## Step 11 — Motherboard

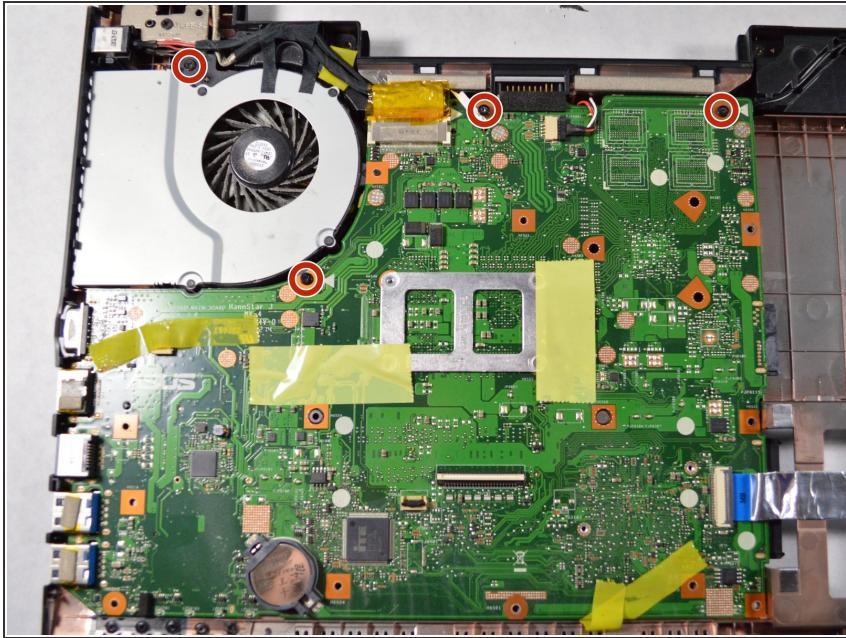


- Remove the four 2 mm Phillips head screws from the top of the motherboard and fan using PH #1 screwdriver.

## Step 12

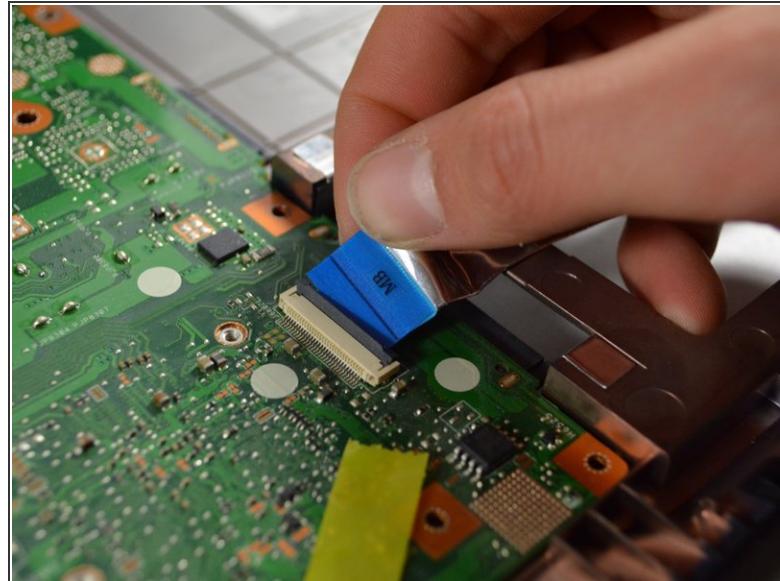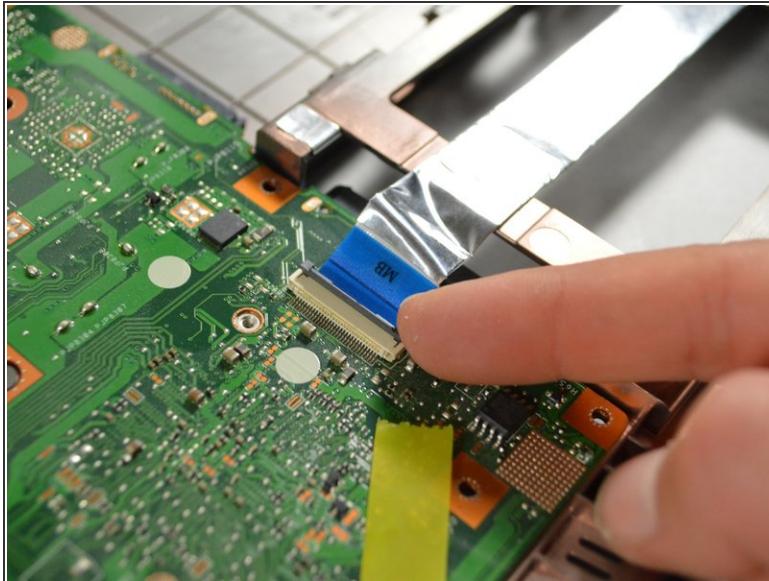


- Remove the blue cable on the bottom right by lifting up on the tab and pulling the cable out.

## Step 13

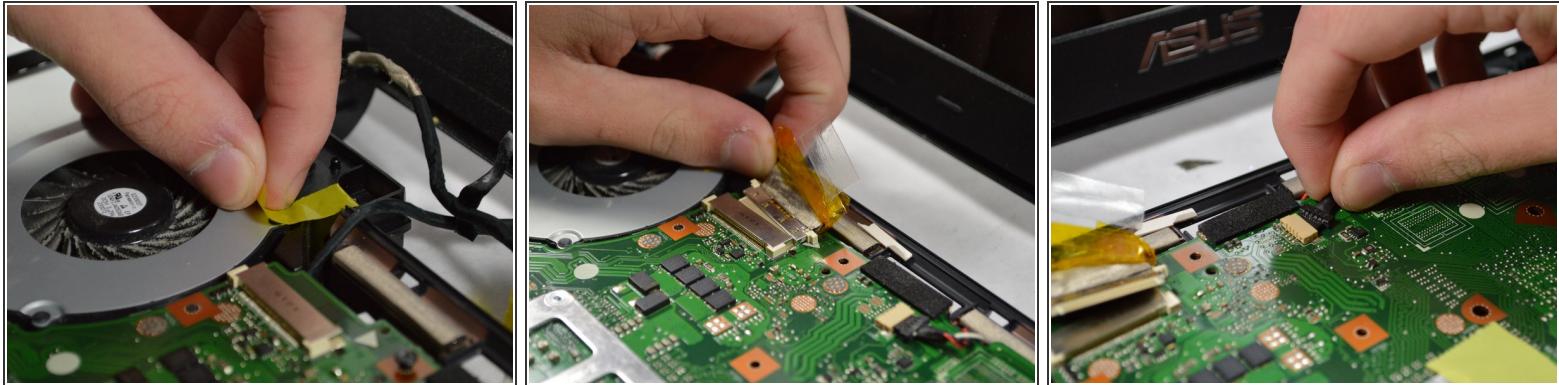

- Peel off the black and yellow tape attaching the fan to the base.
- Peel the tape off the yellow cable and pull out to remove the cable.
- Remove the small black, white and red cable next to the yellow cable at the top.

## Step 14

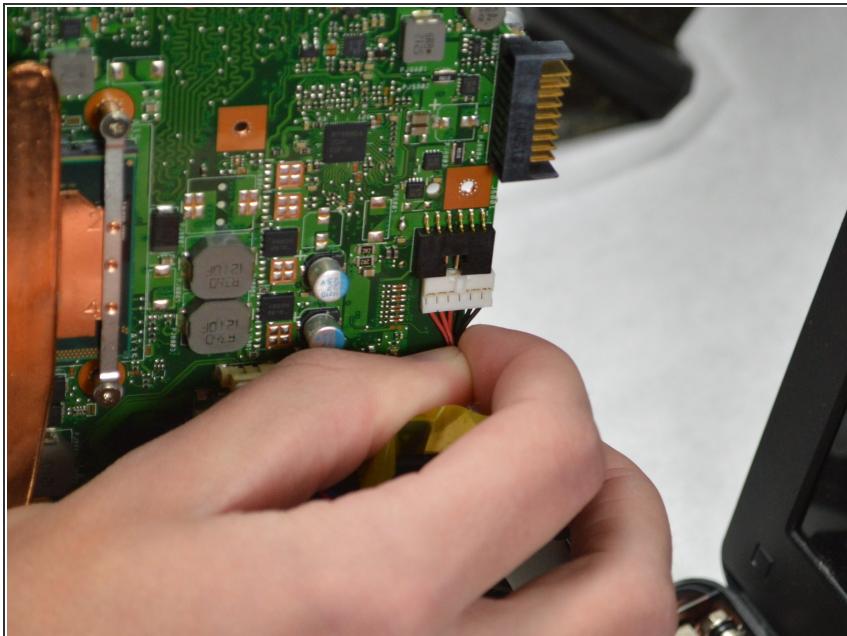

- Carefully and slowly lift up the motherboard from the base and remove the red and black cable underneath the motherboard in the top left corner near the fan.


*(i)* The motherboard and fan are still attached to each other, but are loose from the base.

## Step 15




- Remove the four 2 mm Phillips head screws surrounding the copper rod using PH1 screw driver.

## Step 16

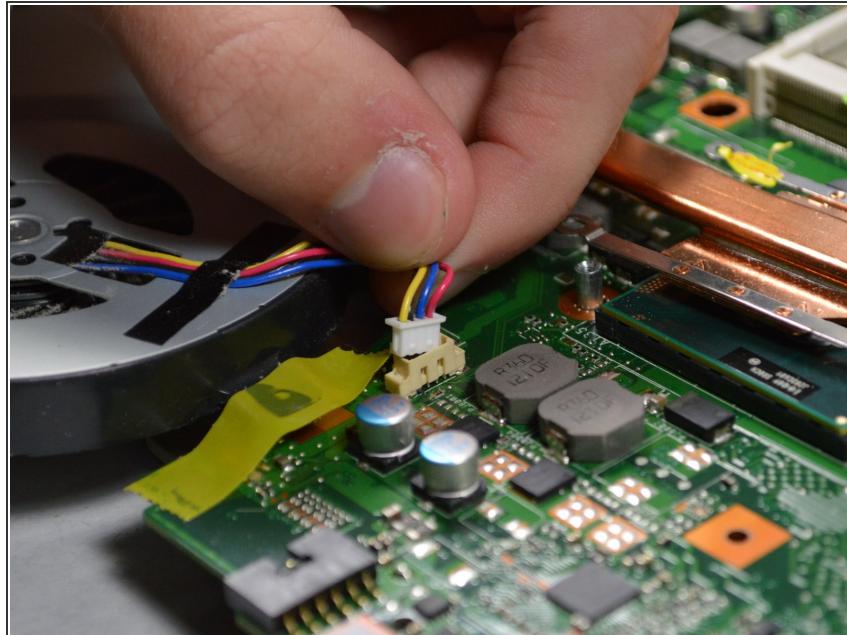

- Remove the red, blue, black and yellow cable attaching the fan and motherboard together with your fingers.
- Now the motherboard and fan are completely separate from each other.

## Step 17 — Fan

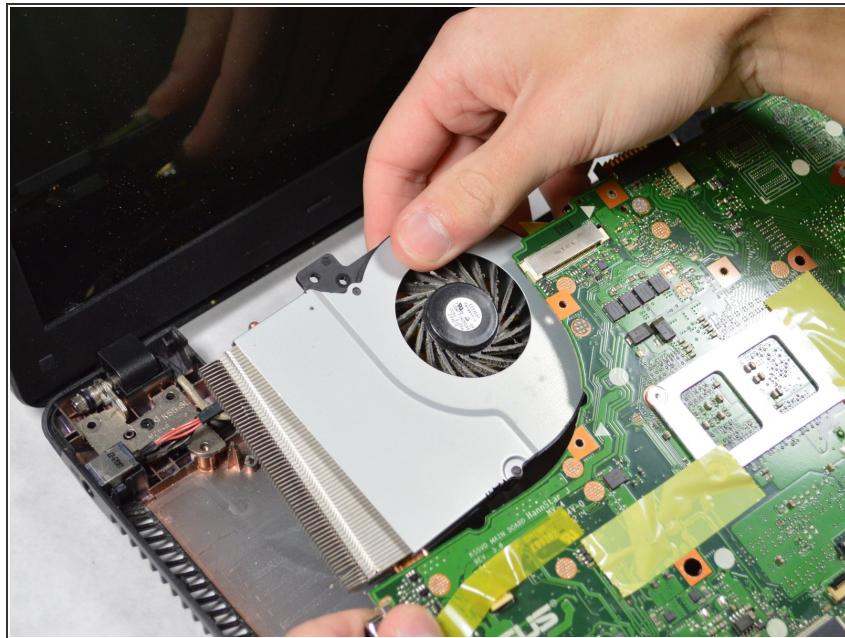

- Slide the fan out from the ridged metal component.

To reassemble your device, follow these instructions in reverse order.