




# ASUS VivoBook S400C Wifi Card Replacement

How to replace the WiFi card for the ASUS VivoBook S400C.

Written By: Ashley Panduro

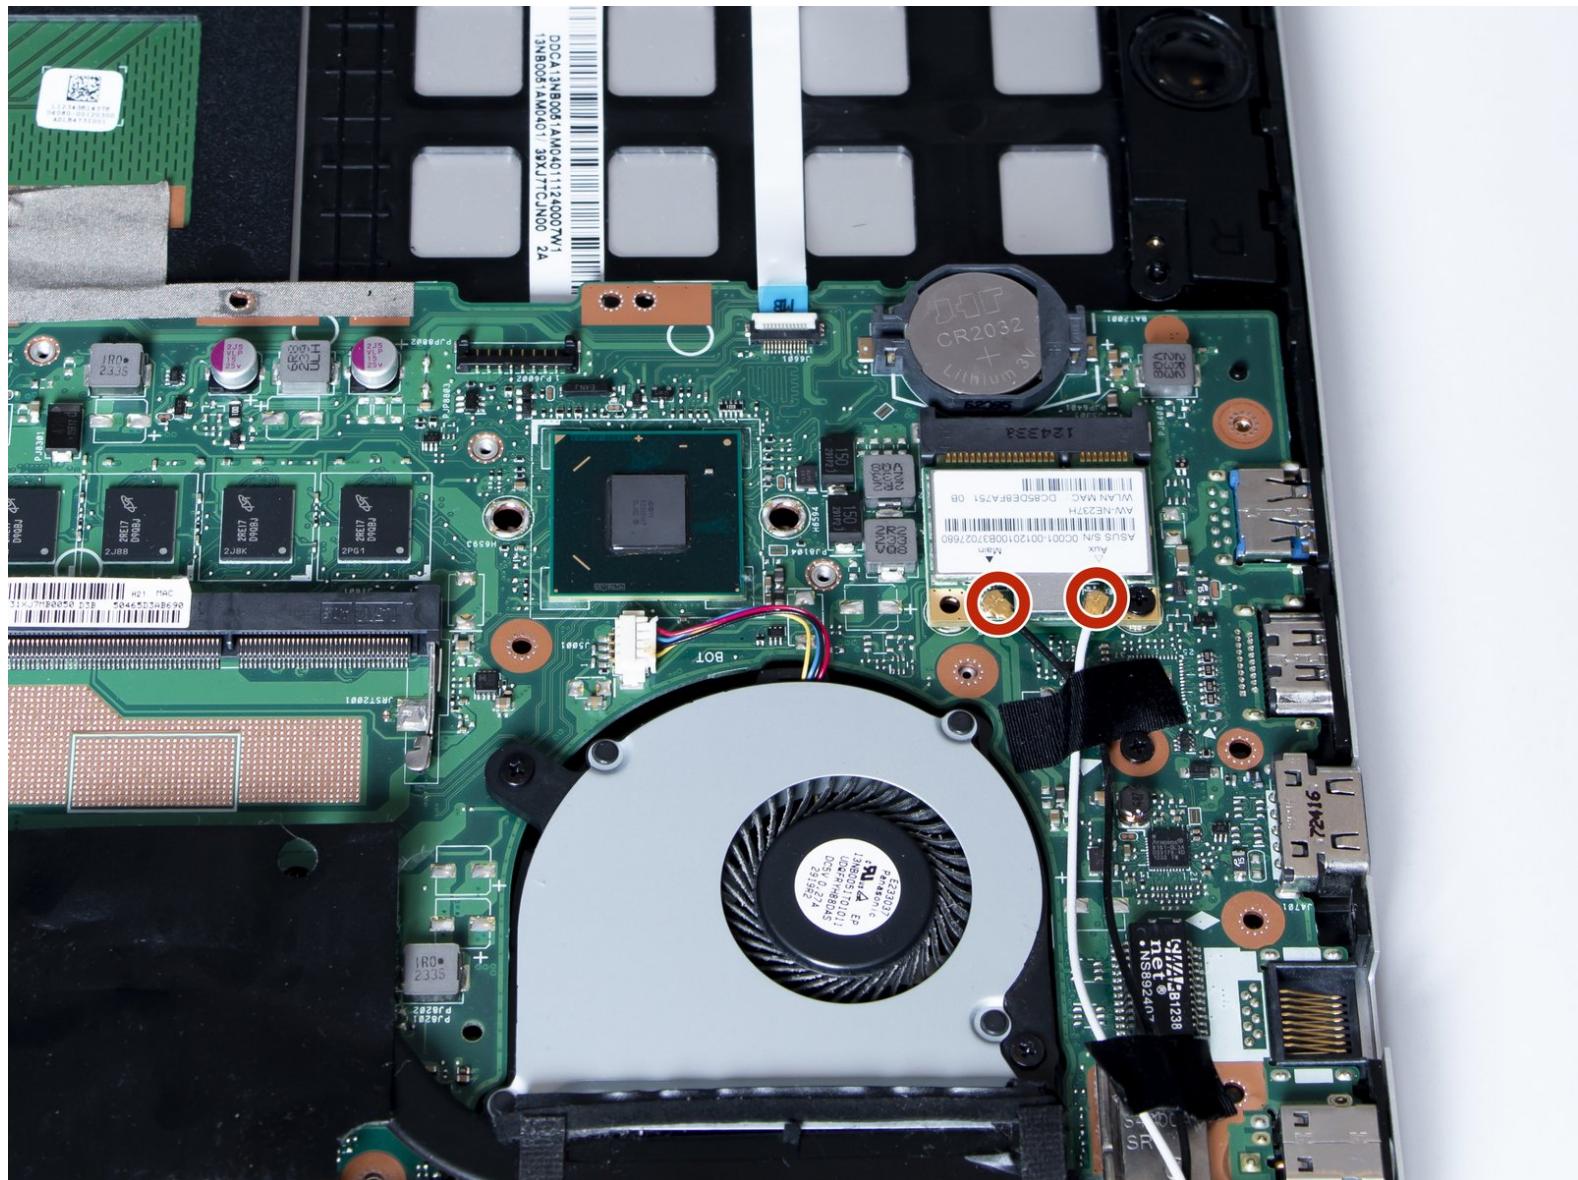

## INTRODUCTION

If your ASUS VivoBook S400C has an issue regarding wifi after running through [general troubleshooting](#) or you want to replace the wifi card with a different model, follow this guide to replace the wifi card.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Battery




- Flip the device over and remove the ten 5.7 mm screws with a Phillips #0 screwdriver.

## Step 2




- Use a spudger or your fingers to go around and lift the edges and release the back panel.

## Step 3

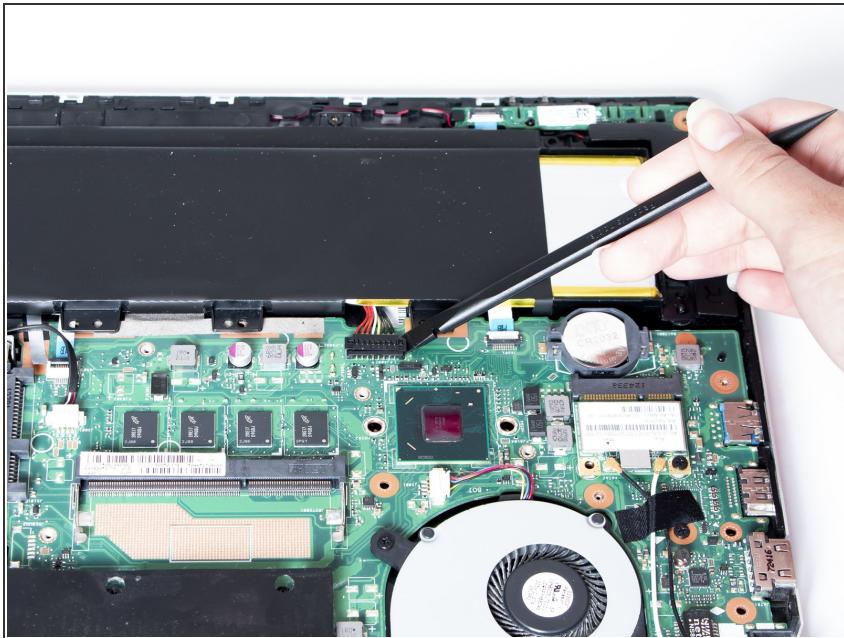

- Using a spudger, lift up the ribbon cable connecting the battery to the motherboard.

## Step 4

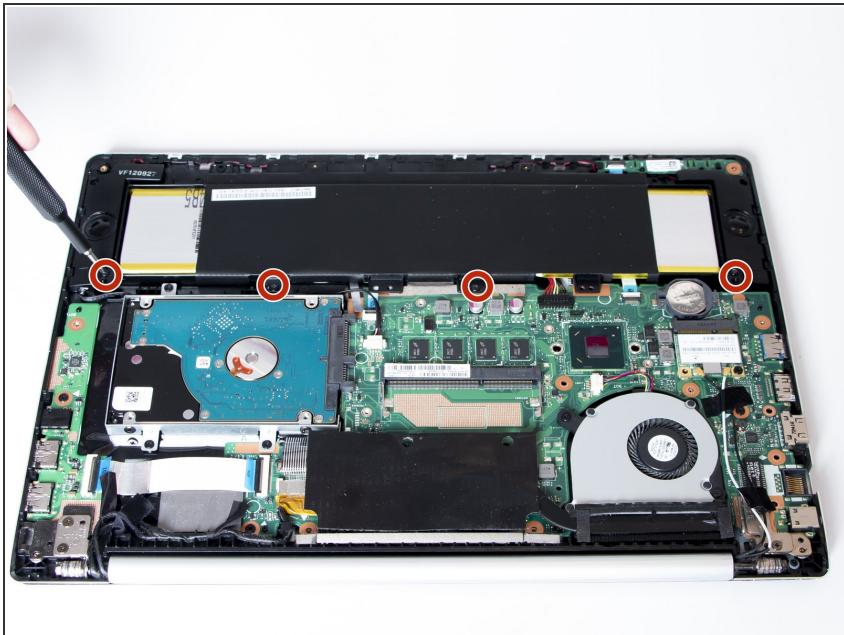



- With a Phillips #0 screwdriver, remove the four 5.7 mm screws holding the battery to the laptop.

## Step 5



- Carefully lift the battery up and out of the device.

## Step 6 — Wifi Card

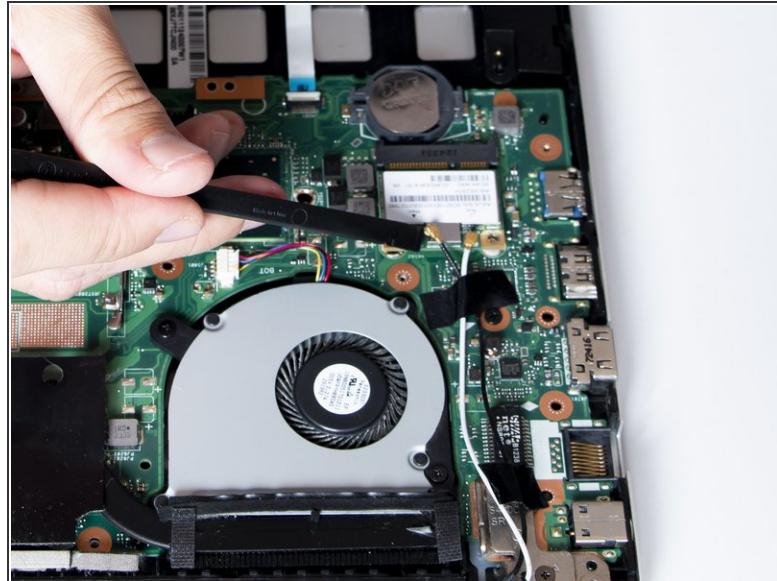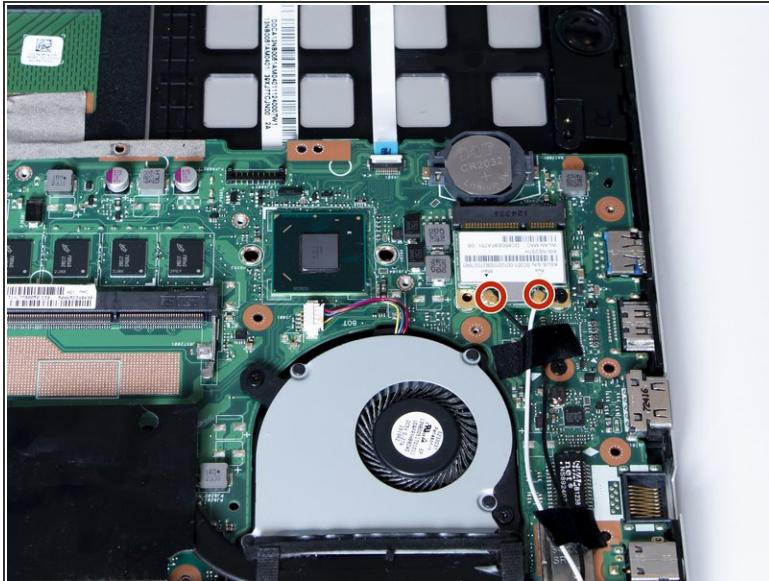


- Use a spudger to release the cables from the wifi card.

## Step 7



- Remove the singular 3.8 mm screw with a Phillips #0 screwdriver.

## Step 8

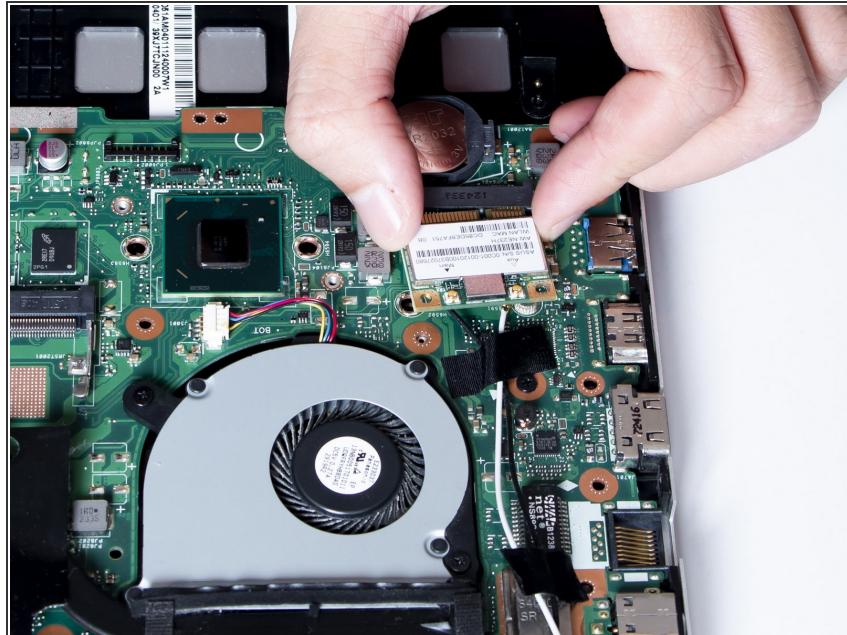

- Pull the wifi card up and out.

To reassemble your device, follow these instructions in reverse order.