



ASUS X42J Disk Drive Replacement

This guide will show you how to replace your disk drive if it has stop reading your disk.

Written By: Jonathan Cole



 **TOOLS:**

- Phillips #0 Screwdriver (1)

 **PARTS:**

- Optical Disk Drive (1)

Step 1 — Disk Drive



- Use the Phillips #0 screwdriver to remove the two screws on the back of the laptop.

Step 2



- Slide the disk drive out of the device.

To reassemble your device, follow these instructions in reverse order.