



ASUS X502CA Battery Replacement

This guide will explain how to replace the battery on the ASUS X502CA.

Written By: David Conner



INTRODUCTION

It is possible that your battery has stopped working due to physical or electrical damage. A replacement batter will need to be purchased. After purchasing a new battery follow these steps to replace your broken battery.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

PARTS:

- [Li-Polymer Battery Pack C21-X502](#) (1)

Step 1 — Palm Rest with Keyboard and Touch Pad



- Use the Phillips #00 screwdriver to remove the seven 90mm screws.
- Use the Phillips #00 screwdriver to remove the four 50mm screws.


Step 2



- Next, use the plastic opening tool to carefully pop off the keyboard cover panel.


 Be cautious when pulling off the cover because there are cables you will have to disconnect before completely removing the panel.

Step 3

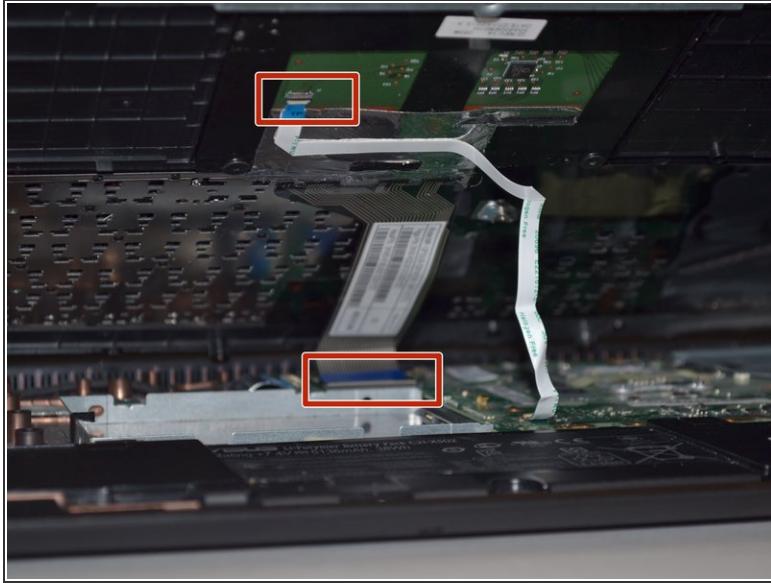

- Lift palm rest and unplug keyboard cable and touchpad cable using tweezers. After these two cables have been unplugged you can remove the keyboard cover panel.

Step 4

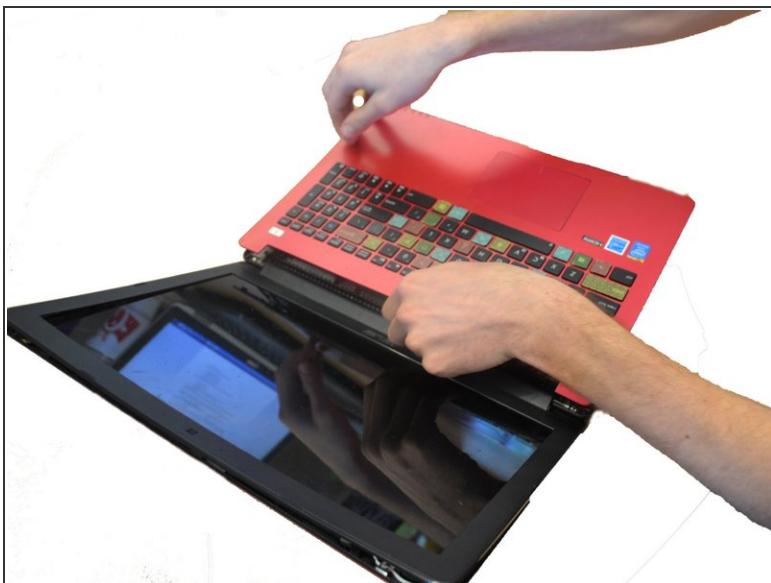


- Lift Palm Rest away.
- Replace with new palm rest.

Step 5 — Battery



- Next, locate the battery in the front of laptop (closest to you).

Step 6


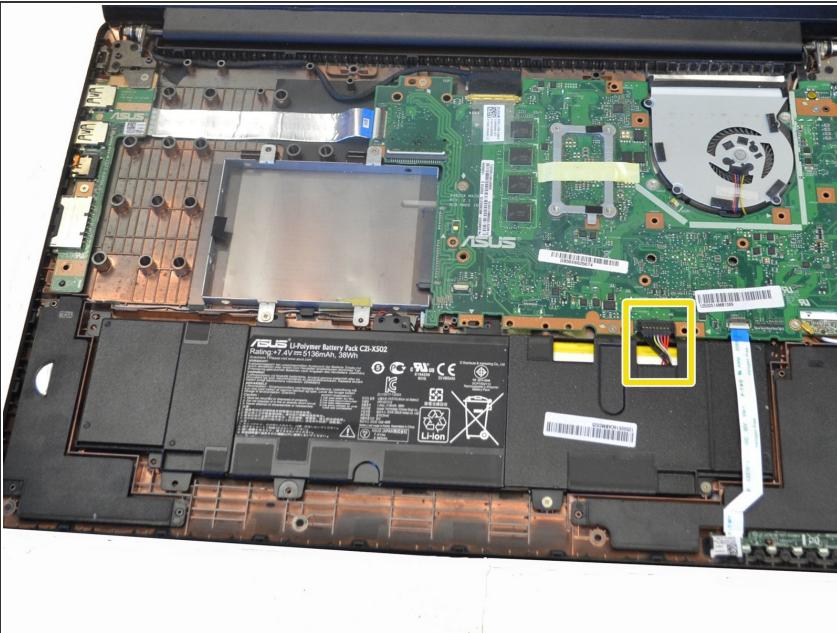


- Unplug the battery from the laptop in the upper right hand corner of the battery using tweezers.



If battery is not unplugged, motherboard may shock you.

Step 7

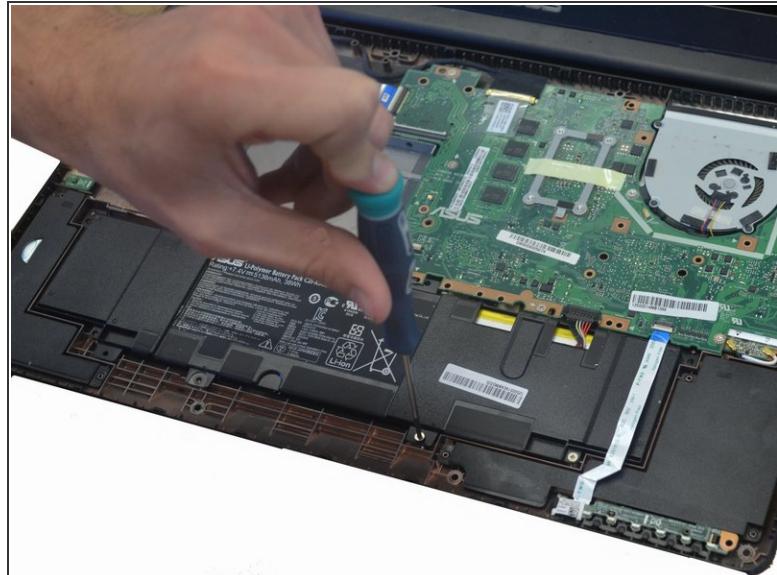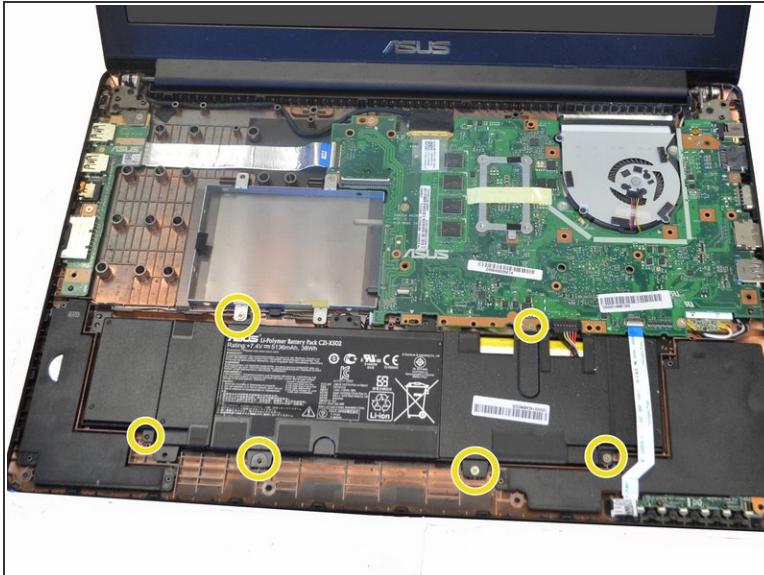

- Use the Phillips #00 Screwdriver to carefully remove the 6 screws holding the battery in place.
- Once you have removed all six screws carefully lift the battery out and dispose.
- *(i)* Each screw is 50 mm in length and 15 mm in diameter.

To reassemble your device, follow these instructions in reverse order.