




ASUS X502CA Fan Replacement & Cleaning

This guide will explain how to replace a faulty fan.

Written By: David Conner

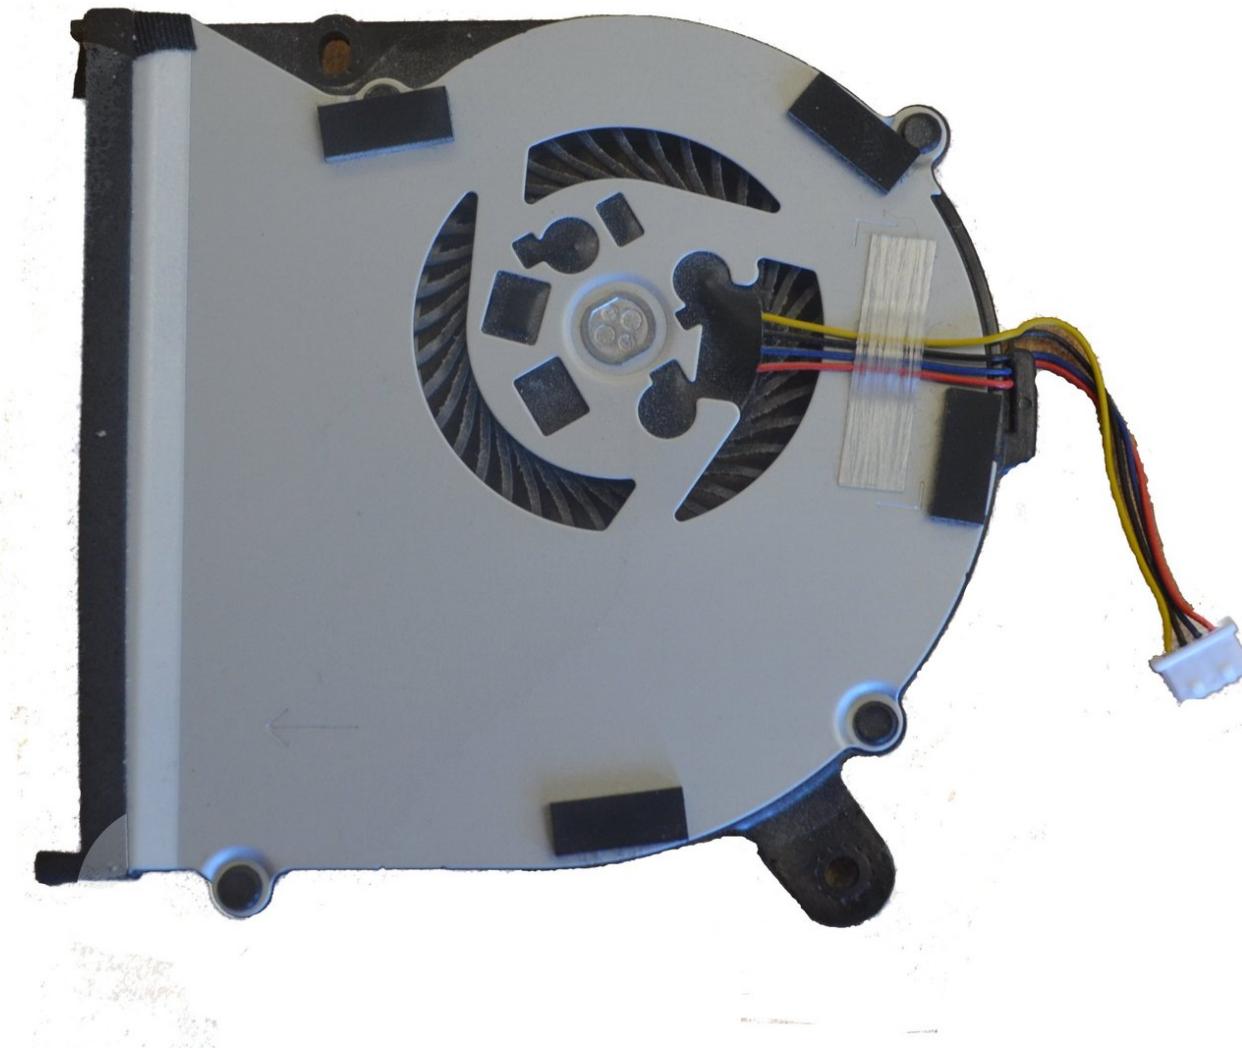

INTRODUCTION

It is possible that your fan has stopped working due to physical or electrical damage. A replacement fan will need to be purchased. After purchasing a new fan follow these steps to replace the broken fan of your ASUS X502CA.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

PARTS:

- [Laptop Cooling Fan - 13N0-P1A0K11](#) (1)

Step 1 — Fan



- First, remove all eleven phillips screws located on the bottom of the laptop using the Phillip #00 screwdriver.

- *i* Bottom 4 are 5 mm length, and the rest are 9 mm in length. All are 2 mm in diameter.



Step 2



- Begin to remove the keyboard cover panel by using the Plastic Opening Tool to carefully pop off the clips around the parameter.


! Be cautious when pulling off the cover because there are cables you will have to disconnect before completely removing the panel.

Step 3

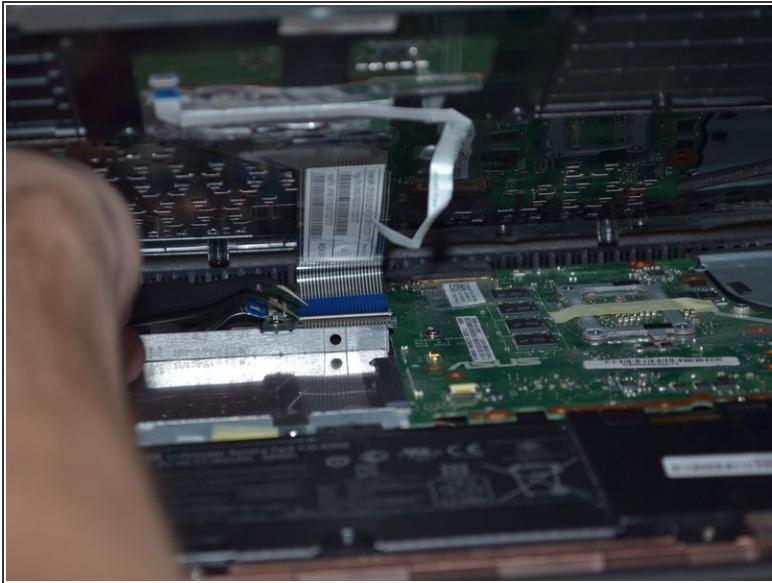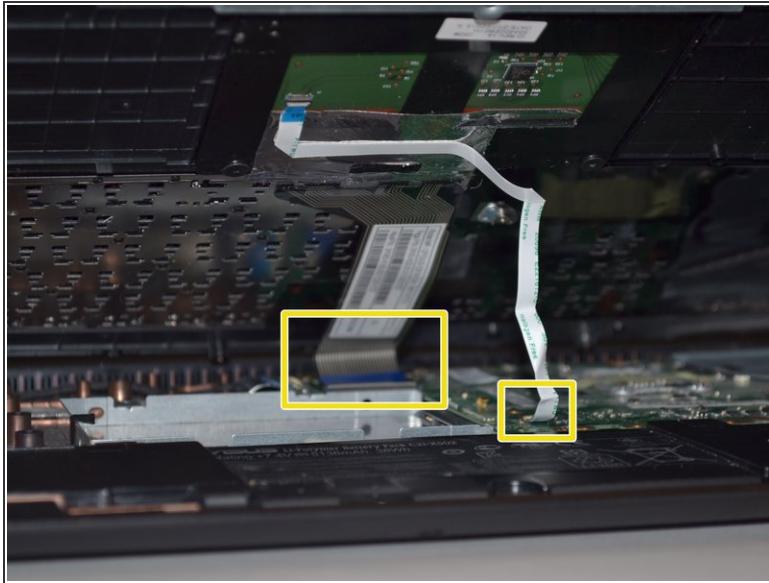

- Lift palm rest and unplug keyboard cable and touchpad cable using tweezers. After these two cables have been unplugged you can remove the keyboard cover panel.


Step 4

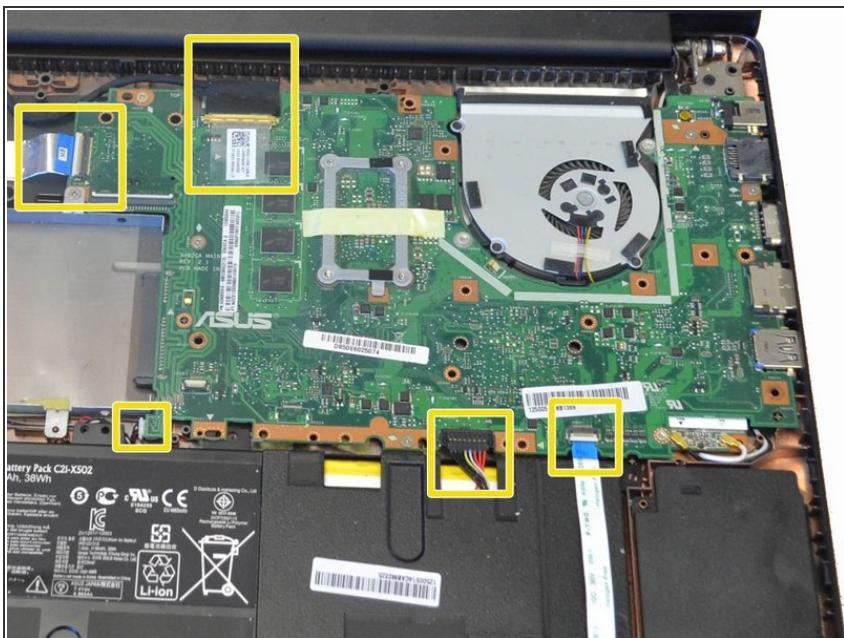

- Unlatch each of the specified pieces using tweezers or just your fingers.

⚠ If these are not unplugged, the motherboard may shock you.

Step 5

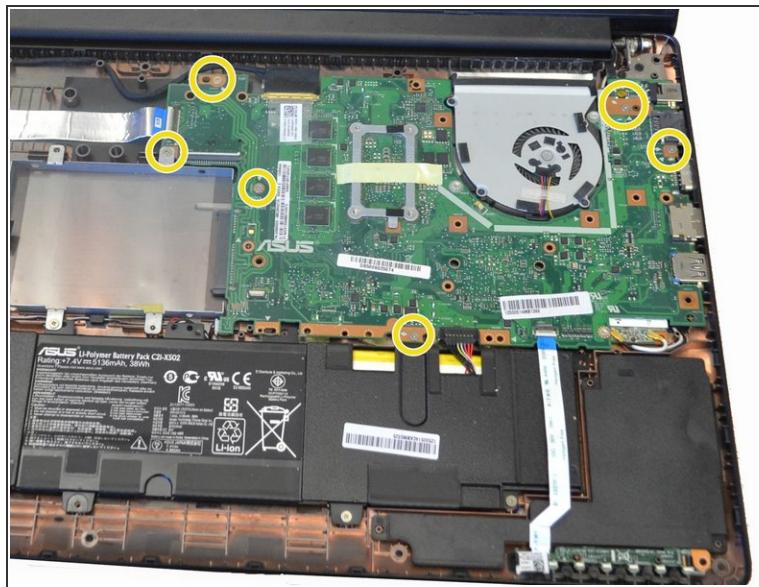

- Unscrew each of the specified screws using Phillips #00 screwdriver.
- Flip motherboard over away from screen.

(i) Each screw is 50 mm in length with 15 mm diameter.

Step 6



- Unscrew each of the specified screws using the Phillips #00 screwdriver.

(i) Each screw is 50 mm in length with 15 mm diameter.

Step 7



- Unplug power strip using tweezer, and tear off bottom strip using fingers to remove fan.

Step 8



- Replace with new fan.

To reassemble your device, follow these instructions in reverse order.