



ASUS X552LAV-BBI5N08 Battery Replacement

This is a battery replacement guide for the ASUS X552LAV-BBI5N08 laptop.

Written By: Jason Vo



INTRODUCTION

This guide will walk you through the process of replacing a dead or dying battery in a ASUS X552LAV-BBI5N08.

Step 1 — Battery



***i* Battery is not showed in pictures.**

- Flip the laptop face down.

Step 2



- Slide the right button to the left.
- Hold the left button to the right.
- While you hold the left button in position, slide the battery out by pushing it away from you.

To reassemble your device, follow these instructions in reverse order.