



ASUS X552LAV-BBI5N08 CD Drive Replacement

This guide will show you how to replace the CD drive for a ASUS X552LAV-BBI5N08 laptop.

Written By: Jason Vo



INTRODUCTION

This guide will show you how to replace the CD drive for a ASUS X552LAV-BBI5N08 laptop.

TOOLS:

- [Tweezers \(1\)](#)
- [Y1 Tri-point Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



***i* Battery is not showed in pictures.**

- Flip the laptop face down.

Step 2



- Slide the right button to the left.
- Hold the left button to the right.
- While you hold the left button in position, slide the battery out by pushing it away from you.

Step 3 — CD Drive



- Locate the bottom panel. It is at the opposite end of the battery.
- Remove the two 12mm screws at the bottom panel with a Tri-wing Y1 screwdriver.

Step 4



- Remove bottom panel by lifting it up.
- Locate the hard drive.
- It is located in the bottom left corner.

Step 5



- Remove the four 5.5mm screws located on the hard drive case using a Tri-wing Y1 screwdriver.
- Slide the hard drive out to the left.

Step 6




- Use Tri-wing Y1 screwdriver to remove seven 4mm screws from battery area.
- Use opening tool to split keyboard from base of the laptop.
- Make sure to start from one end and go around the edges.

Step 7




- Flip laptop to sit on its bottom.
- Lift keyboard up by the front edge

Step 8

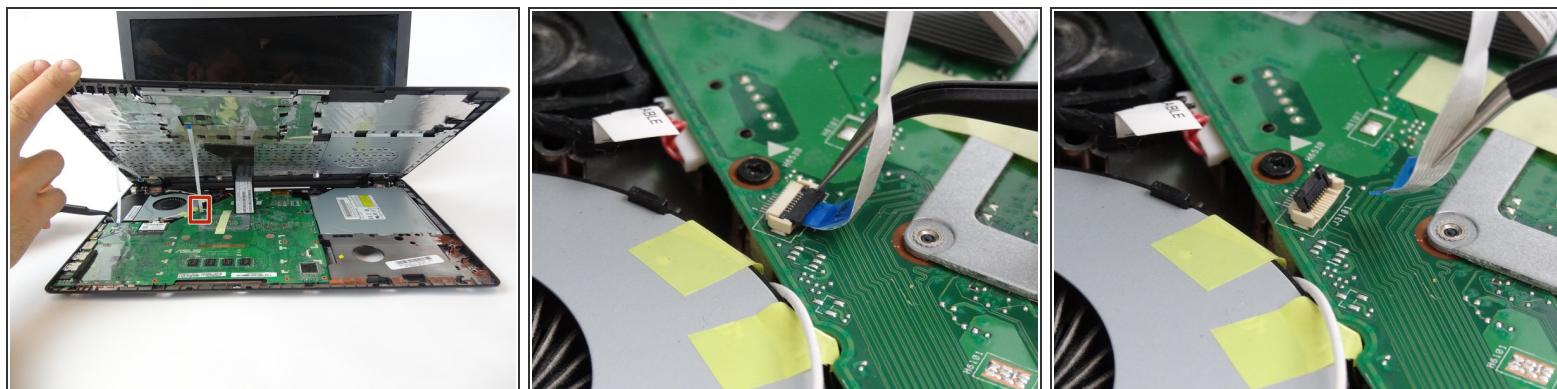

- Flip up the small locking flap for the two ZIF connectors.
- Unplug the connectors that are keeping the keyboard connected.

Step 9

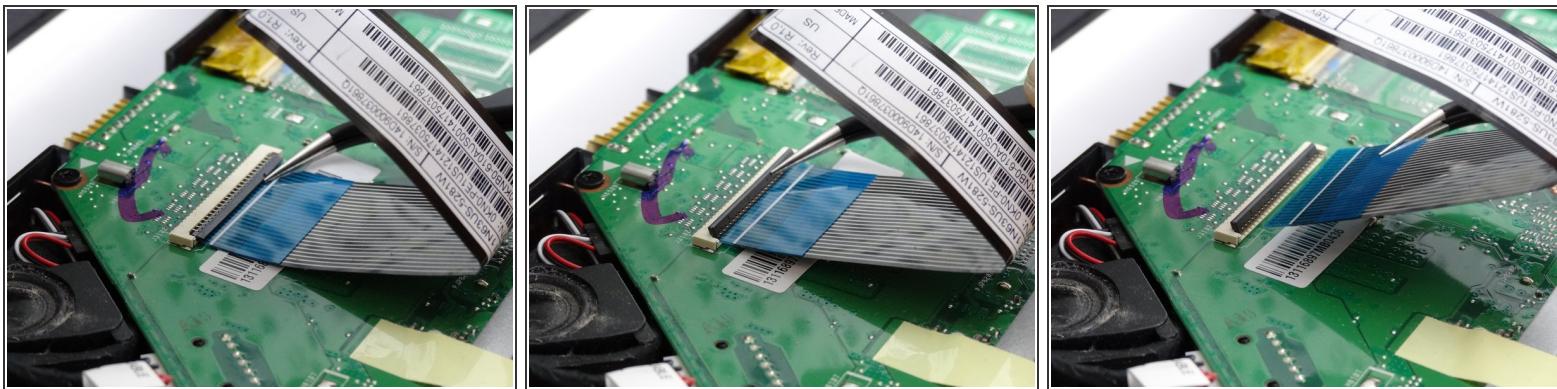

- Flip up the locking flap for the ZIF connector.
- Unplug the connector that is keeping the keyboard connected.

Step 10



- Remove keyboard from laptop.
- Remove two 4mm screws around CD drive
- Slide the CD drive out to the right to remove it.

To reassemble your device, follow these instructions in reverse order.