



# ASUS ZenBook UX302LA-BHI5T08 Battery Replacement

If your ASUS ZenBook UX302LA-BHI5T08 starts to show any sign of not powering up or not charging, use this guide to remove and replace your battery.

Written By: Jin Feng Lin



This document was generated on 2020-02-27 03:52:28 AM (MST).

## INTRODUCTION

This guide goes over the procedure step by step on how to remove the battery in the ASUS ZenBook UX302LA-BHI5T08. This is something that's essential to do when experience issue with powering up the computer or faulty battery.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Cover



- Flip the laptop over so the model stickers face the ceiling.

## Step 2





- Remove eleven 7mm Phillips #00 screws that secure the back cover.
- Two screws are under the rubber pad.

## Step 3



- Using a spudger, carefully remove the back cover.

## Step 4 — Battery

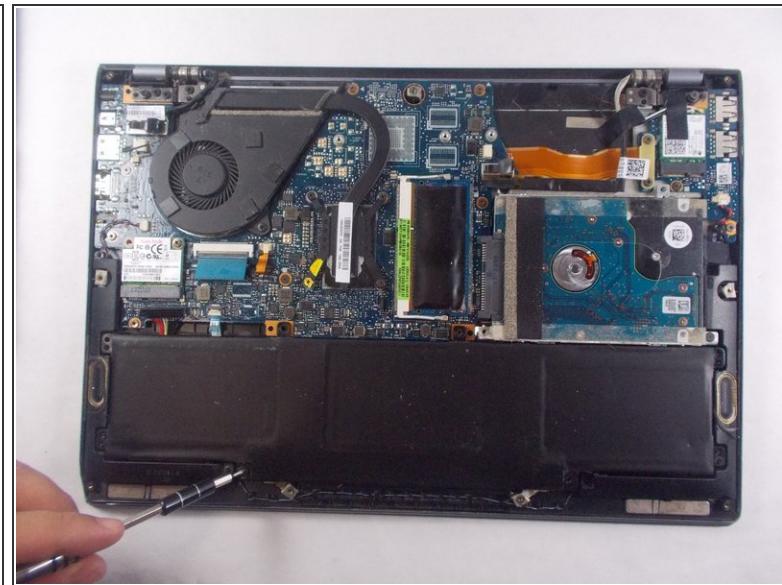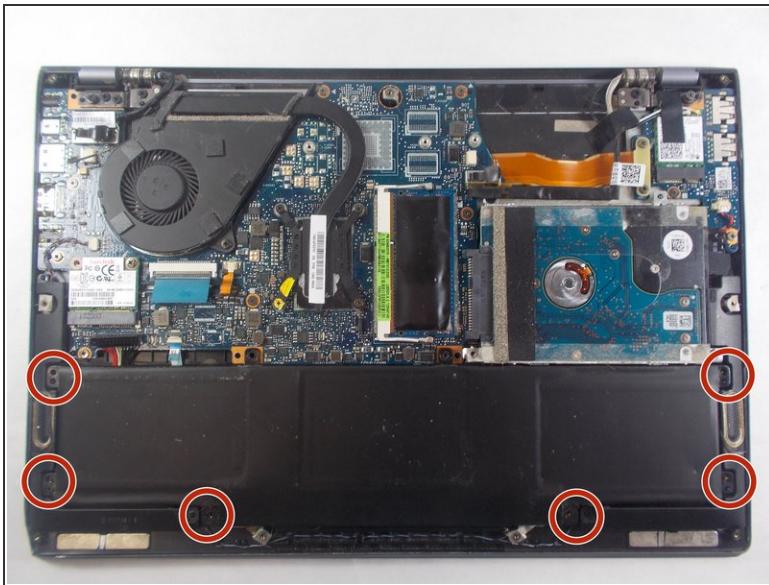


- Remove the six 3mm Phillips #00 screws holding the battery in place.

## Step 5



- Disconnect the battery wires from the motherboard by pulling on the black tab using a spudger or your hands.

## Step 6

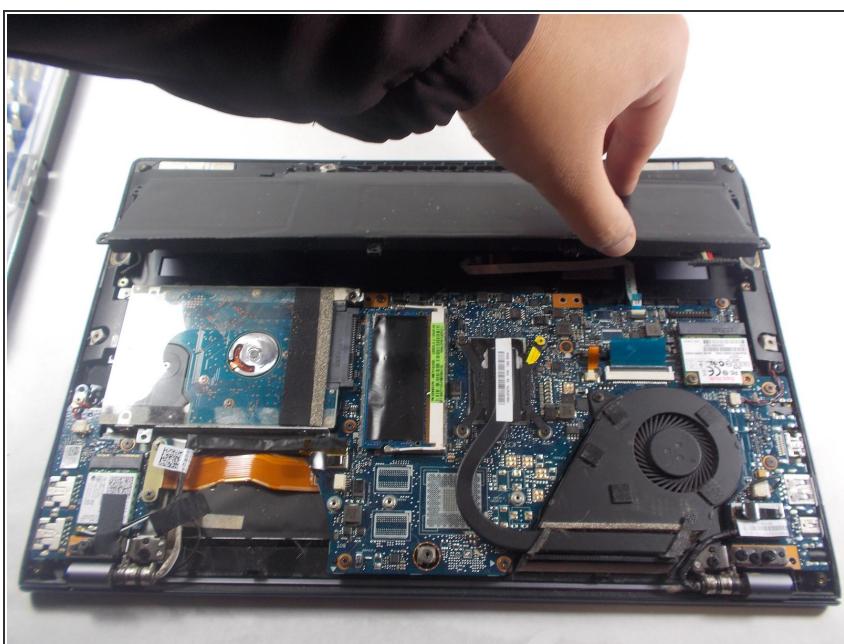

- Carefully lift the battery up and out of the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-02-27 03:52:28 AM (MST).

