


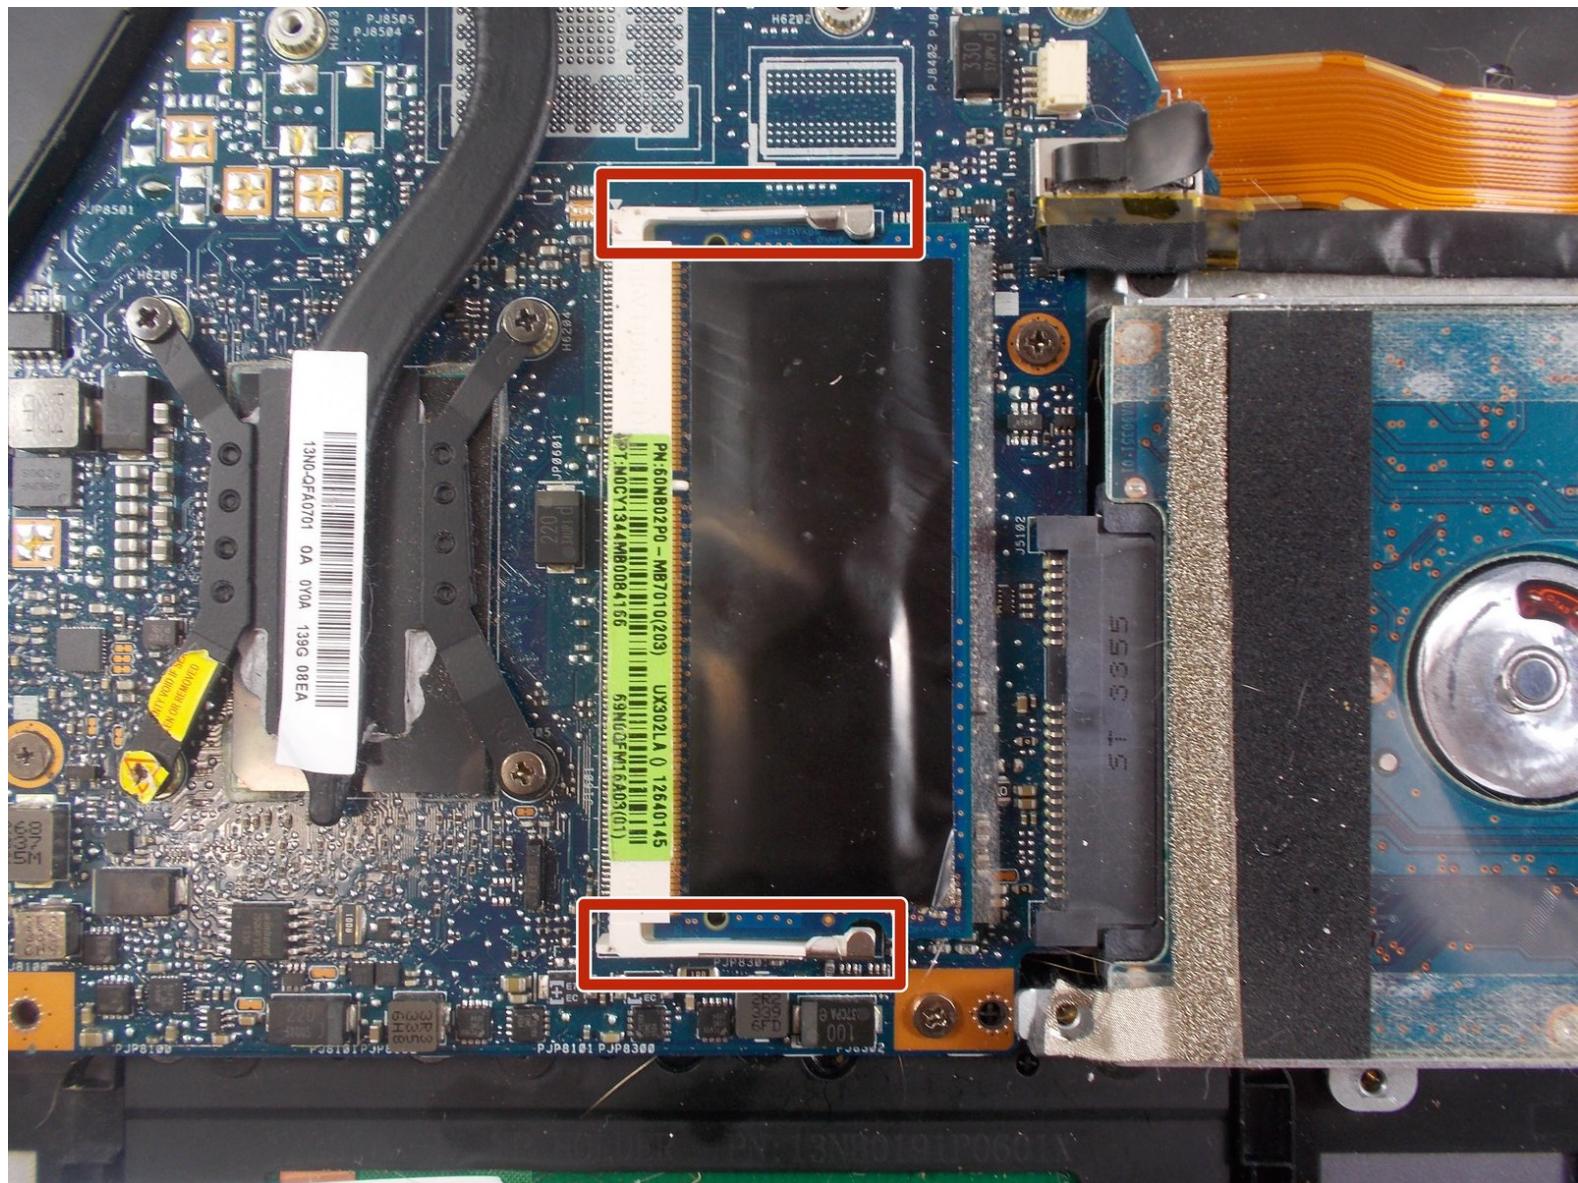

ASUS ZenBook UX302LA-BHI5T08 RAM Replacement

This guild details the procedures on how to remove the RAM on your ASUS ZenBook UX302LA-BHI5T08.

Written By: Jin Feng Lin



This document was generated on 2020-02-19 03:40:03 PM (MST).

INTRODUCTION

This guide goes over the procedure step by step on how to remove the RAM on the ASUS ZenBook UX302LA-BHI5T08. Replacing a RAM could be an option when you start to experience issues with the device such as slow down, bad gaming experience or connection with networks.

TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Cover




- Flip the laptop over so the model stickers face the ceiling.

Step 2



- Remove eleven 7mm Phillips #00 screws that secure the back cover.
- Two screws are under the rubber pad.

Step 3

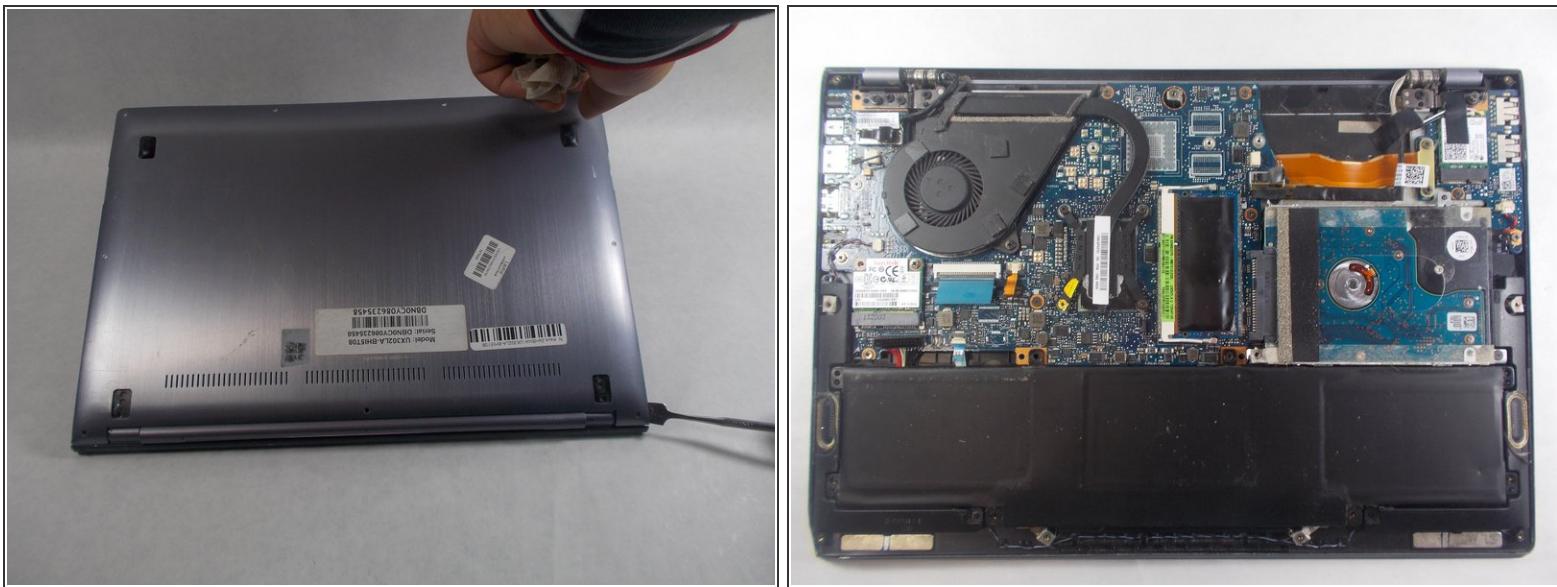



- Using a spudger, carefully remove the back cover.

Step 4 — RAM




- The RAM is locked by the two metal brackets .
- To unlock the RAM, simply move the metal bracket using your finger
- When the RAM is unlock, it will elevate itself.

Step 5

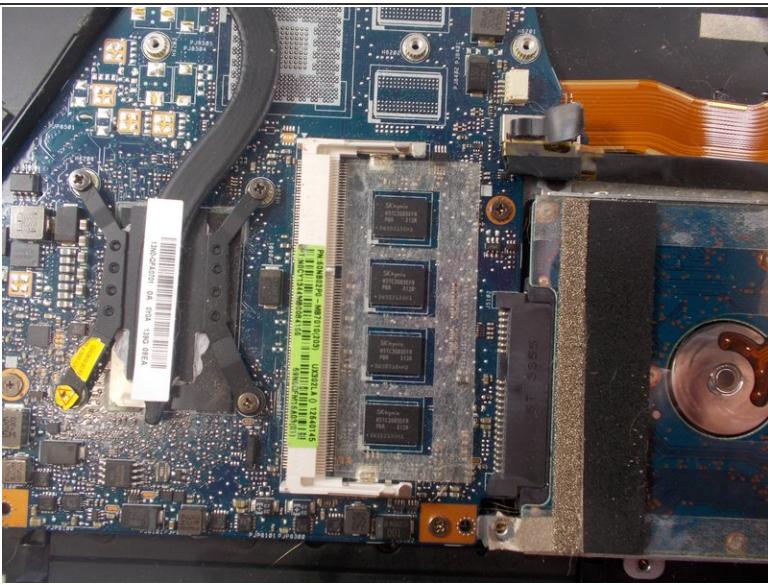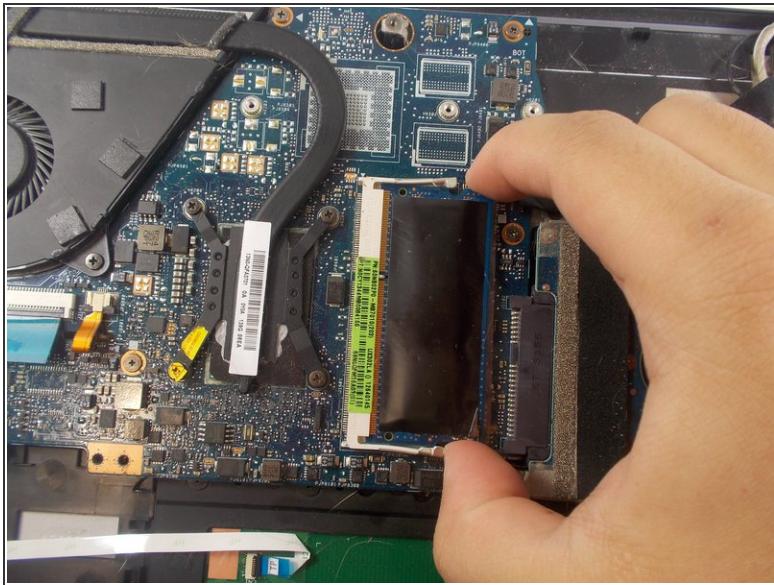

- Now simply remove the RAM from the laptop.

Step 6

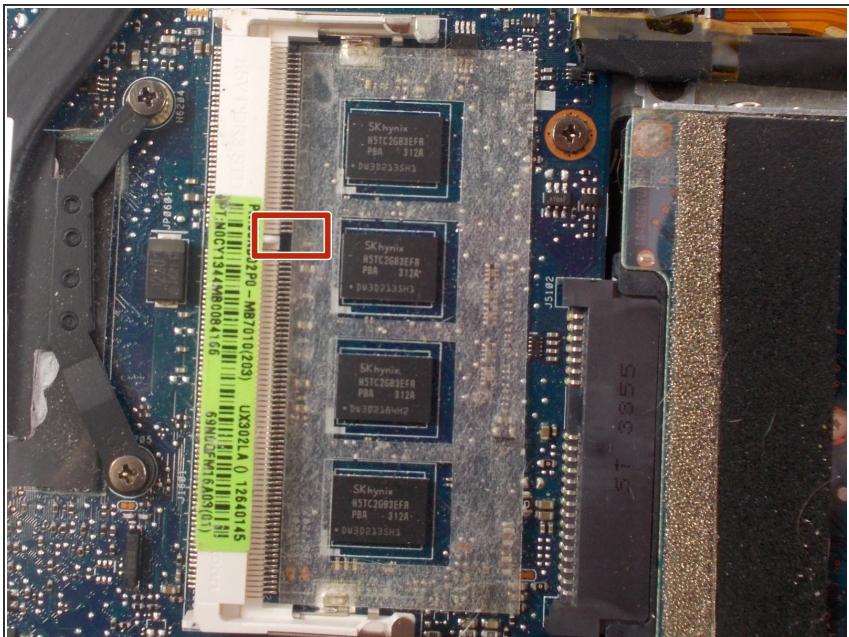

➡ To insert the new RAM, line up the hole on the RAM stick and slot.

➡ Next, push the RAM down gently. It should make a snap sound.

⚠ Do not use too much force as it can break the RAM.

To reassemble your device, follow these instructions in reverse order.