



# ASUS ZenBook UX302LA-BHI5T08 Solid State Drive Replacement

How to replace the ASUS ZenBook UX302LA-BHI5T08 solid state drive.

Written By: Joshua Letizia



## INTRODUCTION

This guide covers the basics of replacing the Solid State Drive (SSD) in the ASUS ZenBook UX302LA-BHI5T08 laptop. The SSD is an important part in terms of storage as it acts like a second functioning Hard Drive. The SSD deals with digitized information unlike the Hard Drive's mechanical storage capacity.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Cover




- Flip the laptop over so the model stickers face the ceiling.

## Step 2




- Remove eleven 7mm Phillips #00 screws that secure the back cover.
- Two screws are under the rubber pad.

## Step 3

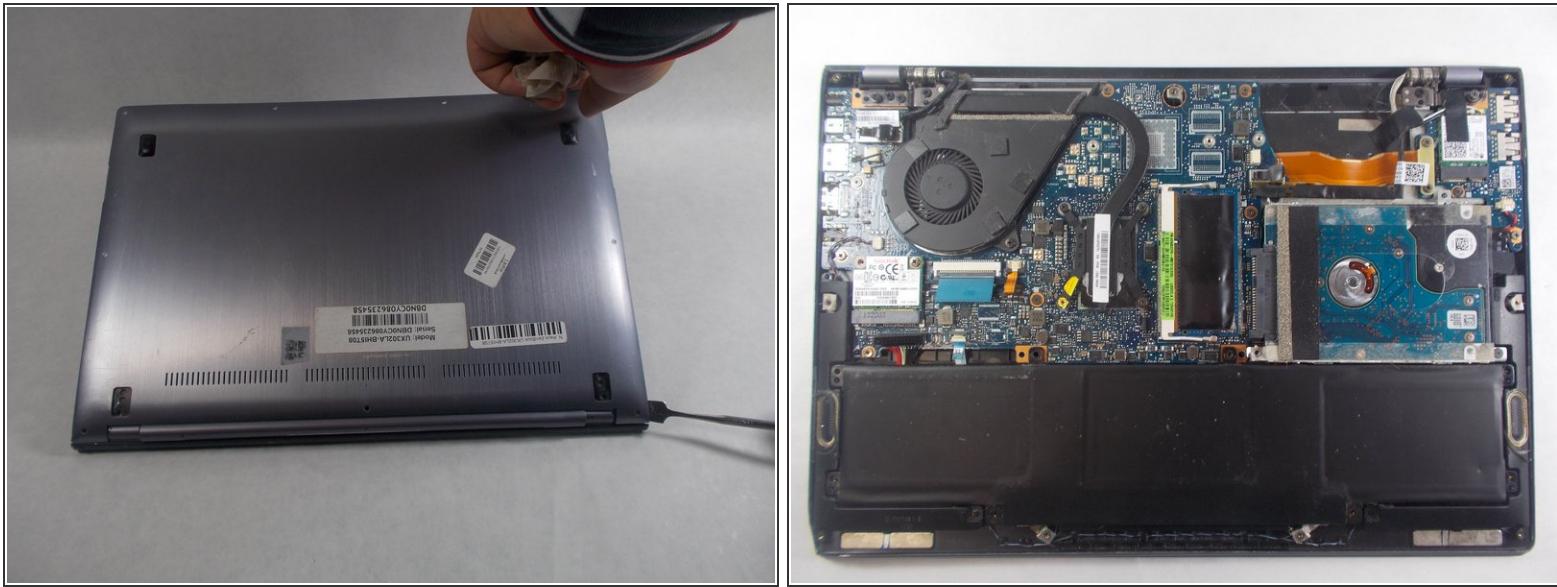

- Using a spudger, carefully remove the back cover.

## Step 4 — Battery

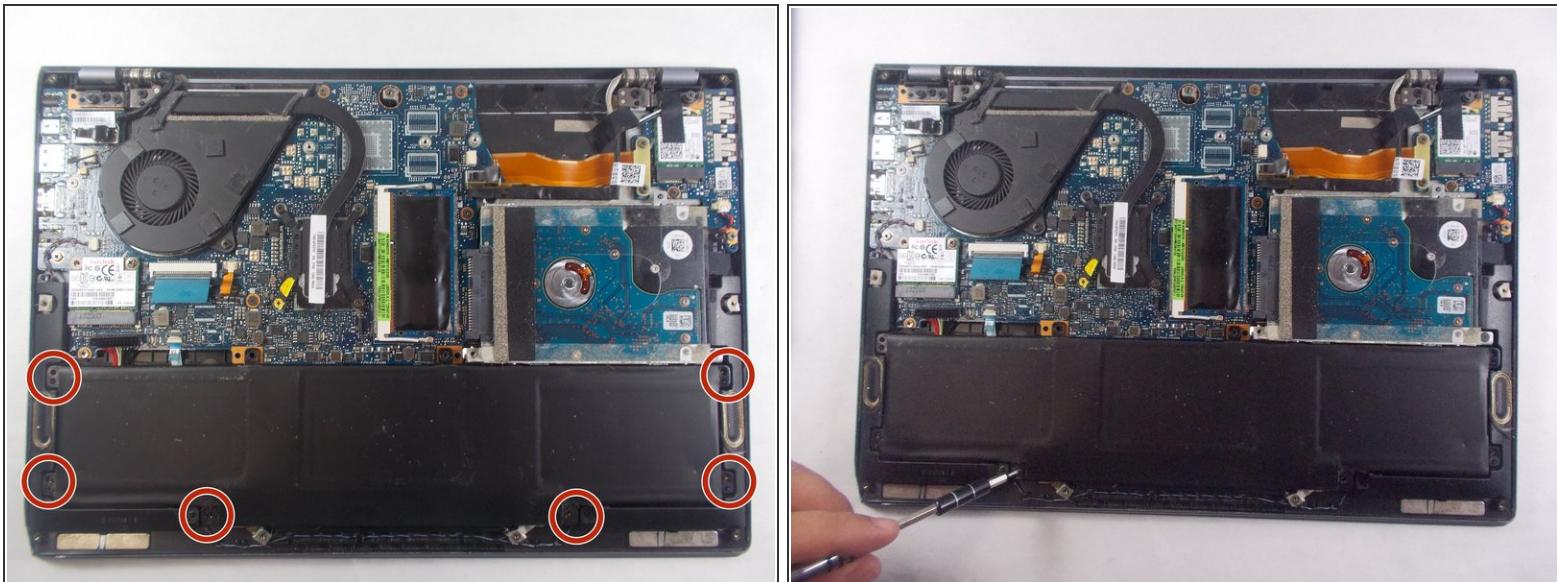

- Remove the six 3mm Phillips #00 screws holding the battery in place.

## Step 5



- Disconnect the battery wires from the motherboard by pulling on the black tab using a spudger or your hands.

## Step 6



- Carefully lift the battery up and out of the laptop.


## Step 7 — Solid State Drive



- Remove the two 3mm Phillips screws from the solid state drive.

*(i)* The SSD will rotate upwards.

## Step 8

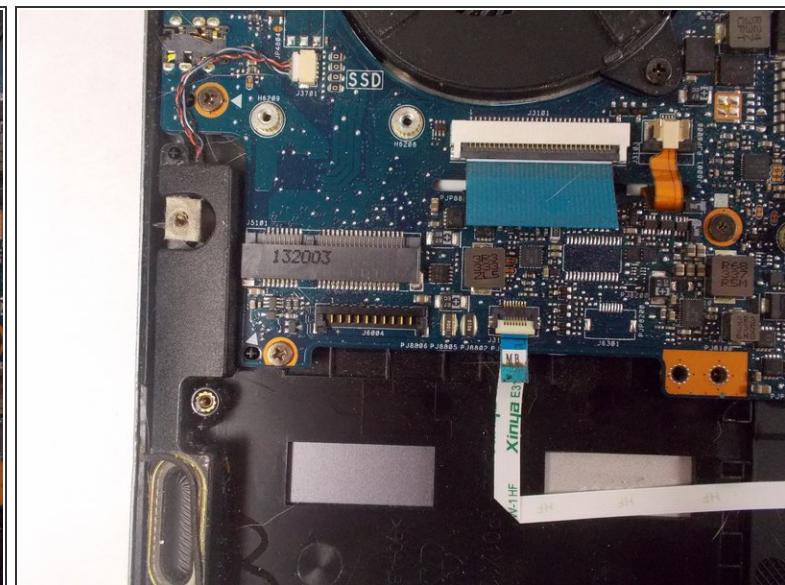

- Grip the SSD and pull gently away from the connection port to remove it.

To reassemble your device, follow these instructions in reverse order.