



ASUS ZenWatch Battery Replacement

Replace that failing battery in your ZenWatch

Written By: Wayne McClure



INTRODUCTION

A simple guide to replace that aging or dead battery in your ASUS ZenWatch.

TOOLS:

- [Magnetic Project Mat \(1\)](#)
- [Tweezers \(1\)](#)
- [Heavy-Duty Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

PARTS:


- [Asus ZenWatch Battery \(1\)](#)

Step 1 — Watch Strap Removal




- On the strap there is a knob. Sliding this knob towards the opposite side of the strap releases the tension on the spring bar, allowing you to pull the strap out..

Step 2 — Battery

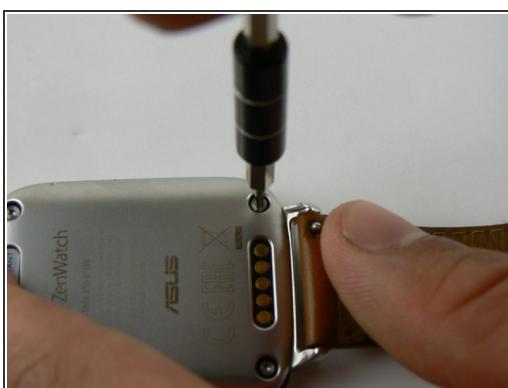

- Use the T5 Torx driver to remove the four screws on the case.
- *(i)* Use the magnetic pad to keep all your parts easily contained!
- The case will pry easily off with just gentle hand pressure


Step 3

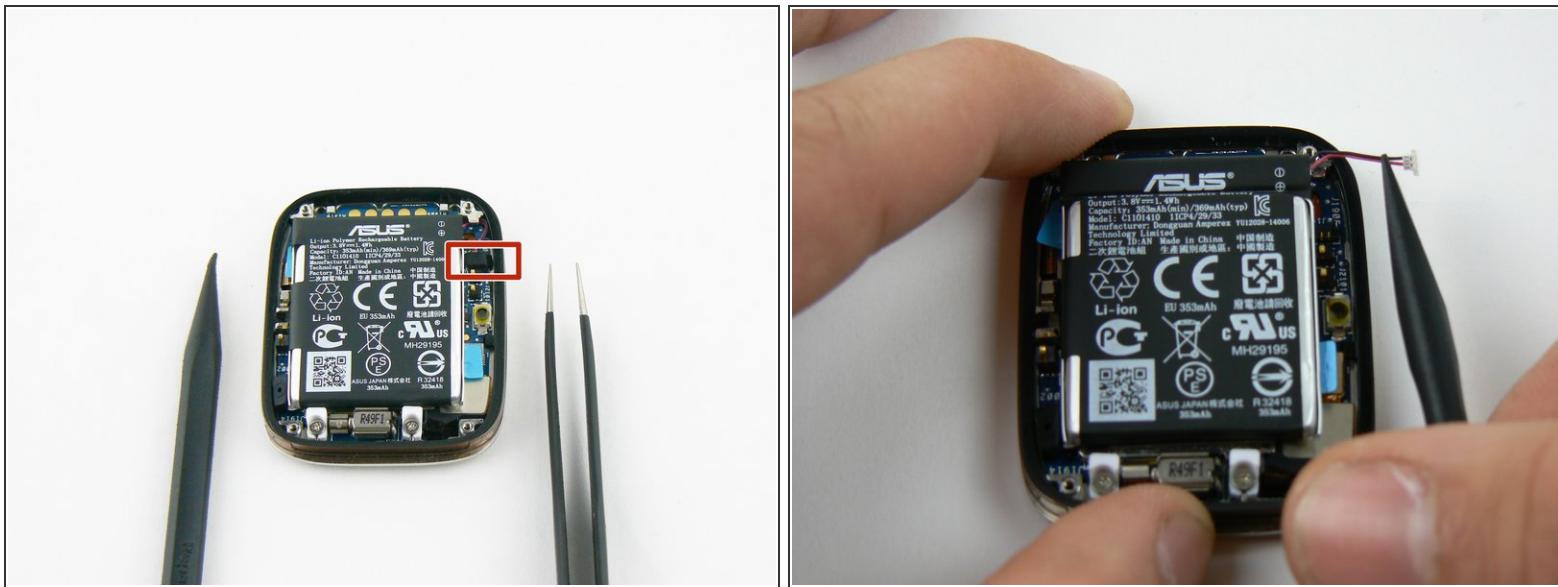

- Using the tweezers, gently remove the fabric protecting the battery connection.
- ⚠ Take care when removing the fabric. Too much force may damage the contact with the metal tweezers.

- Use the heavy duty spudger to gently push the contact towards the top of the case.

Step 4

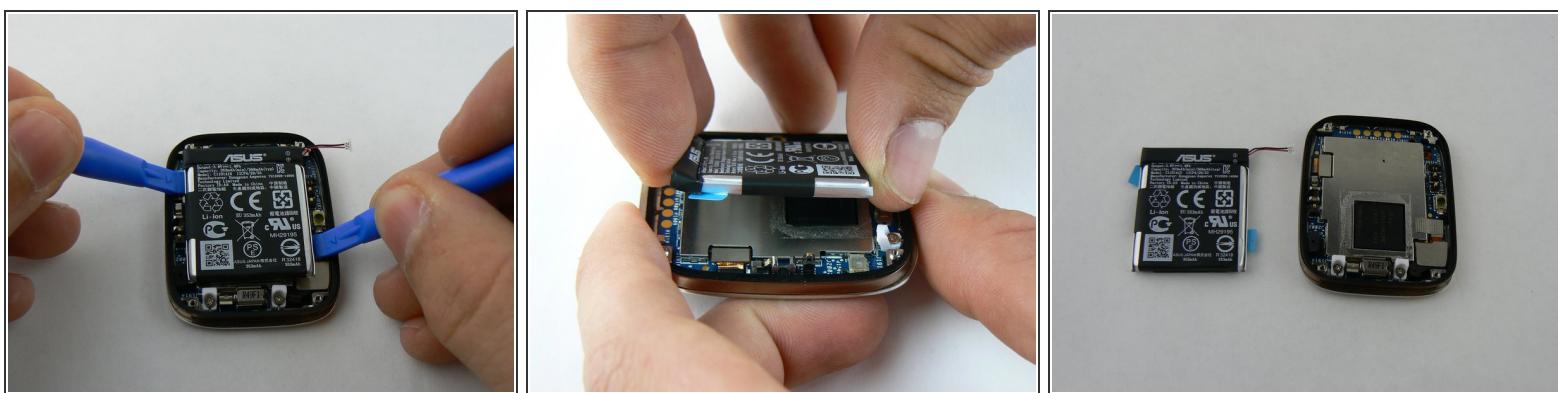

- Gently pry the battery up with the plastic pry tools

To reassemble your device, follow these instructions in reverse order.