



ASUS ZenWatch New Strap Installation

How to replace your ASUS ZenWatch strap with an aftermarket strap.

Written By: Steven Miller



 **TOOLS:**

- 1.5 mm Flathead Screwdriver (1)

 **PARTS:**

- 22mm Watch Strap (1)
- 22mm spring bars (2)

Step 1 — New Strap Installation



- Take new watch strap and springbars, insert one side into the hole on watch case.
- Using the 1.5mm flat head screwdriver compress the spring bar until you can slide the band in between the bars on the watch case.